



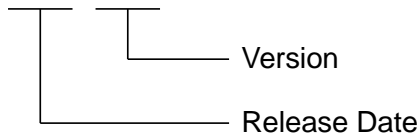
E Series Servo Drive

EtherCAT (CoE) Communications Command Manual

Revision History

The version of the guide is also indicated on the bottom of the front cover.

MD08UE01-2305_V1.3




Release Date	Version	Applicable Product	Revision Contents
May 15 th , 2023	1.3	E1 series EtherCAT drive E2 series EtherCAT drive	<ol style="list-style-type: none"> 1. Update manual's name. 2. Update section 2.2 Specifications. 3. Update section 3.2 Standardized device profile area. 4. Update section 3.2.2 Profile position mode (pp). 5. Update section 3.2.5 Profile velocity mode (pv). 6. Update section 3.2.9 Touch probe function. 7. Update section 3.3 Manufacturer specific profile area. 8. Update section 3.3.1 Absolute encoder initialization. 9. Update section 3.4 Object dictionary list.
Nov. 10 th , 2022	1.2	E1 series EtherCAT drive	<ol style="list-style-type: none"> 1. Add section 2.9.3, EtherCAT panel status display. 2. Revise section 3.2 · 60FDh definition table. 3. Delete related information about object 607Dh.
Nov. 20 th , 2020	1.1	E1 series EtherCAT drive	<ol style="list-style-type: none"> 1. Add a new instruction in 1.3 general precautions: For the instructions of Fieldbus installation and wiring, please refer to "ETG.1600 G (R) V1.0.2" issued by EtherCAT Technology Group. 2. Add information in 2.1: After Thunder is installed in a computer with Windows, a user can get the ESI file from the route (C:\HIWIN\doc\CoE). 3. Revise table 2.4.1. Move "Master initializes DC clock synchronization" from "PreOp to SafeOp" (PS) section to "Init to PreOp" (IP) section. 4. Change figure 2.9.1. 5. Add "0x603F Error Code mapping table" to table 3.2.1. 6. Revise below content in 3.2: Change the unit of 0x6071 from "-3000 ~ 3000" to "-32768 ~ 32767". Change the unit of 0x6072 from "0 ~ 3000" to "0 ~ 65535". Change the unit of 0x6077 from "-3000 ~ 3000" to "-32768 ~ 32767". Change the description of 0x6077 from "The actual torque of the motor. The value is only for reference." to "The value is given per thousand of rated

Release Date	Version	Applicable Product	Revision Contents
			torque. The value is only for referenece.”
Dec. 04 th , 2018	1.0	E1 series EtherCAT drive	First edition.

Related Documents

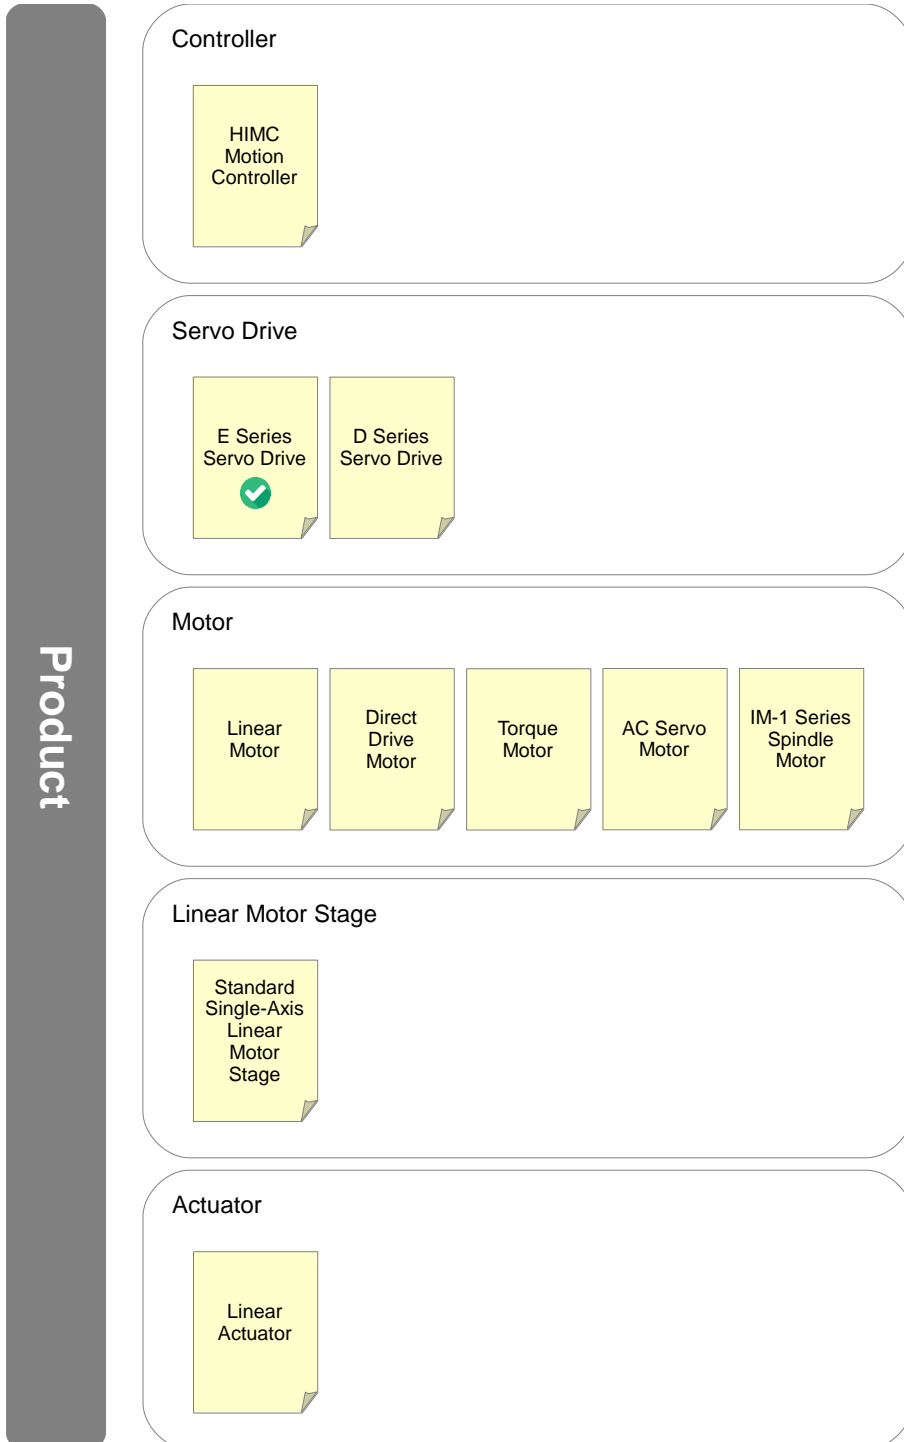The figure and table of the documents related to the product are shown below. Refer to these documents as required.



Product		Doc. Name	Doc. No.	Content	
Controller	HIMC Motion Controller	HIMC Installation Guide	MH07UE01-□□□□	Provides detailed information on installing and connecting HIMC motion controller.	
		HIMC iA Studio User Guide	MH01UE01-□□□□	Provides detailed information on the human machine interface operation of HIMC motion controller.	
		HIMC Modbus TCP User Guide	MH02UE01-□□□□	Provides detailed information on the way Modbus TCP communication protocol applied to HIMC motion controller.	
		HIMC HMPL User Guide	MH06UE01-□□□□	Provides detailed information on HMPL library of HIMC motion controller.	
		HIMC API Reference Guide	MH05UE01-□□□□	Provides detailed information on API library of HIMC motion controller.	
		HIOM Installation Guide	MH03UE01-□□□□	Provides detailed information on installing and connecting HIOM (HIWIN mega-ulink IO module).	
		ETA3 Installation Guide	MH09UE01-□□□□	Provides detailed information on installing and connecting ETA3 (HIMC remote module).	
Servo Drive	E Series Servo Drive	Technical Manuals	E1 Series Servo Drive User Manual	MD09UE01-□□□□	Provides detailed information on selecting, installing, connecting, setting, performing test run for, tuning, and monitoring E1 series servo drive.
			E2 Series Servo Drive User Manual	MD28UE01-□□□□	Provides detailed information on selecting, installing, connecting, setting, performing test run for, tuning, and monitoring E2 series servo drive.
			E Series Servo Drive Thunder Software Operation Manual	MD12UE01-□□□□	Provides detailed information on the human machine interface operation of E series servo drive.
			E Series Servo Drive Gantry Control System User Manual	MD22UE01-□□□□	Provides detailed information on the usage of E series servo drive gantry control system.
			E Series Servo Drive Electronic Cam Control System User Manual	MD27UE01-□□□□	Provides detailed information on the usage of E series servo drive electronic cam control system.
			E Series Servo Drive Multi-Motion Function User Manual	MD32UE01-□□□□	Provides detailed information on the usage of E series servo drive multi-motion function.
			MPI Library Reference Manual	MD19UE01-□□□□	Provides detailed information on MPI library of E series servo drive and D series servo drive.
			MPI Examples	MD18UE01-□□□□	Provides detailed information on MPI examples of E series servo drive and D series servo drive.
			API Library Reference Manual for Servo Drives	MD23UE01-□□□□	Provides detailed information on API library of E series servo drive and D series servo drive.
			PDL Examples for E Series Servo Drive	MD25UE01-□□□□	Provides detailed information on PDL examples of E series servo drive.
		Communication Manuals	E Series Servo Drive EtherCAT(CoE) Communications Command Manual	MD08UE01-□□□□	Provides detailed information on the way EtherCAT communication protocol applied to E series servo drive.
			E1 Series Servo Drive MECHATROLINK-III Communication Command Manual	MD24UE01-□□□□	Provides detailed information on the way MECHATROLINK-III communication protocol applied to E1 series servo drive.
			E1 Series Servo Drive PROFINET Communication Command Manual	MD02UE01-□□□□	Provides detailed information on the way PROFINET communication protocol applied to E1 series servo drive.

Product		Doc. Name	Doc. No.	Content	
		Application Manuals	E2 Series Servo Drive Replacement Guide	MD34UE01-□□□□	Provides detailed information on the way of replacing E1 series servo drive and D1 series servo drive with E2 series servo drive.
			Application Note E1 PROFINET Drive Complete Setup with Siemens TIA Portal	MD30UE01-□□□□	Provides detailed information on the operation of PLC software TIA Portal when E1 PROFINET drive is used with Siemens S7 series PLC.
			Application Note E1 MECHATROLINK-III Drive Complete Setup with YASKAWA MPE720	MD31UE01-□□□□	Provides detailed information on the operation of machine controller software MPE720 when E1 MECHATROLINK-III drive is used with YASKAWA MP3000 series machine controller.
			Function Blocks Application Manual E Series EtherCAT Drive with OMRON Sysmac Studio	MD35UE01-□□□□	Provides detailed information on the usage of application function blocks when E series EtherCAT drive is used with OMRON Sysmac Studio.
			Function Blocks Application Manual E Series EtherCAT Drive with KEYENCE KV STUDIO	MD36UE01-□□□□	Provides detailed information on the usage of application function blocks when E series EtherCAT drive is used with KEYENCE KV STUDIO.
Servo Drive	D Series Servo Drive	D1 Servo Drive User Manual	MD20UE01-□□□□	Provides detailed information on selecting, installing, connecting, setting, performing test run for, tuning, and monitoring D1 servo drive.	
		D2 Series Servo Drive User Manual	MD07UE01-□□□□	Provides detailed information on selecting, installing, connecting, setting, performing test run for, tuning, and monitoring D2T servo drive.	
		D2T-LM Series Servo Drive User Manual	MD11UE01-□□□□	Provides detailed information on selecting, installing, connecting, setting, performing test run for, tuning, and monitoring D2T-LM servo drive.	
		MPI Library Reference Manual	MD19UE01-□□□□	Provides detailed information on MPI library of E series servo drive and D series servo drive.	
		MPI Examples	MD18UE01-□□□□	Provides detailed information on MPI examples of E series servo drive and D series servo drive.	
		API Library Reference Manual for Servo Drives	MD23UE01-□□□□	Provides detailed information on API library of E series servo drive and D series servo drive.	
		PDL Examples for D-series Drives User Manual	MD13UE01-□□□□	Provides detailed information on PDL examples of D series servo drive.	
Motor	Linear Motor	Linear Motor User Manual	MP99UE01-□□□□	Provides detailed information on selecting, installing, and connecting linear motor.	
	Direct Drive Motor	DMN Series Direct Drive Motor User Manual	MR01UE01-□□□□	Provides detailed information on selecting, installing, and connecting DMN series direct drive motor.	
		DMT Series Direct Drive Motor User Manual	MR03UE01-□□□□	Provides detailed information on selecting, installing, and connecting DMT series direct drive motor.	
		DMY Series Direct Drive Motor User Manual	MR04UE01-□□□□	Provides detailed information on selecting, installing, and connecting DMY series direct drive motor.	
		DMS Series Direct Drive Motor User Manual	MR05UE01-□□□□	Provides detailed information on selecting, installing, and connecting DMS series direct drive motor.	
		DMR Series Direct Drive Motor User Manual	MR06UE01-□□□□	Provides detailed information on selecting, installing, and connecting DMR series direct drive motor.	

Product		Doc. Name	Doc. No.	Content
	Torque Motor	Torque Motor User Manual	MW99UE01-□□□□	Provides detailed information on selecting, installing, and connecting torque motor.
	AC Servo Motor	AC Servo Motor User Manual	MC03UE01-□□□□	Provides detailed information on selecting, installing, and connecting AC servo motor.
	IM-1 Series Spindle Motor	IM-1 Series Spindle Motor User Manual	MS01UE01-□□□□	Provides detailed information on selecting and installing IM-1 series spindle motor.
Linear Motor Stage	Standard Single-Axis Linear Motor Stage	Standard Single-Axis Linear Motor Stage User Manual	MM06UE01-□□□□	Provides detailed information on selecting, installing, and connecting standard single-axis linear motor stage.
Actuator	Linear Actuator	Linear Actuator User Manual	MA99UE01-□□□□	Provides detailed information on selecting, installing, and connecting linear actuator.

Table of Contents

1.	About this manual	1-1
1.1	Preface.....	1-2
1.2	Trademark.....	1-2
1.3	General precautions	1-3
1.4	Safety precautions	1-4
2.	EtherCAT communication	2-1
2.1	System configuration	2-2
2.2	Specifications.....	2-2
2.3	EtherCAT frame structure	2-4
2.3.1	EtherCAT commands	2-5
2.3.2	WKC (Working Counter)	2-6
2.4	EtherCAT State Machine	2-7
2.5	Synchronous mode.....	2-10
2.5.1	DC	2-10
2.5.2	FreeRun	2-11
2.6	SDO abort code	2-12
2.7	Emergency message	2-12
2.8	PDO (Process Data Object)	2-13
2.8.1	PDO mapping object.....	2-13
2.8.2	PDO assign object	2-14
2.9	EtherCAT display and setting area	2-15
2.9.1	Node address setting	2-15
2.9.2	EtherCAT indicators	2-16
2.9.3	EtherCAT panel status display.....	2-17
2.10	EtherCAT related errors.....	2-18
3.	Object dictionary	3-1
3.1	Communication profile area.....	3-2
3.1.1	Default PDO mapping	3-7
3.1.2	Mapping objects to PDO	3-9
3.1.3	PDO data exchange timing	3-11
3.2	Standardized device profile area	3-12
3.2.1	PDS (Power Drive System).....	3-20
3.2.2	Profile position mode (pp)	3-23
3.2.3	Cyclic synchronous position mode (csp)	3-30
3.2.4	Homing mode (hm)	3-32

3.2.5	Profile velocity mode (pv).....	3-37
3.2.6	Cyclic synchronous velocity mode (csv)	3-38
3.2.7	Profile torque mode (tq)	3-40
3.2.8	Cyclic synchronous torque mode (cst).....	3-42
3.2.9	Touch probe function.....	3-43
3.3	Manufacturer specific profile area	3-46
3.3.1	Absolute encoder initialization	3-49
3.4	Object dictionary list.....	3-50

(This page is intentionally left blank.)

1. About this manual

1.	About this manual	1-1
1.1	Preface.....	1-2
1.2	Trademark.....	1-2
1.3	General precautions	1-3
1.4	Safety precautions	1-4

1.1 Preface

This manual introduces communication specification and CiA 402 drive profile applied to EtherCAT (Ethernet for Control Automation Technology) drive. As for basic specifications, wiring and settings of E series servo drive, please refer to “E1 Series Servo Drive User Manual” and “E2 Series Servo Drive User Manual”.

1.2 Trademark

EtherCAT ® is a registered trademark and a patent technology, licensed by Beckhoff Automation GmbH, Germany.





1.3 General precautions


This manual is for E series EtherCAT drive. Before using the product, please carefully read through this manual. HIWIN Mikrosystem (HIWIN) is not responsible for any damage, accident or injury caused by failure in following the installation instructions and operating instructions stated in this manual.

- Do not disassemble or modify the product. The design of the product has been verified by structural calculation, computer simulation and actual testing. HIWIN is not responsible for any damage, accident or injury caused by disassembly or modification done by users.
- Before installing or using the product, ensure there is no damage on its appearance. If any damage is found after inspection, please contact HIWIN or local distributors.
- Carefully read through the specification noted on product label or technical document. Install the product according to its specification and installation instructions stated in this manual.
- Ensure the product is used with power supply specified on product label or in product requirement. HIWIN is not responsible for any damage, accident or injury caused by incorrect power supply.
- Ensure the product is used with rated load. HIWIN is not responsible for any damage, accident or injury caused by improper usage.
- Do not subject the product to shock. HIWIN is not responsible for any damage, accident or injury caused by improper usage.
- If an error occurs in the drive, please refer to “E1 Series Servo Drive User Manual” and “E2 Series Servo Drive User Manual” and follow the instructions for troubleshooting. After the error is eliminated, power on the drive again.
- Do not repair the product by yourself when it malfunctions. The product can only be repaired by qualified technician from HIWIN.
- For the instructions of Fieldbus installation and wiring, please refer to “ETG.1600 G (R) V1.0.2” issued by “EtherCAT Technology Group”.

1.4 Safety precautions



- Carefully read through this manual before installation, transportation, maintenance and examination. Ensure the product is correctly used.
- Carefully read through electromagnetic (EM) information, safety information and related precautions before usage.
- Safety precautions in this manual are classified into “Warning”, “Attention”, “Prohibited” and “Required”.

Signal Word	Description
 Warning	It indicates if the precaution is not observed, it is likely to cause property loss, serious injury or death.
 Attention	It indicates the precaution must be observed.
 Prohibited	It indicates prohibited activity.
 Required	It indicates mandatory activity.


 **DANGER**

- ◆ Ensure the drive is correctly grounded. Use PE bar in the control cabinet as reference potential. Perform low-ohmic grounding for safety reason.
- ◆ Do not remove motor power cable from the drive when it is still power-on, or there is a risk of electric shock or damage to the contact.
- ◆ Do not touch the live part (contact or bolt) within 5 minutes after disconnecting the drive from power supply. For your own safety, we suggest measuring the voltage in the intermediate circuit and wait until it falls to 40Vdc before touching the live part.


■ Operation

 <p>Warning</p>	<ul style="list-style-type: none"> ◆ Do not touch the terminals and the internal part of the product when power on, or it may cause electric shock. ◆ Do not touch the terminals and internal part of the product within 10 minutes after power off, or the residual voltage may cause electric shock. ◆ Do not modify wiring when power on, or it may cause electric shock. ◆ Do not damage, apply excessive force to, place any heavy object on the cable or put the cable between two objects, or it may cause electric shock or fire.
 <p>Attention</p>	<ul style="list-style-type: none"> ◆ Do not use the product in location which is subject to humidity, corrosive materials, flammable gas or flammable materials.


■ Storage

 <p>Prohibited</p>	<ul style="list-style-type: none"> ◆ Do not store the product in location which is subject to water, water drop, direct sunlight, harmful gas or liquid.
--	---


■ Transportation

 <p>Attention</p>	<ul style="list-style-type: none"> ◆ Carefully move the product to avoid damage. ◆ Do not apply excessive force to the product. ◆ Do not stack the products to avoid collapse.
---	---


■ Installation site

 <p>Required</p>	<ul style="list-style-type: none"> ◆ Do not install the product in location with high ambient temperature and high humidity or location which is subject to dust, iron powder or cutting powder. ◆ Install the product in location with ambient temperature stated in the manual. Use cooling fan if the ambient temperature is too high. ◆ Do not install the product in location which is subject to direct sunlight. ◆ The product is not drip-proof or waterproof, so do not install or operate the product outdoor or in location which is subject to water or liquid. ◆ Install the product in location with less vibration. ◆ Motor generates heat when running for a period of time. Use cooling fan or disable the motor when it is not in use, so the ambient temperature will not exceed product specification.
--	--



■ Installation

 Attention	<ul style="list-style-type: none">◆ Do not place heavy object on the product, or it may cause injury.◆ Prevent any foreign matter from entering the product, or it may cause fire.◆ Install the product in the specified orientation, or it may cause fire.◆ Avoid strong shock to the product, or it may cause malfunction or injury.◆ When installing the product, take the product weight into consideration. Improper installation may cause damage.◆ Install the product on noncombustible objects, such as metal to avoid fire.
--	--


■ Wiring

 Attention	<ul style="list-style-type: none">◆ Ensure wiring is correctly performed, or it may cause malfunction or burn. There is a risk of injury or fire.
--	---

■ Operation and transportation

 Attention	<ul style="list-style-type: none">◆ Use power supply specified in product specification, or it may cause injury or fire.◆ The product may suddenly start to operate after power supply recovers. Please do not get too close to the product.
 Required	<ul style="list-style-type: none">◆ Set external wiring for emergency stop to stop the motor at any time.

■ Maintenance

 Prohibited	<ul style="list-style-type: none">◆ Do not disassemble or modify the product.◆ Do not repair the product by yourself when it malfunctions, please contact HIWIN for help.
---	--

2. EtherCAT communication

2.	EtherCAT communication	2-1
2.1	System configuration	2-2
2.2	Specifications.....	2-2
2.3	EtherCAT frame structure	2-4
2.3.1	EtherCAT commands	2-5
2.3.2	WKC (Working Counter)	2-6
2.4	EtherCAT State Machine	2-7
2.5	Synchronous mode	2-10
2.5.1	DC	2-10
2.5.2	FreeRun	2-11
2.6	SDO abort code	2-12
2.7	Emergency message	2-12
2.8	PDO (Process Data Object)	2-13
2.8.1	PDO mapping object.....	2-13
2.8.2	PDO assign object	2-14
2.9	EtherCAT display and setting area	2-15
2.9.1	Node address setting	2-15
2.9.2	EtherCAT indicators	2-16
2.9.3	EtherCAT panel status display	2-17
2.10	EtherCAT related errors	2-18

2.1 System configuration

The connection type of EtherCAT is a network system that connects a master and multiple slaves. The number of the connected slaves depends on the factors such as master's performance, communication cycle, etc. The master generates EtherCAT Network Information (ENI) by a configuration tool based on EtherCAT Slave Information (ESI). The ESI file, which provides the peculiar information of the slaves, is an XML-format file given by HIWIN. After Thunder is installed in a computer with Windows, a user can get the ESI file from the route (C:\HIWIN\doc\CoE).

2.2 Specifications

Table 2.2.1

Item	Specification
Physical layer	100BASE-TX (IEEE 802.3)
Baud	100Mbps
Connecting cable	Ethernet Category 5 or higher (A twisted-pair cable with double, aluminum tape and braided shielding is recommended.)
Cable length	Maximum 100m between nodes
Connectors	RJ45 x2 CN9 IN: EtherCAT input CN9 OUT: EtherCAT output
EtherCAT indicators	L/A IN x1 L/A OUT x1 RUN x1 ERR x1
Station alias (ID)	Setting 1: 8 bits from 2-digit rotary switch at front panel (Range: 0~255) Setting 2: value saved in EEPROM (Range:0~65535)
Device profile	CoE (CANopen over EtherCAT)
SyncManager	4
FMMU	3
CiA 402 drive profile	Profile position mode Profile velocity mode Profile torque mode

Item	Specification
	Homing mode Cyclic synchronous position mode Cyclic synchronous velocity mode Cyclic synchronous torque mode Touch probe function Torque limit function
Synchronous mode	DC Sync0 FreeRun
Cycle time	Minimum 250 μ s (in increments of 250 μ s)
Communication object	SDO (service data object) PDO (process data object)
SDO message	SDO request, SDO response, emergency message
PDO mapping	Configurable
Maximum number of PDO mapping objects	RxPDO: 8 TxPDO: 8
Maximum PDO data length	RxPDO: 32 Bytes TxPDO: 32 Bytes

2.3 EtherCAT frame structure

EtherCAT frames (Ethernet frames with EtherType 0x88A4, see Figure 2.3.1) are processed by EtherCAT Slave Controller (ESC) on the fly. EtherCAT datagrams are processed before the complete frame is received. If frame checksum is invalid, the slave will set the data invalid for local application.

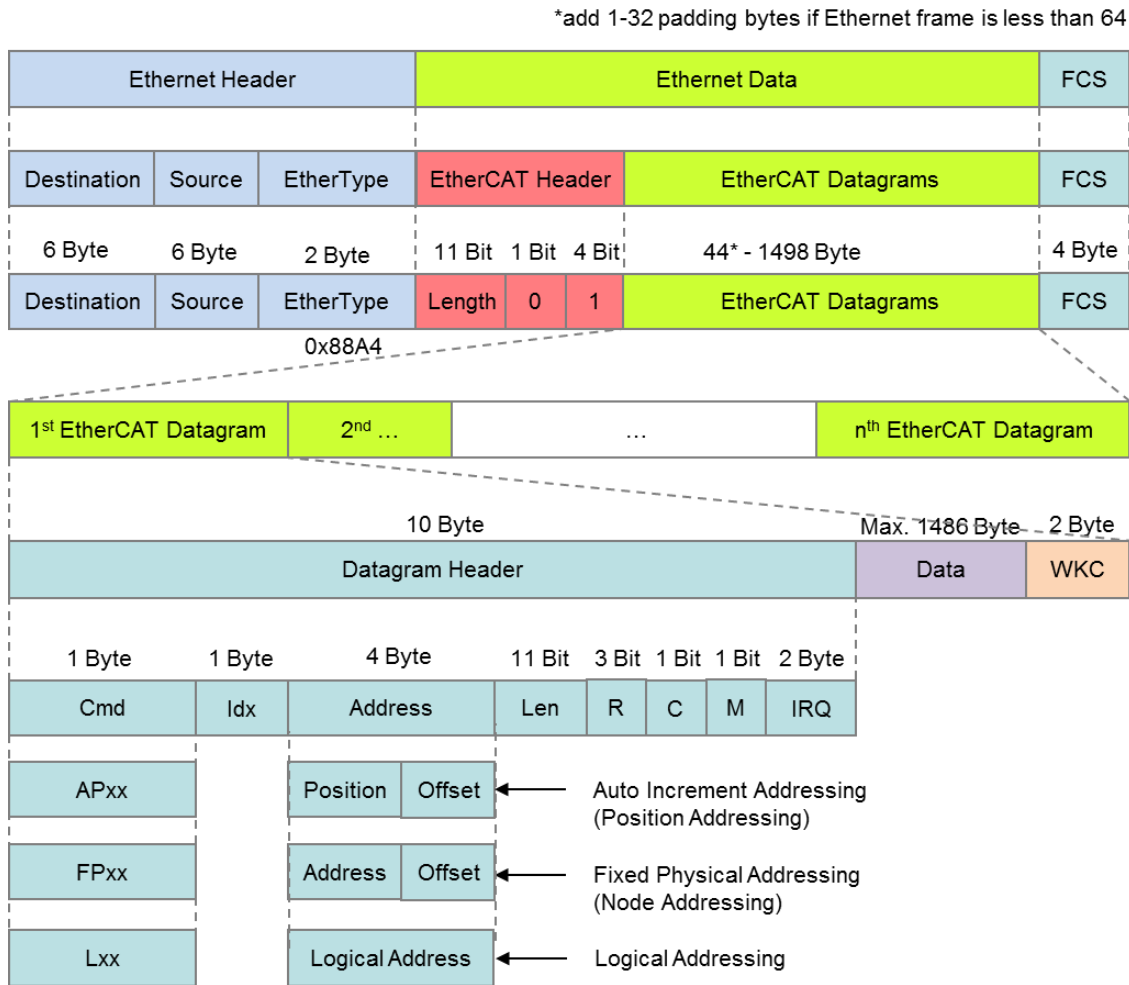


Figure 2.3.1

2.3.1 EtherCAT commands

Table 2.3.1.1

CMD	Abbr.	Name	Description
0	NOP	No operation	Slave ignores command.
1	APRD	Auto increment read	Slave increases address. Slave puts read data into EtherCAT datagram if received address is zero.
2	APWR	Auto increment write	Slave increases address. Slave writes data into memory location if received address is zero.
3	APRW	Auto increment read write	Slave increases address. Slave puts read data into EtherCAT datagram and writes data into the same memory location if received address is zero.
4	FPRD	Configured address read	Slave puts read data into EtherCAT datagram if address matches one of its configured addresses.
5	FPWR	Configured address write	Slave writes data into memory location if address matches one of its configured addresses.
6	FPRW	Configured address read write	Slave puts read data into EtherCAT datagram and writes data into the same memory location if address matches one of its configured addresses.
7	BRD	Broadcast read	All slaves put logical OR of data of memory area and data of EtherCAT datagram into EtherCAT datagram. All slaves increase position field.
8	BWR	Broadcast write	All slaves write data into memory location. All slaves increase position field.
9	BRW	Broadcast read write	All slaves put logical OR of data of memory area and data of EtherCAT datagram into EtherCAT datagram, and write data into memory location. All slaves increase position field. BRW is typically not used.
10	LRD	Logical memory read	Slave puts read data into EtherCAT datagram if received address matches one of the configured FMMU areas for reading.
11	LWR	Logical memory write	Slaves writes data to into memory location if received address matches one of the configured FMMU areas for writing.
12	LRW	Logical memory read write	Slave puts read data into EtherCAT datagram if received address matches one of the configured FMMU areas for reading. Slaves writes data into memory location if received address matches one of the configured FMMU areas for writing.
13	ARMW	Auto increment read multiple write	Slave increases address. Slave puts read data into EtherCAT datagram if received address is zero, otherwise slave writes the data into memory location.
14	FRMW	Configured address read multiple write	Slave puts read data into EtherCAT datagram if address matches one of its configured addresses, otherwise slave writes the data into memory location.

2.3.2 WKC (Working Counter)

Working Counter (WKC) is a 16-bit field placed at the end of each EtherCAT datagram. The addressed slave increases WKC based on Table 2.3.2.1 for the master to check if the number of nodes of the corresponding EtherCAT PDU is in line with expectations.

Table 2.3.2.1

Command	Data type	Increment
Read	Fail	0
	Succeed	+1
Write	Fail	0
	Succeed	+1
Read write	Fail	0
	Read succeed	+1
	Write succeed	+2
	Read write succeed	+3

2.4 EtherCAT State Machine

EtherCAT State Machine (ESM) is responsible for the coordination of the applications for master and slaves at start up and during operation. State changes are typically initiated by the requests of the master. They are acknowledged by the local application after the associated operations have been executed. Unsolicited state changes of the local application are also possible.

E series servo drive supports the following four states.

- Init
- Pre-Operational
- Safe-Operational
- Operational

The states and the allowed state changes are shown in Figure 2.4.1.

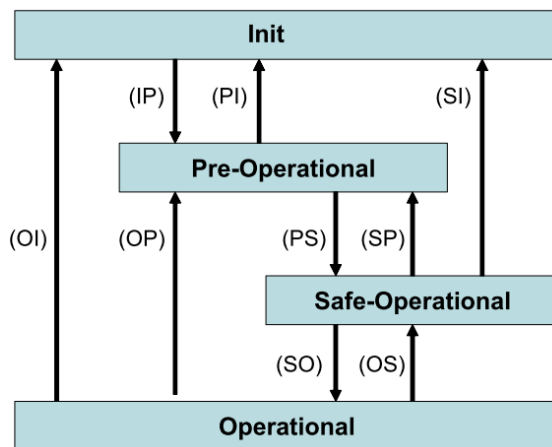


Figure 2.4.1

Note: Not all state changes are possible. For example, the transition from 'Init' to 'Operational' requires the following sequence: Init → Pre-Operational → Save-Operational → Operational.

Table 2.4.1

State / State change	Description
Init	No communication on Application Layer (AL) Master accesses to Data Link (DL)-Information registers
Init to PreOp (IP)	Master configures registers - DL address register - SyncManager channels for Mailbox communication Master initializes DC clock synchronization Master requests 'Pre-Operational' state - Master sets AL Control register Wait for AL Status register confirmation
Pre-Operational (PreOp)	Mailbox communication on AL No Process Data communication
PreOp to SafeOp (PS)	Master configures parameters via Mailbox - e.g., Process Data Mapping Master configures DL Register - SyncManager channels for Process Data communication - FMMU channels Master requests 'Safe-Operational' state Wait for AL Status register confirmation
Safe-Operational (SafeOp)	Mailbox communication on AL Process Data communication (Only Inputs are valid) Drive remains in Safe state (Outputs are blocked)
SafeOp to Op (SO)	Master sends valid Outputs Master requests 'Operational' state (AL Control / Status) Wait for AL Status register confirmation
Operational (Op)	Inputs and Outputs are valid

Table 2.4.2

ESM state	Communication operation		
	send / receive SDO (Mailbox)	TxPDO	RxPDO
Init	-	-	-
PreOp	0	-	-
SafeOp	0	0	-
Op	0	0	0

Table 2.4.3 shows the relationship between PDS (Power Drive System) and ESM states.

Table 2.4.3

PDS \ ESM	Init	PreOp	SafeOp	Op
Not ready to switch on	0	-	-	0
Switch on disabled	0	0	0	0
Ready to switch on	-	0	0	0
Switched on	-	0	0	0
Operation enabled	-	0	0	0
Fault reaction active	0	0	0	0
Fault	0	0	0	0

Note:

1. When ESM state receives a transition command from PreOp, SafeOp and Op to Init, PDS state changes to Switched on disabled.
2. When PDS is at Operation enabled state but ESM changes to other states except Op, an error occurs and PDS state changes to Fault.
3. Change of PDS state has no effect on ESM state.

2.5 Synchronous mode

There are two types of synchronous mode, DC and FreeRun.

2.5.1 DC

The synchronization of EtherCAT communication is based on DC. The local cycle and the servo process of the drive are triggered by Sync0 event.

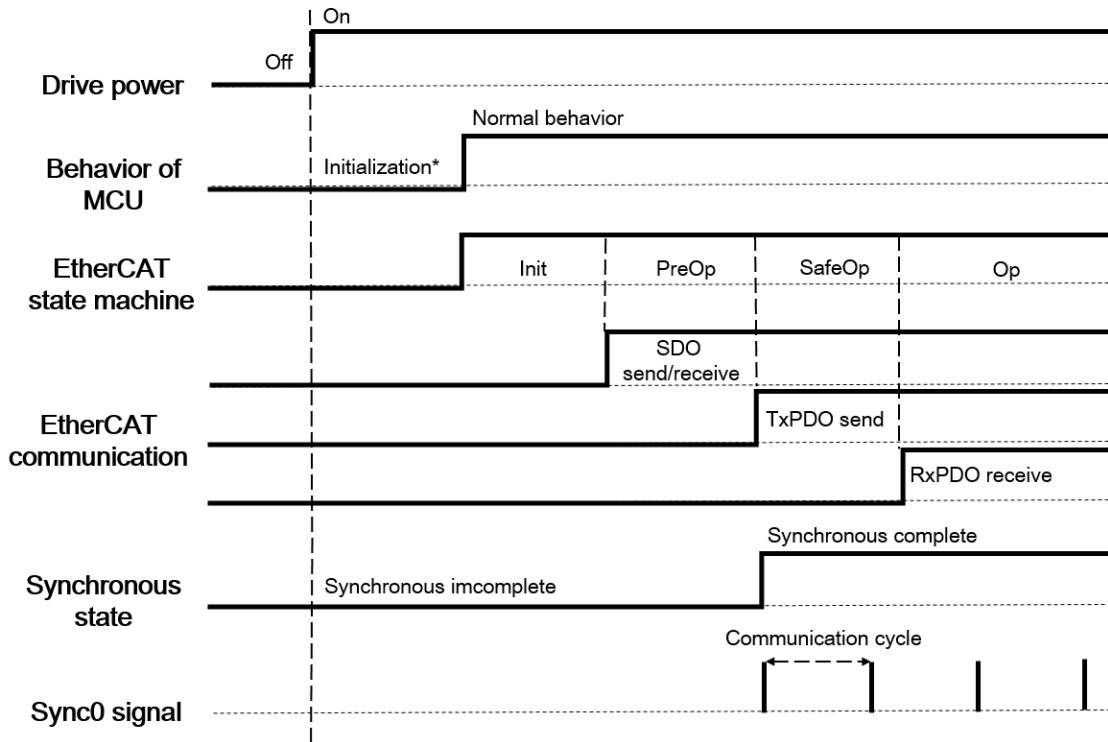


Figure 2.5.1.1

2.5.2 FreeRun

FreeRun is started by the local timer interrupt of the drive. The local cycle runs independently of the communication cycle and the master cycle.

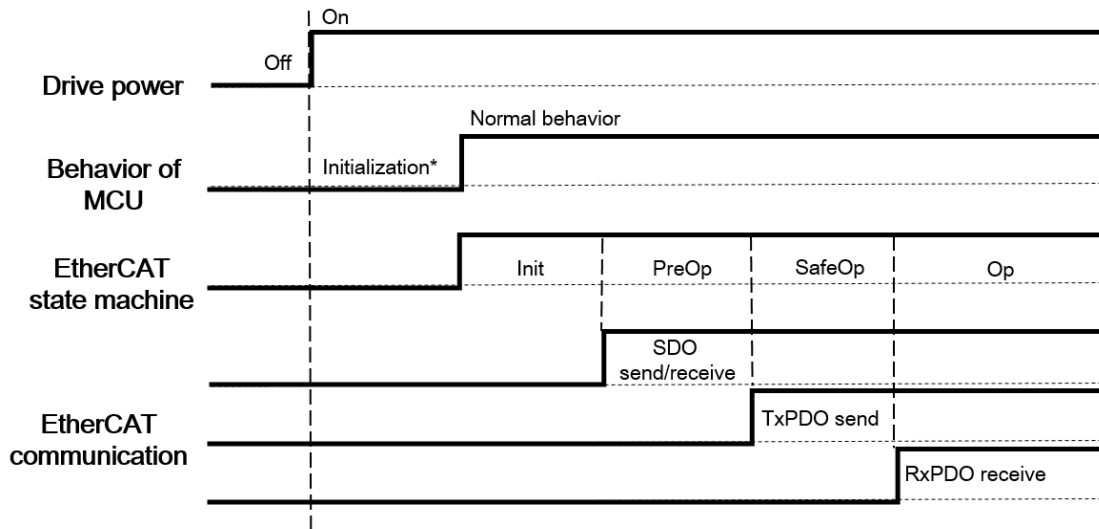


Figure 2.5.2.1

Note: The PDO transmission interval should not be less than 250 μs.

2.6 SDO abort code

When SDO communication error occurs, SDO abort code is returned. The supported SDO abort codes are listed in Table 2.6.1.

Table 2.6.1

Value	Description
06010000h	Unsupported access to an object
06010002h	Attempt to write to a read-only object
06020000h	The object does not exist in the object dictionary
06040042h	Number and length of the objects to be mapped would exceed PDO length
06090030h	Value range of parameter exceeded (only for write access)

2.7 Emergency message

When an error occurs, a slave notifies the master of the emergency message through the mailbox communication. An emergency message consists of 8 Bytes of data, as Table 2.7.1 shows.

Table 2.7.1

Byte	0	1	2	3	4	5	6	7
Description	Error code (603Fh) (L) (H)		Error register (1001h)	Reserved				

The validity or the invalidity of emergency message transmission can be set via 10F3h (diagnosis history). The default is validity.

Error code: the same value as 603Fh (error code)

Error register: the same value as the one in 1001h (error register)

2.8 PDO (Process Data Object)

The PDOs are used to transfer data during cyclic communication in realtime. RxPDOs receive data from the master. TxPDOs send status from the drive to the master. Objects updated by PDO are not updated by SDO.

2.8.1 PDO mapping object

Before using PDO communication, application objects should be mapped to the PDO mapping object. Each PDO mapping object can store up to eight application objects, and the maximum length of the PDO mapping object is 32 Bytes. In the object dictionary, index 1600h to 1603h are for RxPDOs, and index 1A00h to 1A03h are for TxPDOs.

An example of PDO mappings is shown in Figure 2.8.1.1. Three application objects (Obj A, Obj C and Obj F) are mapped to the PDO mapping object 1600h. Please refer to Section 3.1.1 for the default of each PDO mapping object.

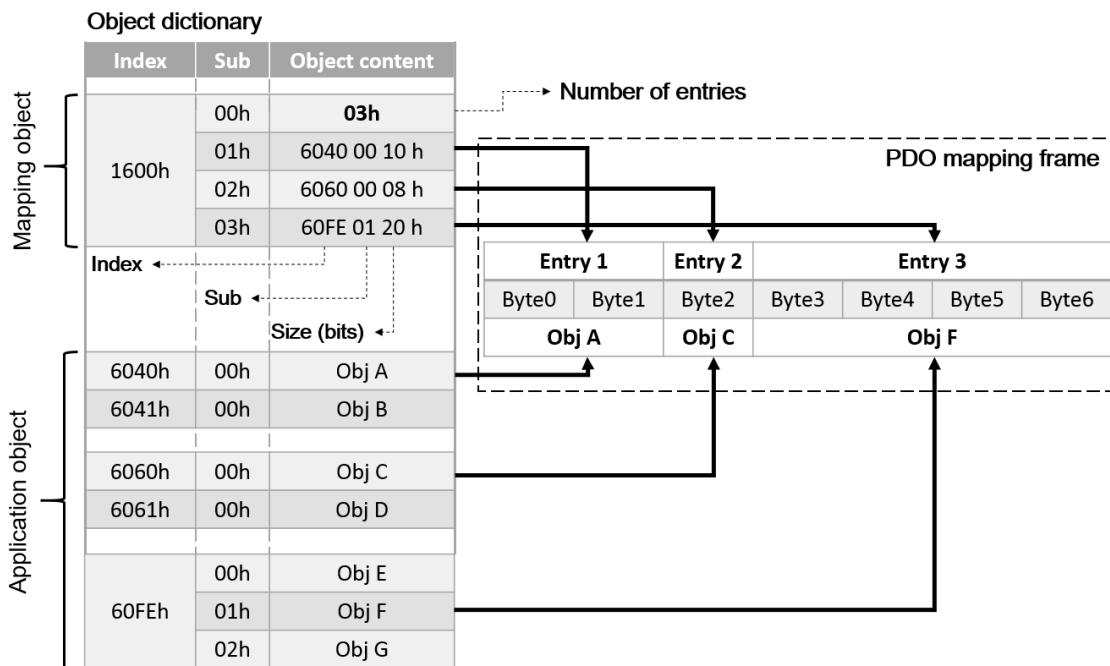


Figure 2.8.1.1

2.8.2 PDO assign object

Besides PDO mappings described above, it is also necessary to assign PDO mapping table in SyncManager. SyncManager PDO assignment objects describe the relationship between PDO mapping tables and SyncManagers.

In E series servo drive, 1C12h for RxPDO (SyncManager 2) and 1C13h for TxPDO (SyncManager 3) are set to be SyncManager assign objects. The maximum number of mapping objects can be mapped to an assign object is one. Please refer to Section 3.1.2 for the complete procedure of setting PDO mapping.

An example of SyncManager PDO assignment is shown in Figure 2.8.2.1. 1C12h is mapped to the assign object 1600h, which means the first set of the application objects will be used for RxPDO communication.

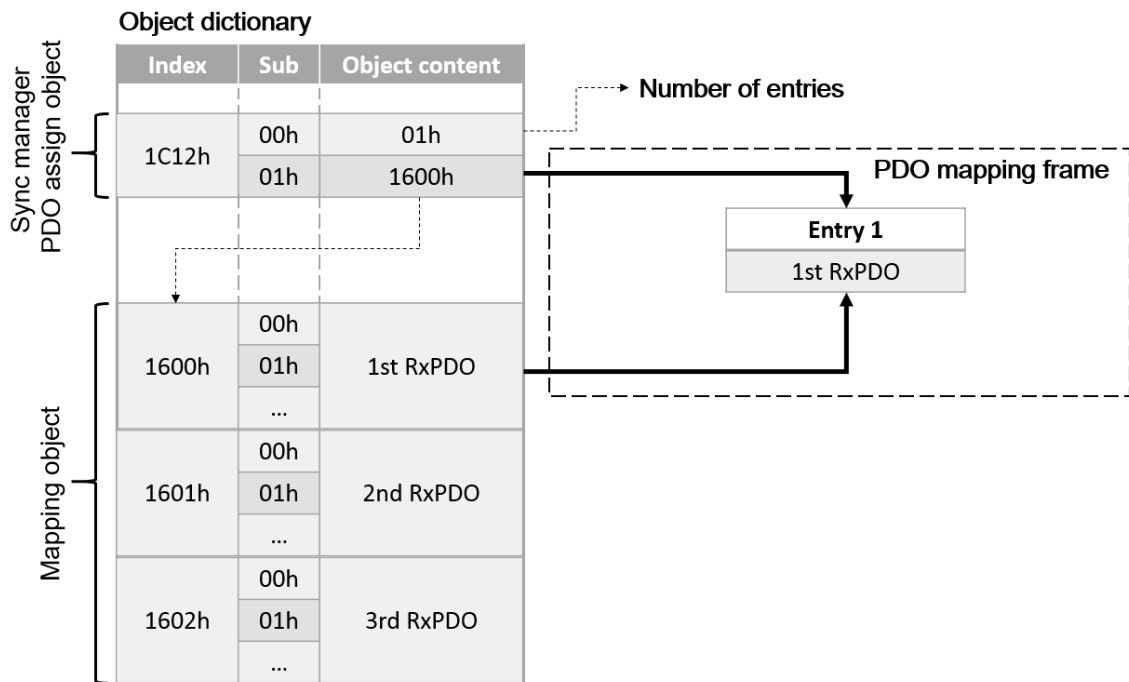


Figure 2.8.2.1

2.9 EtherCAT display and setting area

Figure 2.9.1 shows the EtherCAT display and setting area of E series servo drive.

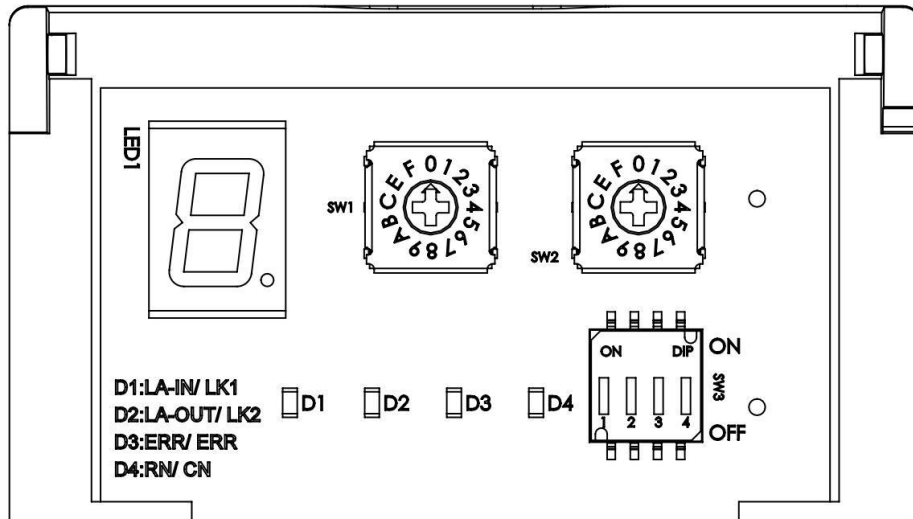


Figure 2.9.1

2.9.1 Node address setting

When communication starts, the master detect the slaves through auto-increment addressing. The slaves are accessed by the master according to the connection order (physical position). That being said, users can define station aliases to enable other network topologies.

The rotary switches are used to set the node address (station alias). The station alias is a unique ID for the master to specify the slave.

Note: If the station number of the rotary switches are not set, please finish the corresponding settings to the controller according to the serial connection order of the servo drive.

- Station Alias Register (0012h)

The station alias is set in the ESC Configured Station Alias register (0012h) when power supply is on. The value of the register can be read as follows:

$$\text{Configured station alias} = (\text{left set value}) \times 16 + (\text{right set value})$$

Table 2.9.1.1

Node address switch setting	Description
00h	The node address is set by the controller.
01h~FFh	The node address switch setting is used as the node address.

Note: Do not change node address setting after control power-on.

2.9.2 EtherCAT indicators

There are four EtherCAT indicators (LED), RUN, ERR, L/A IN and L/A OUT, on E series EtherCAT drive. RUN indicator shows the status of ESM. ERR indicator shows the error status of EtherCAT communication. As for L/A IN and L/A OUT indicator, they shows the physical link states and operation statuses of EtherCAT IN and OUT port. The states of each indicator are described in Table 2.9.2.1.

Table 2.9.2.1

Name	LED color	State	Description
RUN	Green	Off	Init
		Blinking	PreOp
		Single flash	SafeOp
		On	Op
ERR	Red	Off	No error
		Blinking	Communication setting error
		Single flash	Synchronization error
		Double flash	Application watchdog timer (WDT) timeout
		Flickering	Initialization error
L/A IN	Green	Off	Link not established in physical layer
		Flickering	In operation after establishing link
		On	Link established in physical layer
L/A OUT	Green	Off	Link not established in physical layer
		Flickering	In operation after establishing link
		On	Link established in physical layer

The states of the indicators are shown in Figure 2.9.2.1.

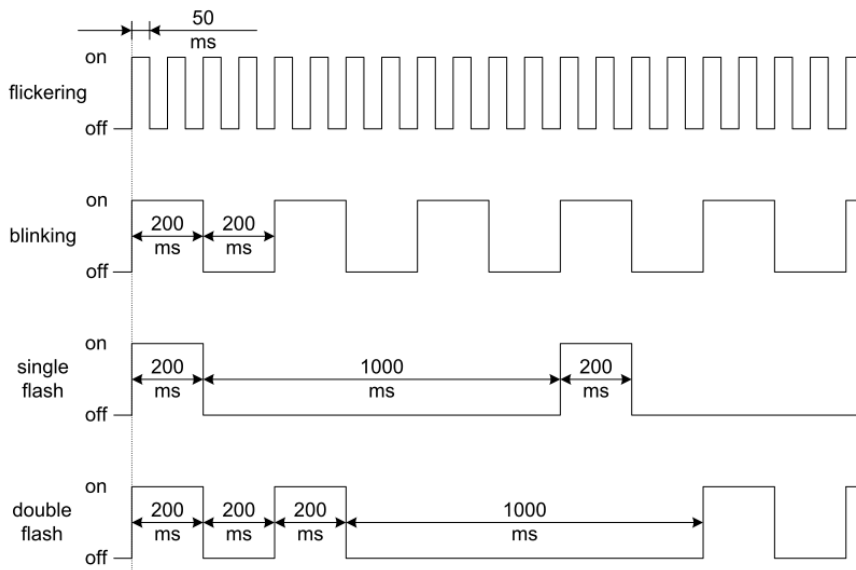


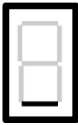



Figure 2.9.2.1

2.9.3 EtherCAT panel status display

Table 2.9.3.1

Display	Function Description
	Status of rotation detection output (TGON) signal Light up when the rotary velocity of the servo motor exceeds the setting value. (Set via Pt502 or Pt581. The default setting is 20 rpm or 20 mm/s.) Do not light up when the rotary velocity of the servo motor is below the setting value.
	Servo ready display Light up when servo OFF. Do not light up when servo ON.
	Display of command input Light up during command input.
	Display of connection Light up during connection.

2.10 EtherCAT related errors

In case of an EtherCAT communication error, the AL status code register (0134h:0135h) will be set. After the error is cleared, the AL status code will also be cleared. The AL status codes of E series servo drive are defined in Table 2.10.1.

Table 2.10.1

Code	Description	Current state / State change	Result state	ERR Indicator
0x0000	No error	Any	Current state	Off
0x0011	Invalid request state change	I→S, I→O, P→O, O→B, S→B, P→B	I + E, P + E, S + E	Blinking
0x0012	Unknown requested state	Any	I + E, P + E, S + E	Blinking
0x0013	Bootstrap not supported	I→B	I + E	Blinking
0x0016	Invalid mailbox configuration	I→P	I + E	Blinking
0x001A	Synchronization error	O, S→O	S + E	Single flash
0x001B	SyncManager watchdog	O, S	S + E	Double flash
0x001D	Invalid output configuration	O, S, P→S	P + E	Blinking
0x001E	Invalid input configuration	O, S, P→S	P + E	Blinking
0x0035	DC invalid sync cycle time	P→S	P + E	Blinking
0x8000	The drive is not in communication mode	Any	Init	Blinking

3. Object dictionary

3.	Object dictionary	3-1
3.1	Communication profile area	3-2
3.1.1	Default PDO mapping	3-7
3.1.2	Mapping objects to PDO	3-9
3.1.3	PDO data exchange timing	3-11
3.2	Standardized device profile area	3-12
3.2.1	PDS (Power Drive System).....	3-20
3.2.2	Profile position mode (pp)	3-23
3.2.3	Cyclic synchronous position mode (csp)	3-30
3.2.4	Homing mode (hm)	3-32
3.2.5	Profile velocity mode (pv).....	3-37
3.2.6	Cyclic synchronous velocity mode (csv)	3-38
3.2.7	Profile torque mode (tq)	3-40
3.2.8	Cyclic synchronous torque mode (cst).....	3-42
3.2.9	Touch probe function.....	3-43
3.3	Manufacturer specific profile area	3-46
3.3.1	Absolute encoder initialization	3-49
3.4	Object dictionary list.....	3-50

Every object in the object dictionary is addressed by a 16-bit index and an 8-bit subindex. The standard object dictionary layout is shown in Table 3.1.

Table 3.1

Index	Description
0000h ~ 0FFFh	Data type
1000h ~ 1FFFh	Communication profile area
2000h ~ 5FFFh	Manufacturer specific profile area
6000h ~ 9FFFh	Standardized device profile area
A000h ~ FFFFh	Reserved

3.1 Communication profile area

Table 3.1.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit							
1000h	00h	Device type	U32	ro	-	0x00020192	-							
		The object displays device type and functionality. The value of a servo drive is 0x00020192.												
1001h	00h	Error register	U8	ro	-	0x0 ~ 0xFF	-							
		The error status of the drive. The value of this object is a part of an emergency message.												
		<table border="1"> <thead> <tr> <th>Bit</th> <th>Description</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Generic error 0: no error; 1: error</td> </tr> <tr> <td>1~7</td> <td>Always 0</td> </tr> </tbody> </table>		Bit	Description	0	Generic error 0: no error; 1: error	1~7	Always 0					
		Bit	Description											
0	Generic error 0: no error; 1: error													
1~7	Always 0													
1010h	-	Store parameters	-	-	-	-	-							
		Save the parameter setting in non-volatile memory												
	00h	Number of entries	U8	ro	-	1	-							
1010h	01h	Save all parameters	U32	rw	-	0x0 ~ 0xFFFFFFFF	-							
		Write 0x65766173 ("save") to save parameter setting in non-volatile memory. The saving process may take up to 10 seconds. If the object is read during parameter saving process, 0 will be returned. Otherwise, 1 will be returned. During parameter saving process, other SDO commands will be ignored.												
1018h	-	Identity object	-	-	-	-	-							
		Display device information												
	00h	Number of entries	U8	ro	-	4	-							
	01h	Vendor ID	U32	ro	-	0xAAAA	-							
		EtherCAT vendor ID. The value is 0xAAAA.												
	02h	Product code	U32	ro	-	0x05	-							
		The product code of E series servo drive is 0x05.												
03h	Revision number	U32	ro	-	0 ~ 4294967295	-								
04h	Serial number	U32	ro	-	0 ~ 4294967295	-								
10F1h	-	Error settings	-	-	-	-	-							
		Error setting for Sync error												
	00h	Number of entries	U8	ro	-	1	-							

	02h	Sync error counter limit	U16	rw	-	0 ~ 15	-																							
		<p>It is the process data reception failure threshold. If the value of the internal error counter in the drive exceeds the threshold, the drive will issue an error (AL status code 0x1A) and ESM state will change to SafeOp. The drive increases sync error counter by 3 in case of a missed a SM2 event, while it decreases sync error counter by 1 in case of a received SM2 event. An example of sync error counter is shown as follows.</p> <table border="1"> <tr> <td>SM2 event</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> </tr> <tr> <td>Sync error counter (Error counter limit = 9)</td> <td>0</td> <td>3</td> <td>2</td> <td>5</td> <td>4</td> <td>7</td> <td>6</td> <td>9</td> <td>9</td> <td>9</td> <td>9</td> </tr> </table> <p>If sync error counter limit is set to 0, the drive will not detect any missing SM2 event.</p>							SM2 event	1	0	1	0	1	0	1	0	1	0	1	Sync error counter (Error counter limit = 9)	0	3	2	5	4	7	6	9	9
SM2 event	1	0	1	0	1	0	1	0	1	0	1																			
Sync error counter (Error counter limit = 9)	0	3	2	5	4	7	6	9	9	9	9																			
1600h	-	1 st RxPDO mapping	-	-	-	-	-																							
	They are the mapping parameters of PDOs that the drive can receive. The value of the object can only be changed when ESM state is PreOp. If subindex 00h is not cleared as 0, subindex 01h to 08h cannot be changed.																													
	00h	Number of entries	U8	rw	-	0 ~ 8	-																							
	01h	Mapping entry 1	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
		<p>It is the 1st RxPDO object to be mapped. The content is defined as follows.</p> <table border="1"> <tr> <td>Bit</td> <td>31</td> <td>...</td> <td>16</td> <td>15</td> <td>...</td> <td>08</td> <td>07</td> <td>...</td> <td>01</td> </tr> <tr> <td></td> <td colspan="3">Index number</td> <td colspan="3">Subindex number</td> <td colspan="3">Bit length</td> </tr> </table> <p>The same setting method applies to the rest of the mapping entries. Note: Mapping the same object to different mapping entries is not supported by the drive.</p>							Bit	31	...	16	15	...	08	07	...	01		Index number			Subindex number			Bit length				
	Bit	31	...	16	15	...	08	07	...	01																				
		Index number			Subindex number			Bit length																						
	02h	Mapping entry 2	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	03h	Mapping entry 3	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	04h	Mapping entry 4	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
05h	Mapping entry 5	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																								
06h	Mapping entry 6	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																								
07h	Mapping entry 7	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																								
08h	Mapping entry 8	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																								
1601h	-	2 nd RxPDO mapping	-	-	-	-	-																							
	The specification is the same as that of 1 st RxPDO mapping object.																													
	00h	Number of entries	U8	rw	-	0 ~ 8	-																							
	01h	Mapping entry 1	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	02h	Mapping entry 2	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	03h	Mapping entry 3	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	04h	Mapping entry 4	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	05h	Mapping entry 5	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	06h	Mapping entry 6	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
07h	Mapping entry 7	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																								
1602h	-	3 rd RxPDO mapping	-	-	-	-	-																							
	The specification is the same as that of 1 st RxPDO mapping object.																													
	00h	Number of entries	U8	rw	-	0 ~ 8	-																							
	01h	Mapping entry 1	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	02h	Mapping entry 2	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	03h	Mapping entry 3	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	04h	Mapping entry 4	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	05h	Mapping entry 5	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
	06h	Mapping entry 6	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																							
07h	Mapping entry 7	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																								
08h	Mapping entry 8	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																								

1603h	-	4 th RxPDO mapping	-	-	-	-	-																				
	The specification is the same as that of 1 st RxPDO mapping object.																										
	00h	Number of entries	U8	rw	-	0 ~ 8	-																				
	01h	Mapping entry 1	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	02h	Mapping entry 2	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	03h	Mapping entry 3	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	04h	Mapping entry 4	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	05h	Mapping entry 5	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	06h	Mapping entry 6	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
1A00h	-	1 st TxPDO mapping	-	-	-	-	-																				
	They are the mapping parameters of PDOs that the drive can transmit. The value of the object can only be changed when ESM state is PreOp. If subindex 00h is not cleared as 0, subindex 01h to 08h cannot be changed.																										
	00h	Number of entries	U8	rw	-	0 ~ 8	-																				
	01h	Mapping entry 1	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
		It is the 1 st TxPDO object to be mapped. The content is defined as follows.																									
	<table border="1" style="width: 100%; border-collapse: collapse; text-align: center;"> <thead> <tr> <th style="width: 10%;">Bit</th> <th style="width: 15%;">31</th> <th style="width: 15%;">...</th> <th style="width: 15%;">16</th> <th style="width: 15%;">15</th> <th style="width: 15%;">...</th> <th style="width: 15%;">08</th> <th style="width: 15%;">07</th> <th style="width: 15%;">...</th> <th style="width: 15%;">01</th> </tr> </thead> <tbody> <tr> <td></td> <td colspan="3">Index number</td> <td colspan="3">Subindex number</td> <td colspan="3">Bit length</td> </tr> </tbody> </table>							Bit	31	...	16	15	...	08	07	...	01		Index number			Subindex number			Bit length		
	Bit	31	...	16	15	...	08	07	...	01																	
		Index number			Subindex number			Bit length																			
	The same setting method applies to the rest of the mapping entries. Note: Mapping the same object to different mapping entries is not supported by the drive.																										
02h	Mapping entry 2	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					
03h	Mapping entry 3	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					
04h	Mapping entry 4	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					
05h	Mapping entry 5	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					
06h	Mapping entry 6	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					
07h	Mapping entry 7	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					
08h	Mapping entry 8	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					
1A01h	-	2 nd TxPDO mapping	-	-	-	-	-																				
	The specification is the same as that of 1 st TxPDO mapping object.																										
	00h	Number of entries	U8	rw	-	0 ~ 8	-																				
	01h	Mapping entry 1	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	02h	Mapping entry 2	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	03h	Mapping entry 3	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	04h	Mapping entry 4	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	05h	Mapping entry 5	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	06h	Mapping entry 6	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
07h	Mapping entry 7	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					
1A02h	-	3 rd TxPDO mapping	-	-	-	-	-																				
	The specification is the same as that of 1 st TxPDO mapping object.																										
	00h	Number of entries	U8	rw	-	0 ~ 8	-																				
	01h	Mapping entry 1	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	02h	Mapping entry 2	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	03h	Mapping entry 3	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	04h	Mapping entry 4	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
	05h	Mapping entry 5	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																				
06h	Mapping entry 6	U32	rw	-	0x0 ~ 0xFFFFFFFF	-																					

	07h	Mapping entry 7	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
	08h	Mapping entry 8	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
1A03h	-	4 th TxPDO mapping	-	-	-	-	-
	The specification is the same as that of 1 st TxPDO mapping object.						
	00h	Number of entries	U8	rw	-	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
	02h	Mapping entry 2	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
	03h	Mapping entry 3	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
	06h	Mapping entry 6	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
	07h	Mapping entry 7	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
	08h	Mapping entry 8	U32	rw	-	0x0 ~ 0xFFFFFFFF	-
1C00h	-	SyncManager communication type	-	-	-	-	-
	Set the communication type of each SyncManager (SM).						
	00h	Number of entries	U8	ro	-	4	-
	01h	Communication type SyncManager 0	U8	ro	-	1	-
		SM0 is responsible for receiving data through Mailbox. The value is 1.					
	02h	Communication type SyncManager 1	U8	ro	-	2	-
		SM1 is responsible for sending data through Mailbox. The value is 2.					
03h	Communication type SyncManager 2	U8	ro	-	3	-	
	SM2 is responsible for process data output (RxPDO). The value is 3.						
04h	Communication type SyncManager 3	U8	ro	-	4	-	
	SM3 is responsible for process data input (TxPDO). The value is 4.						
1C12h	-	SyncManager 2 PDO assignment	-	-	-	-	-
	It is the PDO mapping object entry for SM2, which is responsible for process data output (RxPDO). The value of the object can only be changed when ESM state is PreOp. If subindex 00h is not cleared as 0, subindex 01h to 08h cannot be changed.						
	00h	Number of assigned PDOs	U8	rw	-	0 ~ 1	-
01h	Index of assigned RxPDO 1	U16	rw	-	1600h ~ 1603h	-	
	RxPDO mapping object index						
1C13h	-	SyncManager 3 PDO assignment	-	-	-	-	-
	It is the PDO mapping object entry for SM3, which responsible is for process data input (TxPDO). The value of the object can only be changed when ESM state is PreOp. If subindex 00h is not cleared as 0, subindex 01h to 08h cannot be changed.						
	00h	Number of assigned PDOs	U8	rw	-	0 ~ 1	-
	01h	Index of assigned TxPDO 1	U16	rw	-	1A00h ~ 1A03h	-
TxPDO mapping object index							
1C32h	-	SyncManager 2 synchronization	-	-	-	-	-
	00h	Number of synchronization parameters	U8	ro	-	12	-
	01h	Synchronization type	U16	ro	-	0 ~ 2	-
		Mode of SM2 synchronization 0: FreeRun (not synchronized) 2: DC Sync0 (synchronized with Sync0 event)					
	02h	Cycle time	U32	ro	-	250000 ~ 4000000	ns
		It is the communication cycle of SM. The value is defined as follows.					
		Sync mode	Description				
		FreeRun	The local cycle time of the application controller				
		DC Sync0	Sync0 cycle time (09A0h~09A3h)				

	04h	Synchronization types supported	U16	ro	-	5	-	
		The bits corresponding to the supported synchronization modes are set to 1. The meaning of each bit is defined as follows.						
		Bit		Description				
		0	FreeRun	The bit is 1.				
		1	SM synchronous mode	The bit is 0.				
		2~4	DC synchronous mode	001b: DC Sync0 event supported				
		5~6	output shift support	00b: not supported				
7~15	reserved							
05h	Minimum cycle time	U32	ro	-	187500	ns		
	Minimum cycle time supported by slaves							
06h	Calc and copy time	U32	ro	-	31250	ns		
	Minimum time for outputs to sync event. Used in DC mode							
09h	Delay time	U32	ro	-	31250	ns		
	Hardware delay time of the slaves							
0Ch	Cycle time too small	U16	ro	-	0	-		
	This error counter increases when the cycle time is too small. Therefore, local cycle cannot be completed and input data cannot be provided before the next SM event. Used in DC Mode.							
1C33h	-	SyncManager 3 synchronization	-	-	-	-	-	
	00h	Number of synchronization parameters	U8	ro	-	10	-	
	01h	Synchronization type	U16	ro	-	0 ~ 2	-	
		Mode of SM3 synchronization 0: FreeRun (not synchronized) 2: DC Sync0 (synchronized with Sync0 event)						
	02h	Cycle time	U32	ro	-	250000 ~ 4000000	ns	
		the same as 1C32:02h						
	04h	Synchronization types supported	U16	ro	-	5	-	
		the same as 1C32:04h						
	05h	Minimum cycle time	U32	ro	-	187500	ns	
		the same as 1C32:05h						
	06h	Calc and copy time	U32	ro	-	31250	ns	
Minimum time for Inputs after Input Latch								
09h	Delay time	U32	ro	-	-	ns		
	the same as 1C32:09h							
0Ch	Cycle time too small	U16	ro	-	0	-		
	the same as 1C32:0Ch							

3.1.1 Default PDO mapping

The definition of the default PDO mapping in E series servo drive is described as follows.

■ PDO mapping 1 (csp, touch probe, torque limit)

Table 3.1.1.1

	Subindex	Value	Name
RxPDO (1600h)	01h	60400010h	Controlword
	02h	60600008h	Modes of operation
	03h	60720010h	Max torque
	04h	607A0020h	Target position
	05h	60B80010h	Touch probe function
	06h	60FE0120h	Digital outputs: physical output
TxPDO (1A00h)	01h	603F0010h	Error code
	02h	60410010h	Statusword
	03h	60610008h	Modes of operation display
	04h	60640020h	Position actual value
	05h	60B90010h	Touch probe status
	06h	60BA0020h	Touch probe 1 positive edge
	07h	60F40020h	Following error actual value
	08h	60FD0020h	Digital inputs

■ PDO mapping 2 (csv)

Table 3.1.1.2

	Subindex	Value	Name
RxPDO (1601h)	01h	60400010h	Controlword
	02h	60600008h	Modes of operation
	03h	60FF0020h	Target velocity
	04h	60FE0120h	Digital outputs: physical output
TxPDO (1A01h)	01h	603F0010h	Error code
	02h	60410010h	Statusword
	03h	60610008h	Modes of operation display
	04h	60640020h	Position actual value
	05h	606C0020h	Velocity actual value
	06h	60770010h	Torque actual value
	07h	60FD0020h	Digital inputs

■ PDO mapping 3 (cst)

Table 3.1.1.3

	Subindex	Value	Name
RxPDO (1602h)	01h	60400010h	Controlword
	02h	60600008h	Modes of operation
	03h	60710010h	Target torque
	04h	60FE0120h	Digital outputs: physical output
TxPDO (1A02h)	01h	603F0010h	Error code
	02h	60410010h	Statusword
	03h	60610008h	Modes of operation display
	04h	60640020h	Position actual value
	05h	606C0020h	Velocity actual value
	06h	60770010h	Torque actual value
	07h	60FD0020h	Digital inputs

■ PDO mapping 4 (position, velocity, torque, torque limit, touch probe)

Table 3.1.1.4

	Subindex	Value	Name
RxPDO (1603h)	01h	60400010h	Controlword
	02h	60600008h	Modes of operation
	03h	60710010h	Target torque
	04h	60720010h	Max torque
	05h	607A0020h	Target position
	06h	60B80010h	Touch probe function
	07h	60FF0020h	Target velocity
	08h	60FE0120h	Digital outputs: physical output
TxPDO (1A03h)	01h	60410010h	Statusword
	02h	60610008h	Modes of operation display
	03h	60640020h	Position actual value
	04h	606C0020h	Velocity actual value
	05h	60770010h	Torque actual value
	06h	60B90010h	Touch probe status
	07h	60BA0020h	Touch probe 1 positive edge
	08h	60FD0020h	Digital inputs

3.1.2 Mapping objects to PDO

The procedure of setting PDO mapping is described as follows.

Step 1. Set ESM state to PreOp.

Step 2. Disable PDO mapping assignment. Set subindex 00h of object 1C12h and 1C13h to 0.

Step 3. Set the number of mapping entries for PDO mapping object 1600h~1603h and 1A00h~1A03h to 0.

Step 4. Set all of the mapping entries for PDO mapping object 1600h~1603h and 1A00h~1A03h.

Step 5. Set the assigned PDO mapping object. Set subindex 1 of object 1C12h and 1C13h.

Step 6. Enable PDO mapping assignment. Set subindex 0 of object 1C12h and 1C13h to 1.

Step 7. Set ESM state from PreOp to SafeOp. TxPDO will be effective.

Step 8. Set ESM state from SafeOp to Op. RxPDO will be effective.

Note:

1. The PDO mapping settings will be checked after Step 6. If the mapped objects exceeds the maximum number of PDO mapping objects or maximum PDO data length, SDO abort code 0x06040042 will be returned.
2. It is not allowed to write PDO mapping object in SafeOp or Op state. Otherwise, SDO abort code 0x06010002 will be returned.
3. If unsupported object is written to PDO mapping object, SDO abort code 0x06020000 will be returned.

An example of adding object 607Fh to 1600h and using 1600h as the assigned RxPDO is explained as follows.

Before change (default setting)

Table 3.1.2.1

	Subindex	Value	Name
RxPDO (1600h)	01h	60400010h	Controlword
	02h	60600008h	Modes of operation
	03h	60720010h	Max torque
	04h	607A0020h	Target position
	05h	60B80010h	Touch probe function
	06h	60FE0120h	Digital outputs: physical output

After change

Table 3.1.2.2

	Subindex	Value	Name
RxPDO (1600h)	01h	60400010h	Controlword
	02h	60600008h	Modes of operation
	03h	60720010h	Max torque
	04h	607A0020h	Target position
	05h	60B80010h	Touch probe function
	06h	60FE0120h	Digital outputs: physical output
	07h	607F0020h	Max profile velocity

- Step 1. Set ESM state to PreOp.
- Step 2. Disable PDO mapping assignment. Set 1C12:00h to 0.
- Step 3. Set 1600:00h to 0.
- Step 4. Set the value of 1600:07h to 607F0020h. Then, set 1600:00h to 7.
- Step 5. Set the value of 1C12:01h to 1600h.
- Step 6. Set 1C12:00h to 1 to enable PDO mapping assignment.
- Step 7. Set ESM state from PreOp to SafeOp. TxPDO will be effective.
- Step 8. Set ESM state from SafeOp to Op. RxPDO will be effective.

3.1.3 PDO data exchange timing

Figure 3.1.3.1 shows an example of PDO exchange between the master and the slaves in DC synchronous mode.

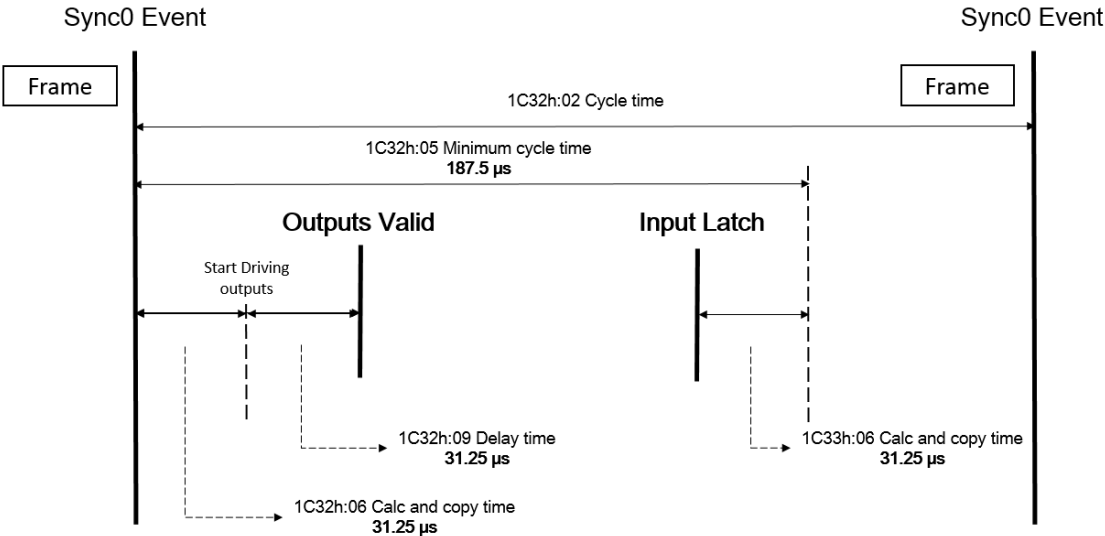


Figure 3.1.3.1

Figure 3.1.3.2 shows an example of PDO exchange between the master and the slaves in FreeRun (DC unused) mode.

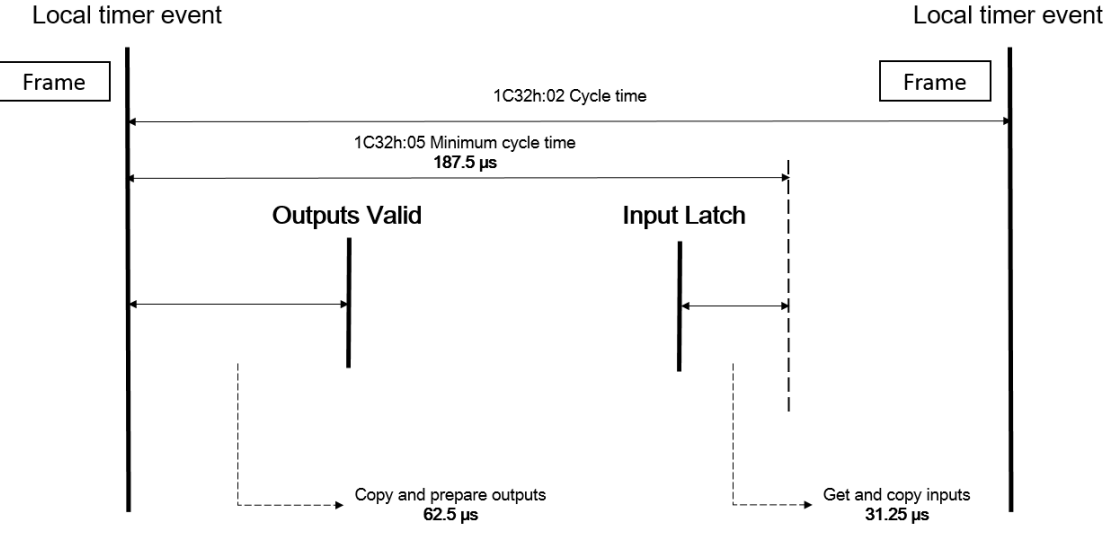


Figure 3.1.3.2

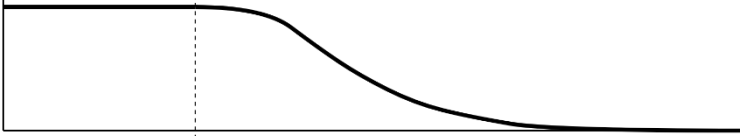
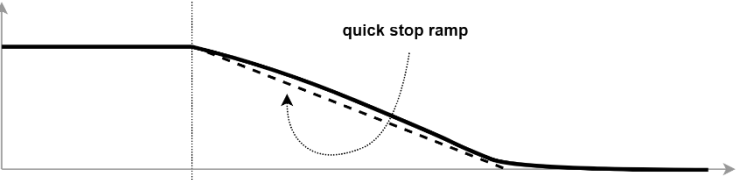
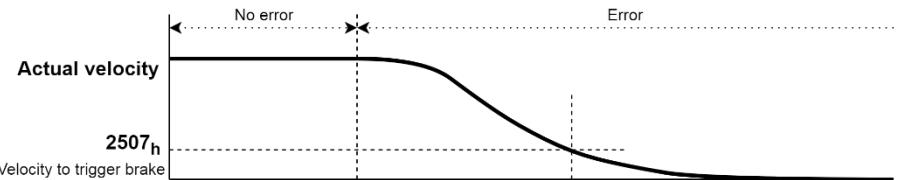
3.2 Standardized device profile area

Table 3.2.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit																																																																																																																																																																				
603Fh	00h	Error code	U16	ro	Y	0x0 ~ 0xFFFF	-																																																																																																																																																																				
		Display the last error that occurs. The value of the error code is FF**h, where ** is the error code from E series servo drive. Take FF10h as an example. 10h = 16d → Error 16 occurs.																																																																																																																																																																									
		0x603F Error Code mapping table																																																																																																																																																																									
		<table border="1"> <thead> <tr> <th>0x603F Error Code (hex)</th> <th>Alarm No.</th> <th>Alarm Name</th> </tr> </thead> <tbody> <tr><td>FF04</td><td>AL.024</td><td>System alarm 1</td></tr> <tr><td>FF05</td><td>AL.025</td><td>System alarm 2</td></tr> <tr><td>FF06</td><td>AL.030</td><td>Main circuit detector error</td></tr> <tr><td>FF07</td><td>AL.040</td><td>Parameter setting error</td></tr> <tr><td>FF0B</td><td>AL.050</td><td>Combination error</td></tr> <tr><td>FF0C</td><td>AL.070</td><td>Motor type change detected</td></tr> <tr><td>FF0E</td><td>AL.0b0</td><td>Invalid Servo ON command alarm</td></tr> <tr><td>FF0F</td><td>AL.100</td><td>Over current detected</td></tr> <tr><td>FF10</td><td>AL.320</td><td>Regenerative overload</td></tr> <tr><td>FF11</td><td>AL.400</td><td>Over voltage</td></tr> <tr><td>FF12</td><td>AL.410</td><td>Under voltage</td></tr> <tr><td>FF13</td><td>AL.510</td><td>Over speed</td></tr> <tr><td>FF14</td><td>AL.511</td><td>Encoder output pulse overspeed</td></tr> <tr><td>FF18</td><td>AL.710</td><td>Instantaneous overload</td></tr> <tr><td>FF19</td><td>AL.720</td><td>Continuous overload</td></tr> <tr><td>FF1E</td><td>AL.7A2</td><td>Internal overheat error 2 (power board)</td></tr> <tr><td>FF21</td><td>AL.800</td><td>Data backup error</td></tr> <tr><td>FF22</td><td>AL.810</td><td>Battery error</td></tr> <tr><td>FF23</td><td>AL.820</td><td>Encoder com. error</td></tr> <tr><td>FF24</td><td>AL.830</td><td>Encoder data error</td></tr> <tr><td>FF25</td><td>AL.840</td><td>Encoder crc error</td></tr> <tr><td>FF26</td><td>AL.850</td><td>Encoder counting error</td></tr> <tr><td>FF27</td><td>AL.860</td><td>Write data fail error</td></tr> <tr><td>FF28</td><td>AL.870</td><td>Encoder over heat error</td></tr> <tr><td>FF29</td><td>AL.880</td><td>Encoder sensor phase error (AqB)</td></tr> <tr><td>FF2A</td><td>AL.890</td><td>ESC ALM - Incremental encoder cable not connected</td></tr> <tr><td>FF2B</td><td>AL.8A0</td><td>ESC ALM - CH1 ESC side error</td></tr> <tr><td>FF2C</td><td>AL.8b0</td><td>ESC ALM - CH1 Encoder side error</td></tr> <tr><td>FF2D</td><td>AL.8C0</td><td>ESC ALM - CH2 ESC side error</td></tr> <tr><td>FF2E</td><td>AL.8d0</td><td>ESC ALM - CH2 Encoder side error</td></tr> <tr><td>FF2F</td><td>AL.8E0</td><td>Digital encoder cable not connected</td></tr> <tr><td>FF30</td><td>AL.8F0</td><td>ESC ALM - Internal fault</td></tr> <tr><td>FF31</td><td>AL.861</td><td>Motor overheated</td></tr> <tr><td>FF32</td><td>AL.b10</td><td>Speed reference A/D error</td></tr> <tr><td>FF34</td><td>AL.b20</td><td>Torque reference A/D error</td></tr> <tr><td>FF35</td><td>AL.b33</td><td>Current detection error</td></tr> <tr><td>FF36</td><td>AL.C10</td><td>Servomotor out of control</td></tr> <tr><td>FF37</td><td>AL.C20</td><td>Phase detection error</td></tr> <tr><td>FF38</td><td>AL.C21</td><td>Polarity sensor error (Hall sensor)</td></tr> <tr><td>FF3A</td><td>AL.C50</td><td>Polarity detection failure</td></tr> <tr><td>FF3B</td><td>AL.C51</td><td>Overtravel detected during polarity detection</td></tr> <tr><td>FF3C</td><td>AL.C52</td><td>Polarity detection not completed</td></tr> <tr><td>FF3E</td><td>AL.d00</td><td>Position error too big</td></tr> <tr><td>FF41</td><td>AL.d10</td><td>Hybrid deviation error (motor to load)</td></tr> <tr><td>FF42</td><td>AL.Eb0</td><td>Safety function alarm</td></tr> <tr><td>FF43</td><td>AL.Eb1</td><td>Safety function signal input timing error</td></tr> <tr><td>FF44</td><td>AL.Eb2</td><td>Safety function self-check error</td></tr> <tr><td>FF45</td><td>AL.F10</td><td>Power supply line open phase</td></tr> <tr><td>FF46</td><td>AL.F50</td><td>Servomotor main circuit cable disconnection (motor maybe disconnected)</td></tr> <tr><td>FF47</td><td>AL.FA0</td><td>Power supply for encoder error (5V card fail)</td></tr> <tr><td>FF48</td><td>AL.FB0</td><td>FieldBus Hardware Fault</td></tr> <tr><td>FF49</td><td>AL.FB1</td><td>FieldBus Communication Fault</td></tr> <tr><td>FF4A</td><td>AL.FC0</td><td>Group Communication Fault</td></tr> </tbody> </table>							0x603F Error Code (hex)	Alarm No.	Alarm Name	FF04	AL.024	System alarm 1	FF05	AL.025	System alarm 2	FF06	AL.030	Main circuit detector error	FF07	AL.040	Parameter setting error	FF0B	AL.050	Combination error	FF0C	AL.070	Motor type change detected	FF0E	AL.0b0	Invalid Servo ON command alarm	FF0F	AL.100	Over current detected	FF10	AL.320	Regenerative overload	FF11	AL.400	Over voltage	FF12	AL.410	Under voltage	FF13	AL.510	Over speed	FF14	AL.511	Encoder output pulse overspeed	FF18	AL.710	Instantaneous overload	FF19	AL.720	Continuous overload	FF1E	AL.7A2	Internal overheat error 2 (power board)	FF21	AL.800	Data backup error	FF22	AL.810	Battery error	FF23	AL.820	Encoder com. error	FF24	AL.830	Encoder data error	FF25	AL.840	Encoder crc error	FF26	AL.850	Encoder counting error	FF27	AL.860	Write data fail error	FF28	AL.870	Encoder over heat error	FF29	AL.880	Encoder sensor phase error (AqB)	FF2A	AL.890	ESC ALM - Incremental encoder cable not connected	FF2B	AL.8A0	ESC ALM - CH1 ESC side error	FF2C	AL.8b0	ESC ALM - CH1 Encoder side error	FF2D	AL.8C0	ESC ALM - CH2 ESC side error	FF2E	AL.8d0	ESC ALM - CH2 Encoder side error	FF2F	AL.8E0	Digital encoder cable not connected	FF30	AL.8F0	ESC ALM - Internal fault	FF31	AL.861	Motor overheated	FF32	AL.b10	Speed reference A/D error	FF34	AL.b20	Torque reference A/D error	FF35	AL.b33	Current detection error	FF36	AL.C10	Servomotor out of control	FF37	AL.C20	Phase detection error	FF38	AL.C21	Polarity sensor error (Hall sensor)	FF3A	AL.C50	Polarity detection failure	FF3B	AL.C51	Overtravel detected during polarity detection	FF3C	AL.C52	Polarity detection not completed	FF3E	AL.d00	Position error too big	FF41	AL.d10	Hybrid deviation error (motor to load)	FF42	AL.Eb0	Safety function alarm	FF43	AL.Eb1	Safety function signal input timing error	FF44	AL.Eb2	Safety function self-check error	FF45	AL.F10	Power supply line open phase	FF46	AL.F50	Servomotor main circuit cable disconnection (motor maybe disconnected)	FF47	AL.FA0	Power supply for encoder error (5V card fail)	FF48	AL.FB0	FieldBus Hardware Fault	FF49	AL.FB1	FieldBus Communication Fault	FF4A	AL.FC0	Group Communication Fault	
		0x603F Error Code (hex)	Alarm No.	Alarm Name																																																																																																																																																																							
		FF04	AL.024	System alarm 1																																																																																																																																																																							
		FF05	AL.025	System alarm 2																																																																																																																																																																							
		FF06	AL.030	Main circuit detector error																																																																																																																																																																							
		FF07	AL.040	Parameter setting error																																																																																																																																																																							
		FF0B	AL.050	Combination error																																																																																																																																																																							
		FF0C	AL.070	Motor type change detected																																																																																																																																																																							
		FF0E	AL.0b0	Invalid Servo ON command alarm																																																																																																																																																																							
		FF0F	AL.100	Over current detected																																																																																																																																																																							
		FF10	AL.320	Regenerative overload																																																																																																																																																																							
		FF11	AL.400	Over voltage																																																																																																																																																																							
		FF12	AL.410	Under voltage																																																																																																																																																																							
		FF13	AL.510	Over speed																																																																																																																																																																							
		FF14	AL.511	Encoder output pulse overspeed																																																																																																																																																																							
		FF18	AL.710	Instantaneous overload																																																																																																																																																																							
		FF19	AL.720	Continuous overload																																																																																																																																																																							
		FF1E	AL.7A2	Internal overheat error 2 (power board)																																																																																																																																																																							
		FF21	AL.800	Data backup error																																																																																																																																																																							
		FF22	AL.810	Battery error																																																																																																																																																																							
		FF23	AL.820	Encoder com. error																																																																																																																																																																							
		FF24	AL.830	Encoder data error																																																																																																																																																																							
		FF25	AL.840	Encoder crc error																																																																																																																																																																							
		FF26	AL.850	Encoder counting error																																																																																																																																																																							
		FF27	AL.860	Write data fail error																																																																																																																																																																							
		FF28	AL.870	Encoder over heat error																																																																																																																																																																							
		FF29	AL.880	Encoder sensor phase error (AqB)																																																																																																																																																																							
		FF2A	AL.890	ESC ALM - Incremental encoder cable not connected																																																																																																																																																																							
		FF2B	AL.8A0	ESC ALM - CH1 ESC side error																																																																																																																																																																							
		FF2C	AL.8b0	ESC ALM - CH1 Encoder side error																																																																																																																																																																							
		FF2D	AL.8C0	ESC ALM - CH2 ESC side error																																																																																																																																																																							
		FF2E	AL.8d0	ESC ALM - CH2 Encoder side error																																																																																																																																																																							
		FF2F	AL.8E0	Digital encoder cable not connected																																																																																																																																																																							
		FF30	AL.8F0	ESC ALM - Internal fault																																																																																																																																																																							
		FF31	AL.861	Motor overheated																																																																																																																																																																							
		FF32	AL.b10	Speed reference A/D error																																																																																																																																																																							
		FF34	AL.b20	Torque reference A/D error																																																																																																																																																																							
FF35	AL.b33	Current detection error																																																																																																																																																																									
FF36	AL.C10	Servomotor out of control																																																																																																																																																																									
FF37	AL.C20	Phase detection error																																																																																																																																																																									
FF38	AL.C21	Polarity sensor error (Hall sensor)																																																																																																																																																																									
FF3A	AL.C50	Polarity detection failure																																																																																																																																																																									
FF3B	AL.C51	Overtravel detected during polarity detection																																																																																																																																																																									
FF3C	AL.C52	Polarity detection not completed																																																																																																																																																																									
FF3E	AL.d00	Position error too big																																																																																																																																																																									
FF41	AL.d10	Hybrid deviation error (motor to load)																																																																																																																																																																									
FF42	AL.Eb0	Safety function alarm																																																																																																																																																																									
FF43	AL.Eb1	Safety function signal input timing error																																																																																																																																																																									
FF44	AL.Eb2	Safety function self-check error																																																																																																																																																																									
FF45	AL.F10	Power supply line open phase																																																																																																																																																																									
FF46	AL.F50	Servomotor main circuit cable disconnection (motor maybe disconnected)																																																																																																																																																																									
FF47	AL.FA0	Power supply for encoder error (5V card fail)																																																																																																																																																																									
FF48	AL.FB0	FieldBus Hardware Fault																																																																																																																																																																									
FF49	AL.FB1	FieldBus Communication Fault																																																																																																																																																																									
FF4A	AL.FC0	Group Communication Fault																																																																																																																																																																									

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit																																																																		
		FF4B	AL.FC1	Gantry system slave alarm																																																																					
		FF4C	AL.891	Incremental encoder signal error																																																																					
		FF4D	AL.FB2	Fieldbus communication setup error																																																																					
6040h	00h	Controlword	U16	rw	Y	0x0 ~ 0xFFFF	-																																																																		
<p>The object controls the drive's PDS state transition and the specific commands in operation mode. The details of the bits are described as follows.</p> <table border="1"> <thead> <tr> <th>15 ... 10</th> <th>9</th> <th>8</th> <th>7</th> <th>6 ... 4</th> <th>3</th> <th>2</th> <th>1</th> <th>0</th> </tr> </thead> <tbody> <tr> <td>N/A</td> <td>Op mode specific</td> <td>halt</td> <td>Fault reset</td> <td>Op mode specific</td> <td>Enable operation</td> <td>Quick stop</td> <td>Enable voltage</td> <td>Switch on</td> </tr> </tbody> </table> <p>Bit 8 (halt): If it is set to 1, the motor decelerates and stops according to object 605Dh (halt option code). Setting the bit to 0 will resume the halt operation. It is only applicable in pp, pv, tq and hm mode. Bit 7, 3~0: PDS commands. The codes of the commands are described in Section 3.2.1 PDS (Power Drive System). Bit 9, 6~4 (operation mode specific): The availability of each bit in each mode is listed as follows.</p> <table border="1"> <thead> <tr> <th>Op mode</th> <th>9</th> <th>6</th> <th>5</th> <th>4</th> </tr> </thead> <tbody> <tr> <td>pp</td> <td>change on set-point</td> <td>absolute / relative</td> <td>change set immediately</td> <td>new set-point</td> </tr> <tr> <td>pv</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>tq</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>hm</td> <td>-</td> <td>-</td> <td>-</td> <td>homing operation start</td> </tr> <tr> <td>csp</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>csv</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> <tr> <td>cst</td> <td>-</td> <td>-</td> <td>-</td> <td>-</td> </tr> </tbody> </table>								15 ... 10	9	8	7	6 ... 4	3	2	1	0	N/A	Op mode specific	halt	Fault reset	Op mode specific	Enable operation	Quick stop	Enable voltage	Switch on	Op mode	9	6	5	4	pp	change on set-point	absolute / relative	change set immediately	new set-point	pv	-	-	-	-	tq	-	-	-	-	hm	-	-	-	homing operation start	csp	-	-	-	-	csv	-	-	-	-	cst	-	-	-	-								
15 ... 10	9	8	7	6 ... 4	3	2	1	0																																																																	
N/A	Op mode specific	halt	Fault reset	Op mode specific	Enable operation	Quick stop	Enable voltage	Switch on																																																																	
Op mode	9	6	5	4																																																																					
pp	change on set-point	absolute / relative	change set immediately	new set-point																																																																					
pv	-	-	-	-																																																																					
tq	-	-	-	-																																																																					
hm	-	-	-	homing operation start																																																																					
csp	-	-	-	-																																																																					
csv	-	-	-	-																																																																					
cst	-	-	-	-																																																																					
6041h	00h	Statusword	U16	ro	Y	0 ~ FFFFh	-																																																																		
<p>The object provides the status of PDS FSA and the specific information in operation mode. The details of the bits are described as follows.</p> <table border="1"> <thead> <tr> <th>15</th> <th>14</th> <th>13</th> <th>12</th> <th>11</th> <th>10</th> <th>9</th> <th>8</th> <th>7</th> </tr> </thead> <tbody> <tr> <td>Reserved</td> <td>Op mode specific</td> <td>Internal limit active</td> <td>Target reached</td> <td>Remote</td> <td>Reserved</td> <td>Warning</td> <td></td> <td></td> </tr> <tr> <th>6</th> <th>5</th> <th>4</th> <th>3</th> <th>2</th> <th>1</th> <th>0</th> <td></td> <td></td> </tr> <tr> <td>Switch on disabled</td> <td>Quick stop</td> <td>Voltage disabled</td> <td>Fault</td> <td>Operation enabled</td> <td>Switched on</td> <td>Ready to Switch on</td> <td></td> <td></td> </tr> </tbody> </table> <p>Bit 6, 5, 3~0: PDS states. The codes of the states are described in Section 3.2.1 PDS (Power Drive System). Bit 4 (voltage enabled): If the main power normal input is normal, the bit should be 0. Bit 5 (quick stop): If PDS is reacting on a quick stop request, the bit is set to 0. Bit 7 (warning): If the bit is 1, it indicates a warning occurs. PDS does not change and the operation of the motor continues during warning (no error occurs). Bit 9 (remote): Controlword is processed if the bit is set to 1. It will be set to 1 after ESM state becomes PreOp (SDO available). Bit 10 (target reached):</p> <table border="1"> <thead> <tr> <th>Value</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0</td> <td>Halt (Bit 8 in controlword) = 0: target not reached</td> </tr> <tr> <td>Halt = 1: axis decelerates</td> </tr> <tr> <td rowspan="2">1</td> <td>Halt = 0: target reached</td> </tr> <tr> <td>Halt = 1: axis stops (velocity = 0)</td> </tr> </tbody> </table> <p>Bit 11 (internal limit active): The bit is set to 1 if one of the following conditions occurs.</p> <table border="1"> <thead> <tr> <th>Op mode</th> <th>Condition</th> <th>Servo on / off</th> </tr> </thead> <tbody> <tr> <td rowspan="4">Position control</td> <td rowspan="2">pp, csp</td> <td>Software limit</td> <td>on / off</td> </tr> <tr> <td>Hardware limit</td> <td>on / off</td> </tr> <tr> <td>Torque limit</td> <td>on</td> </tr> <tr> <td>Interpolation speed exceeded in csp</td> <td>on</td> </tr> <tr> <td rowspan="3">Velocity control</td> <td rowspan="2">hm</td> <td>Torque limit</td> <td>on</td> </tr> <tr> <td rowspan="2">pv, csv</td> <td>Hardware limit</td> <td>on / off</td> </tr> <tr> <td>Torque limit</td> <td>on</td> </tr> </tbody> </table>								15	14	13	12	11	10	9	8	7	Reserved	Op mode specific	Internal limit active	Target reached	Remote	Reserved	Warning			6	5	4	3	2	1	0			Switch on disabled	Quick stop	Voltage disabled	Fault	Operation enabled	Switched on	Ready to Switch on			Value	Definition	0	Halt (Bit 8 in controlword) = 0: target not reached	Halt = 1: axis decelerates	1	Halt = 0: target reached	Halt = 1: axis stops (velocity = 0)	Op mode	Condition	Servo on / off	Position control	pp, csp	Software limit	on / off	Hardware limit	on / off	Torque limit	on	Interpolation speed exceeded in csp	on	Velocity control	hm	Torque limit	on	pv, csv	Hardware limit	on / off	Torque limit	on
15	14	13	12	11	10	9	8	7																																																																	
Reserved	Op mode specific	Internal limit active	Target reached	Remote	Reserved	Warning																																																																			
6	5	4	3	2	1	0																																																																			
Switch on disabled	Quick stop	Voltage disabled	Fault	Operation enabled	Switched on	Ready to Switch on																																																																			
Value	Definition																																																																								
0	Halt (Bit 8 in controlword) = 0: target not reached																																																																								
	Halt = 1: axis decelerates																																																																								
1	Halt = 0: target reached																																																																								
	Halt = 1: axis stops (velocity = 0)																																																																								
Op mode	Condition	Servo on / off																																																																							
Position control	pp, csp	Software limit	on / off																																																																						
		Hardware limit	on / off																																																																						
	Torque limit	on																																																																							
	Interpolation speed exceeded in csp	on																																																																							
Velocity control	hm	Torque limit	on																																																																						
		pv, csv	Hardware limit	on / off																																																																					
	Torque limit		on																																																																						

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit																																								
		<table border="1"> <tr> <td rowspan="2">Torque control</td> <td rowspan="2">tq, cst</td> <td>Hardware limit</td> <td colspan="2">on / off</td> </tr> <tr> <td>Torque limit</td> <td colspan="2">on</td> </tr> </table> <p>Bit 13, 12, 10 (operation mode specific): The availability of each bit in each mode is listed below.</p> <table border="1"> <thead> <tr> <th>Op mode</th> <th>13</th> <th>12</th> <th>10</th> </tr> </thead> <tbody> <tr> <td>pp</td> <td>following error</td> <td>set-point acknowledge</td> <td>target reached</td> </tr> <tr> <td>pv</td> <td>max slippage error</td> <td>speed</td> <td>target reached</td> </tr> <tr> <td>tq</td> <td>-</td> <td>-</td> <td>target reached</td> </tr> <tr> <td>hm</td> <td>homing error</td> <td>homing attained</td> <td>target reached</td> </tr> <tr> <td>csp</td> <td>following error</td> <td>drive follows command value</td> <td>target reached</td> </tr> <tr> <td>csv</td> <td>-</td> <td>drive follows command value</td> <td>target reached</td> </tr> <tr> <td>cst</td> <td>-</td> <td>drive follows command value</td> <td>target reached</td> </tr> </tbody> </table>	Torque control	tq, cst	Hardware limit	on / off		Torque limit	on		Op mode	13	12	10	pp	following error	set-point acknowledge	target reached	pv	max slippage error	speed	target reached	tq	-	-	target reached	hm	homing error	homing attained	target reached	csp	following error	drive follows command value	target reached	csv	-	drive follows command value	target reached	cst	-	drive follows command value	target reached					
Torque control	tq, cst	Hardware limit			on / off																																										
		Torque limit	on																																												
Op mode	13	12	10																																												
pp	following error	set-point acknowledge	target reached																																												
pv	max slippage error	speed	target reached																																												
tq	-	-	target reached																																												
hm	homing error	homing attained	target reached																																												
csp	following error	drive follows command value	target reached																																												
csv	-	drive follows command value	target reached																																												
cst	-	drive follows command value	target reached																																												
605Ah	00h	Quick stop option code	116	rw	-	2	-																																								
		<p>The object indicates the action when quick stop function is executed. E series servo drive only supports <u>option 2: slow down</u> according to 6085h (quick stop deceleration). PDS state changes to Switch on disabled.</p>																																													
605Bh	00h	Shutdown option code	116	rw	-	0	-																																								
		<p>The object indicates the action when PDS state transits from Operation enabled to Ready to switch on. E series servo drive only supports <u>option 0: Disable drive function</u>. PDS state changes to Ready to switch on.</p>																																													
605Ch	00h	Disable operation option code	116	rw	-	0	-																																								
		<p>The object indicates the action when PDS state transits from Operation enabled to Switched on. E series servo drive only supports <u>option 0: Disable drive function</u>. PDS state changes to Switched on.</p>																																													

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit																											
		<p>Actual velocity</p>  <p>6040_h Enable operation Disable operation</p> <p>PDS state Operation enabled Switched on</p>																																
605Dh	00h	<p>Halt option code</p> <p>The object indicates the action when halt function is executed. E series servo drive only supports <u>option 2: Slow down</u> on quick stop ramp. PDS state stays in Operation enabled. Note: Only pp mode can set the object to 1. The motor will be stopped according to 6084h (profile deceleration).</p>  <p>6040_h Enable operation Halt</p> <p>PDS state Operation enabled</p>	l16	rw	-	1, 2	-																											
605Eh	00h	<p>Fault reaction option code</p> <p>The object indicates the action during Fault reaction. The supported values are described as follows. 0: Disable drive function. The motor is free to rotate. 2: Slow down according to 6085h (quick stop deceleration). PDS state changes to Fault.</p>  <p>2507_h Velocity to trigger brake</p> <p>6040_h Enable operation Disable operation</p> <p>PDS state Operation enabled Fault reaction active Fault</p>	l16	rw	-	0 ~ 2	-																											
6060h	00h	<p>Modes of operation</p> <p>Set the operation mode of the drive. The supported operation modes are listed as follows.</p> <table border="1" data-bbox="290 1675 1209 1966"> <thead> <tr> <th>Value</th> <th>Op mode</th> <th>abbreviation</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>no mode change / assigned</td> <td>-</td> </tr> <tr> <td>1</td> <td>profile position</td> <td>pp</td> </tr> <tr> <td>3</td> <td>profile velocity</td> <td>pv</td> </tr> <tr> <td>4</td> <td>profile torque</td> <td>tq</td> </tr> <tr> <td>6</td> <td>homing</td> <td>hm</td> </tr> <tr> <td>8</td> <td>cyclic synchronous position</td> <td>csp</td> </tr> <tr> <td>9</td> <td>cyclic synchronous velocity</td> <td>csv</td> </tr> <tr> <td>10</td> <td>cyclic synchronous torque</td> <td>cst</td> </tr> </tbody> </table> <p>The default value is 0. If the object is set to 0 or an unsupported value, there will be no mode change. Stop the motor before switching the operation mode. If the operation mode is changed during motion, the behavior will not be guaranteed. If dual-loop control is adopted, only pp, hm and csp modes can be used.</p>	Value	Op mode	abbreviation	0	no mode change / assigned	-	1	profile position	pp	3	profile velocity	pv	4	profile torque	tq	6	homing	hm	8	cyclic synchronous position	csp	9	cyclic synchronous velocity	csv	10	cyclic synchronous torque	cst	l8	rw	Y	0 ~ 10	-
Value	Op mode	abbreviation																																
0	no mode change / assigned	-																																
1	profile position	pp																																
3	profile velocity	pv																																
4	profile torque	tq																																
6	homing	hm																																
8	cyclic synchronous position	csp																																
9	cyclic synchronous velocity	csv																																
10	cyclic synchronous torque	cst																																

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6061h	00h	Modes of operation display	I8	ro	Y	0 ~ 10	-
		The actual operation mode in the drive. The object will change to the commanded mode after internal mode is successfully changed. If the commanded mode is not supported, the object will remain unchanged.					
6062h	00h	Position demand value	I32	ro	Y	-2147483648 ~ 2147483647	inc
		The required position value.					
6063h	00h	Position actual internal value	I32	ro	Y	-2147483648 ~ 2147483647	count
		The actual value of motor position. In dual-loop control, the value is from external scale unit.					
6064h	00h	Position actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
		The actual value of motor position.					
6065h	00h	Following error window	U32	rw	Y	0 ~ 4294967295	inc
		The threshold of 60F4h (following error actual value). When 60F4h (following error actual value) exceeds 6065h, bit 13 of 6041h (statusword) will be 1. If the object is set to 0, a following error will always occur.					
6066h	00h	Following error time out	U16	rw	Y	0 ~ 65535	ms
		Refer to description of 6065h (following error window).					
6067h	00h	Position window	U32	rw	Y	0 ~ 4294967295	inc
		If the difference between 6062h (position demand value) and 6064h (position actual value) is within 6067h (position window) for longer than the time set by 6068h (position window time), bit 10 of 6041h will be set to 1. Once the position deviation exceeds 6067h, bit 10 of 6041h (statusword) will be set to 0.					
6068h	00h	Position window time	U16	rw	Y	0 ~ 65535	ms
		Refer to description of 6067h (position window).					
606Bh	00h	Velocity demand value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
		Internal command velocity					
606Ch	00h	Velocity actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
		The actual velocity of the motor.					
606Dh	00h	Velocity window	U16	rw	Y	0 ~ 65535	inc/s
		If the difference between 60FFh (target velocity) + 60B1h (velocity offset) and 606Ch (velocity actual value) is within 606Dh (velocity window) for longer than the time set by 606Eh (velocity window time), bit 10 of 6041h (statusword) will be set to 1. Once the velocity deviation exceeds 6067h (position window), bit 10 of 6041h (statusword) will be set to 0.					
606Eh	00h	Velocity window time	U16	rw	Y	0 ~ 65535	ms
		Refer to description of 606Dh (velocity window).					
6071h	00h	Target torque	I16	rw	Y	-32768 ~ 32767	0.1%
		Torque command. The value is limited by 6072h (max torque). Output target torque (force) of the drive = motor torque (force) constant x motor rated current x object 6071h (target torque) / 1000					
6072h	00h	Max torque	U16	rw	Y	0 ~ 65535	0.1%
		The configured maximum torque. The value is limited by the motor's ability.					
6074h	00h	Torque demand	I16	ro	Y	-32768 ~ 32767	0.1%
		Internal torque command.					
6075h	00h	Motor rated current	U32	ro	-	0 ~ 4294967295	mA
		The rated current of the motor.					
6076h	00h	Motor rated torque	U32	ro	-	0 ~ 4294967295	mNm
		The rated torque of the motor.					
6077h	00h	Torque actual value	I16	ro	Y	-32768 ~ 32767	0.1%
		The value is given per thousand of rated torque. The value is only for referenece.					
607Ah	00h	Target position	I32	rw	Y	-2147483648 ~ 2147483647	inc
		Position command.					
607Ch	00h	Home offset	I32	rw	Y	-2147483648 ~ 2147483647	inc
		After homing procedure is done, the detected index position is set to the value of 607Ch (home offset). Zero position = home position + home offset					

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit																																				
607Fh	00h	Max profile velocity	U32	rw	Y	0 ~ 4294967295	inc/s																																				
		The configured maximum velocity. The value is limited by the motor's ability.																																									
6081h	00h	Profile velocity	U32	rw	Y	0 ~ 4294967295	inc/s																																				
		The velocity during profile motion. The value is limited by 607Fh.																																									
6083h	00h	Profile acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²																																				
		The configured acceleration of profile motion.																																									
6084h	00h	Profile deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²																																				
		The configured deceleration of profile motion.																																									
6085h	00h	Quick stop deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²																																				
		The deceleration is used to stop the motor when quick stop function is activated and 605Ah (quick stop option code) is set to 2 or 6. Quick stop deceleration is also used when 605Dh (halt option code) and 605Eh (fault reaction option code) is 2.																																									
6087h	00h	Torque slope	U32	rw	Y	0 ~ 4294967295	0.1%/s																																				
		The rate of change of torque.																																									
6098h	00h	Homing method	I8	rw	Y	-128 ~ 127	-																																				
		The homing method used in hm mode. The homing method can not be changed during homing. The supported homing methods are method -5 to -1, 1, 2, 7 to 14, 33, 34 and 37. If homing procedure starts with unsupported homing method, bit 13 of 6041h (statusword) will be set to 1.																																									
6099h	-	Homing speeds	-	-	-	-	-																																				
	The velocity during hm mode.																																										
	00h	Number of entries	U8	ro	-	2	-																																				
	01h	Speed during search for switch	U32	rw	Y	0 ~ 4294967295	inc/s																																				
		The velocity during searching for switch signal.																																									
02h	Speed during search for zero	U32	rw	Y	0 ~ 4294967295	inc/s																																					
The velocity during searching for index signal.																																											
609Ah	00h	Homing acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²																																				
		The acceleration and deceleration in hm mode.																																									
60B1h	00h	Velocity offset	I32	rw	Y	-2147483648 ~ 2147483647	inc/s																																				
60B2h	00h	Torque offset	I16	rw	Y	-3000 ~ 3000	0.1%																																				
60B8h	00h	Touch probe function	U16	rw	Y	0 ~ 65535	-																																				
		E series servo drive only supports touch probe 1 function. Each bit is described as follows.																																									
		<table border="1"> <thead> <tr> <th>Bit</th> <th>Value</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0</td> <td>0</td> <td>Switch off touch probe 1</td> </tr> <tr> <td>1</td> <td>Enable touch probe 1</td> </tr> <tr> <td rowspan="2">1</td> <td>0</td> <td>Trigger first event</td> </tr> <tr> <td>1</td> <td>Continuous</td> </tr> <tr> <td rowspan="4">2~3</td> <td>00</td> <td>Trigger with external latch input 1 (EXT-PROBE1) signal</td> </tr> <tr> <td>01</td> <td>Trigger with Z-phase signal or position encoder</td> </tr> <tr> <td>10</td> <td>-</td> </tr> <tr> <td>11</td> <td>-</td> </tr> <tr> <td rowspan="2">4</td> <td>0</td> <td>Switch off sampling at positive edge of touch probe 1</td> </tr> <tr> <td>1</td> <td>Enable sampling at positive edge of touch probe 1</td> </tr> <tr> <td rowspan="2">5</td> <td>0</td> <td>Switch off sampling at negative edge of touch probe 1</td> </tr> <tr> <td>1</td> <td>Enable sampling at negative edge of touch probe 1</td> </tr> <tr> <td>6~15</td> <td>-</td> <td>-</td> </tr> </tbody> </table>							Bit	Value	Definition	0	0	Switch off touch probe 1	1	Enable touch probe 1	1	0	Trigger first event	1	Continuous	2~3	00	Trigger with external latch input 1 (EXT-PROBE1) signal	01	Trigger with Z-phase signal or position encoder	10	-	11	-	4	0	Switch off sampling at positive edge of touch probe 1	1	Enable sampling at positive edge of touch probe 1	5	0	Switch off sampling at negative edge of touch probe 1	1	Enable sampling at negative edge of touch probe 1	6~15	-	-
		Bit	Value	Definition																																							
		0	0	Switch off touch probe 1																																							
			1	Enable touch probe 1																																							
		1	0	Trigger first event																																							
			1	Continuous																																							
		2~3	00	Trigger with external latch input 1 (EXT-PROBE1) signal																																							
			01	Trigger with Z-phase signal or position encoder																																							
			10	-																																							
			11	-																																							
		4	0	Switch off sampling at positive edge of touch probe 1																																							
			1	Enable sampling at positive edge of touch probe 1																																							
		5	0	Switch off sampling at negative edge of touch probe 1																																							
1	Enable sampling at negative edge of touch probe 1																																										
6~15	-	-																																									
Do not enable positive and negative edges at the same time. Otherwise, the behavior is not guaranteed.																																											

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit																																													
60B9h	00h	Touch probe status	U16	ro	Y	0 ~ 65535	-																																													
		The state of the touch probe function. Each bit is described as follows.																																																		
		<table border="1"> <thead> <tr> <th>Bit</th> <th>Value</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td rowspan="2">0</td> <td>0</td> <td>Touch probe 1 is switched off</td> </tr> <tr> <td>1</td> <td>Touch probe 1 is enabled</td> </tr> <tr> <td rowspan="2">1</td> <td>0</td> <td>Touch probe 1 no positive edge value stored</td> </tr> <tr> <td>1</td> <td>Touch probe 1 positive edge value stored</td> </tr> <tr> <td rowspan="2">2</td> <td>0</td> <td>Touch probe 1 no negative edge value stored</td> </tr> <tr> <td>1</td> <td>Touch probe 1 negative edge value stored</td> </tr> <tr> <td>3~6</td> <td>-</td> <td>-</td> </tr> <tr> <td>7</td> <td>-</td> <td>Continuous latch status. This bit is toggled every time the latch position is updated.</td> </tr> <tr> <td>8~15</td> <td>-</td> <td>-</td> </tr> </tbody> </table>							Bit	Value	Definition	0	0	Touch probe 1 is switched off	1	Touch probe 1 is enabled	1	0	Touch probe 1 no positive edge value stored	1	Touch probe 1 positive edge value stored	2	0	Touch probe 1 no negative edge value stored	1	Touch probe 1 negative edge value stored	3~6	-	-	7	-	Continuous latch status. This bit is toggled every time the latch position is updated.	8~15	-	-																	
		Bit	Value	Definition																																																
		0	0	Touch probe 1 is switched off																																																
			1	Touch probe 1 is enabled																																																
		1	0	Touch probe 1 no positive edge value stored																																																
			1	Touch probe 1 positive edge value stored																																																
		2	0	Touch probe 1 no negative edge value stored																																																
			1	Touch probe 1 negative edge value stored																																																
3~6	-	-																																																		
7	-	Continuous latch status. This bit is toggled every time the latch position is updated.																																																		
8~15	-	-																																																		
60BAh	00h	Touch probe 1 positive edge	I32	ro	Y	-2147483648 ~ 2147483647	inc																																													
The position value of touch probe 1 at positive edge.																																																				
60BBh	00h	Touch probe 1 negative edge	I32	ro	Y	-2147483648 ~ 2147483647	inc																																													
The position value of touch probe 1 at negative edge.																																																				
60BCh	00h	Touch probe 2 positive edge	I32	ro	Y	-2147483648 ~ 2147483647	inc																																													
The position value of touch probe 2 at positive edge.																																																				
60C2h	-	Interpolation time period	-	-	-	-	-																																													
		The interpolation time cycle is set up automatically based on the used communication cycle.																																																		
		<table border="1"> <thead> <tr> <th>Communication cycle</th> <th>60C2:01h</th> <th>60C2:02h</th> </tr> </thead> <tbody> <tr> <td>250µs</td> <td>25</td> <td>-5</td> </tr> <tr> <td>500µs</td> <td>5</td> <td>-4</td> </tr> <tr> <td>1ms</td> <td>1</td> <td>-3</td> </tr> <tr> <td>2ms</td> <td>2</td> <td>-3</td> </tr> <tr> <td>4ms</td> <td>4</td> <td>-3</td> </tr> </tbody> </table>							Communication cycle	60C2:01h	60C2:02h	250µs	25	-5	500µs	5	-4	1ms	1	-3	2ms	2	-3	4ms	4	-3																										
		Communication cycle	60C2:01h	60C2:02h																																																
		250µs	25	-5																																																
		500µs	5	-4																																																
		1ms	1	-3																																																
2ms	2	-3																																																		
4ms	4	-3																																																		
00h	Number of entries	U8	ro	-	2	-																																														
01h	Interpolation time period value	U8	rw	-	0 ~ 255	-																																														
02h	Interpolation time index	I8	rw	-	-128 ~ 63	-																																														
60C5h	00h	Max acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²																																													
60C6h	00h	Max deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²																																													
60E0h	00h	Positive torque limit value	U16	rw	Y	0 ~ 65535	0.1%																																													
The configured maximum positive torque in the motor.																																																				
60E1h	00h	Negative torque limit value	U16	rw	Y	0 ~ 65535	0.1%																																													
The configured maximum negative torque in the motor.																																																				
60F4h	00h	Following error actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc																																													
60F4h (following error actual value) = 6062h (position demand value) – 6064h (position actual value)																																																				
60FCh	00h	Position demand internal value	I32	ro	Y	-2147483648 ~ 2147483647	count																																													
Internal command position																																																				
60FDh	00h	Digital inputs	U32	ro	Y	0 ~ FFFFFFFFh	-																																													
		The input status of external input signal. The definition of each bit is as follows.																																																		
		<table border="1"> <thead> <tr> <th>31 ... 26</th> <th>25</th> <th>24</th> <th>23</th> <th>22</th> <th>21</th> <th>20</th> <th>19</th> <th>18</th> <th>17</th> <th>16</th> </tr> </thead> <tbody> <tr> <td>Reserved</td> <td>SF2</td> <td>SF1</td> <td>I8</td> <td>I7</td> <td>I6</td> <td>I5</td> <td>I4</td> <td>I3</td> <td>I2</td> <td>I1</td> </tr> <tr> <td colspan="8">15 ... 3</td> <td>2</td> <td>1</td> <td>0</td> </tr> <tr> <td colspan="8">Reserved</td> <td>Home switch</td> <td>Positive limit switch</td> <td>Negative limit switch</td> </tr> </tbody> </table>							31 ... 26	25	24	23	22	21	20	19	18	17	16	Reserved	SF2	SF1	I8	I7	I6	I5	I4	I3	I2	I1	15 ... 3								2	1	0	Reserved								Home switch	Positive limit switch	Negative limit switch
		31 ... 26	25	24	23	22	21	20	19	18	17	16																																								
		Reserved	SF2	SF1	I8	I7	I6	I5	I4	I3	I2	I1																																								
15 ... 3								2	1	0																																										
Reserved								Home switch	Positive limit switch	Negative limit switch																																										

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit																																		
		The value of each bit is defined as follows. 0: switched off 1: switched on Note: When SF1 and SF2 are both OFF, STO status is ON.																																							
60FEh		Digital outputs	-	-	-	-	-																																		
		They are used to control the external output signal.																																							
		<table border="1"> <thead> <tr> <th>31 ... 21</th> <th>20</th> <th>19</th> <th>18</th> <th>17</th> <th>16</th> <th>15 ... 0</th> </tr> </thead> <tbody> <tr> <td>Reserved</td> <td>O5</td> <td>O4</td> <td>O3</td> <td>O2</td> <td>O1</td> <td>Reserved</td> </tr> </tbody> </table>	31 ... 21	20	19	18	17	16	15 ... 0	Reserved	O5	O4	O3	O2	O1	Reserved																									
	31 ... 21	20	19	18	17	16	15 ... 0																																		
	Reserved	O5	O4	O3	O2	O1	Reserved																																		
	-	This object controls the status of the general-purpose output signals from CN6 on E series servo drive. Subindex 1 is used to control the status of the output signals. Subindex 2 determines which output signals in subindex 1 are enabled. If drive status outputs are assigned to O1~O5 signals in object 3514h, 3515h and 3516h, the status of this object will be output in the logic of ORs. If any of these signals is assigned to functions that are enabled with object 3514h, 3515h, or 3516h, use Bit Masks in subindex 2 to disable the corresponding signal. By doing so, the signal will not be duplicated. Brake can only be controlled by this object when servo is not on.																																							
00h	Number of entries	U8	ro	-		2	-																																		
01h	Physical outputs	U32	rw	Y		0 ~ FFFFFFFFh	-																																		
		Control the output of the external signal. The value of each bit is defined as follows. 0: switched off 1: switched on																																							
	02h	Bit mask	U32	rw	Y		0 ~ FFFFFFFFh																																		
		The output signal mask. The value of each bit is defined as follows. 0: disable output 1: enable output																																							
60FFh	00h	Target velocity	I32	rw	Y		-2147483648 ~ 2147483647	inc/s																																	
		Velocity command. The value is limited by 607Fh (max profile velocity).																																							
6502h	00h	Supported drive modes	U32	ro	-		0 ~ FFFFFFFFh	-																																	
		The object indicates the operation modes supported by the drive. When the bit value is 1, the operation mode is supported.																																							
		<table border="1"> <thead> <tr> <th>Bit</th> <th>31...10</th> <th>9</th> <th>8</th> <th>7</th> <th>6</th> <th>5</th> <th>4</th> <th>3</th> <th>2</th> <th>1</th> <th>0</th> </tr> </thead> <tbody> <tr> <td>Op mode</td> <td>-</td> <td>cst</td> <td>csv</td> <td>csp</td> <td>ip</td> <td>hm</td> <td>-</td> <td>tq</td> <td>pv</td> <td>vl</td> <td>pp</td> </tr> <tr> <td>Value</td> <td>0</td> <td>1</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> <td>0</td> <td>1</td> <td>1</td> <td>0</td> <td>1</td> </tr> </tbody> </table>	Bit	31...10	9	8	7	6	5	4	3	2	1	0	Op mode	-	cst	csv	csp	ip	hm	-	tq	pv	vl	pp	Value	0	1	1	1	0	1	0	1	1	0	1			
Bit	31...10	9	8	7	6	5	4	3	2	1	0																														
Op mode	-	cst	csv	csp	ip	hm	-	tq	pv	vl	pp																														
Value	0	1	1	1	0	1	0	1	1	0	1																														

3.2.1 PDS (Power Drive System)

PDS that controls the drive can be operated by 6040h (controlword) from the master, drive internal control, or error detection signal. The state of PDS is reported by 6041h (statusword) from the drive. PDS FSA (Finite State Automaton) in Figure 3.2.1.1 defines the status and the control sequence of PDS.

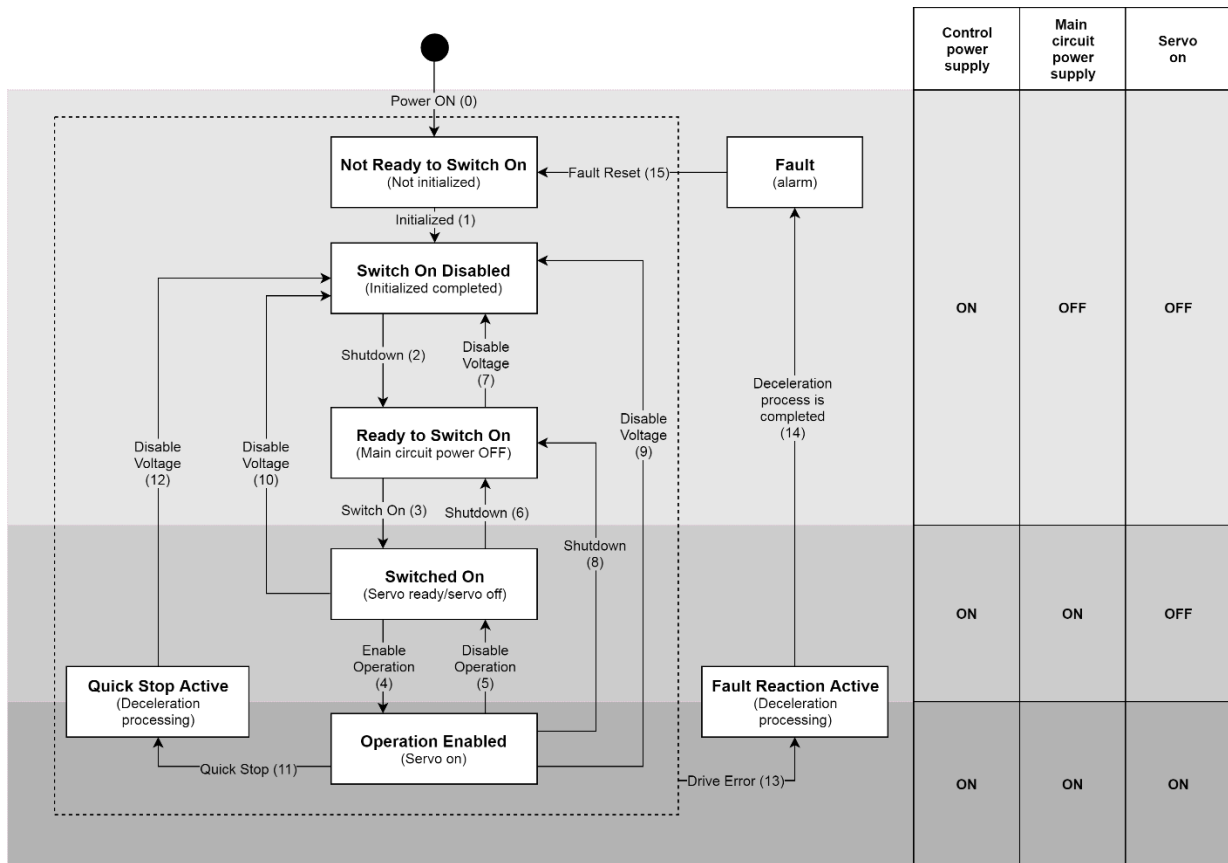


Figure 3.2.1.1

The events and actions of PDS state transition in E series servo drive are listed in Table 3.2.1.1. After the action is performed, the state transition will be done.

Table 3.2.1.1

Trans	Event	Action
0	An automatic transition after power-on or reset application.	Drive performs initialisation and self-test.
1	Automatic transition	Communication is activated.
2	Receive "Shutdown" command.	None
3	Receive "Switch on" command when high-level power is on.	None
4	Receive "Enable operation" command.	The drive function is enabled and all internal set-points are cleared.
5	Receive "Disable operation" command.	The drive function is disabled.

Trans	Event	Action
6	Receive "Shutdown" command.	None
7	1. Receive "Quick stop" or "Disable voltage" command. 2. ESM is in Init state.	None
8	Receive "Shutdown" command.	The drive function is disabled.
9	Receive "Disable voltage" command.	The drive function is disabled.
10	1. Receive "Quick stop" or "Disable voltage" command. 2. ESM is in Init state.	None
11	Receive "Quick stop" command.	"Quick stop" function starts.
12	An automatic transition when "Quick stop" function is completed	The drive function is disabled.
13	The drive detects an error.	The configured fault reaction function is executed.
14	An automatic transition after deceleration process is completed	The drive function is disabled.
15	Receive "Fault reset" command.	Reset the fault condition if no fault exists currently on the drive.

■ **PDS command code**

Table 3.2.1.2

Command	Bits of 6040h (controlword)					Transition
	Bit 7	Bit 3	Bit 2	Bit 1	Bit 0	
Shutdown	0	X	1	1	0	2, 6, 8
Switch on	0	0	1	1	1	3
Switch on + Enable operation	0	1	1	1	1	3+4*
Disable voltage	0	X	X	0	X	7, 9, 10, 12
Quick stop	0	X	0	1	X	7, 10, 11
Disable operation	0	0	1	1	1	5
Enable operation	0	1	1	1	1	4
Fault reset	0→1	X	X	X	X	15

*It will automatically transit to "Enable operation" after "Switched on" is executed.

■ **PDS state code**

Table 3.2.1.3

6041h (statusword)	PDS FSA state
xxxx xxxx x0xx 0000b	Not ready to switch on
xxxx xxxx x1xx 0000b	Switch on disabled
xxxx xxxx x01x 0001b	Ready to switch on
xxxx xxxx x01x 0011b	Switched on
xxxx xxxx x01x 0111b	Operation enabled
xxxx xxxx x00x 0111b	Quick stop active
xxxx xxxx x0xx 1111b	Fault reaction active
xxxx xxxx x0xx 1000b	Fault

■ **The procedure of clearing errors**

There are drive errors and EtherCAT related communication errors. The procedure of clearing errors are described as follows.

If there is a drive error,

- (1) Eliminate the cause of the drive error.
- (2) Execute “Fault reset” command to clear the drive’s error status.

If there is a EtherCAT related communication error,

- (1) Eliminate the cause of the communication error.
- (2) Set bit 4 of AL control register to 1 to clear the error state in ESC.
- (3) Master commands the drive to change ESM state to Op.
- (4) Master change bit 7 of 6040h (controlword) from 0 to 1 in Fault state to reset fault.
- (5) After the error is cleared, the PDS state changes from Fault to Switch on disabled.

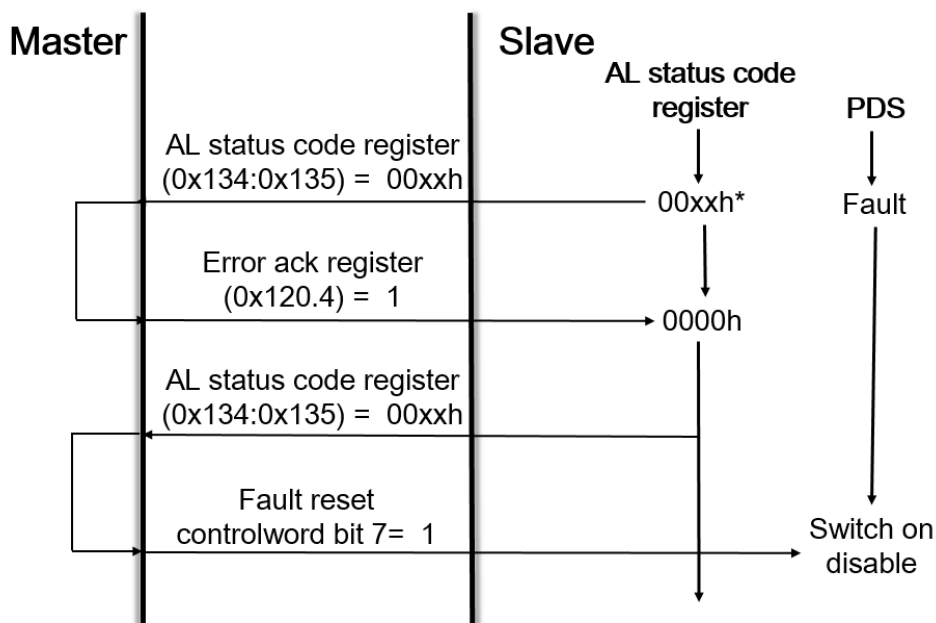


Figure 3.2.1.2

Note: Be sure to eliminate all errors detected before clearing error status.

3.2.2 Profile position mode (pp)

Profile position mode is for moving to the target position at the profile velocity and the profile acceleration. The structure of the trajectory generation is shown in Figure 3.2.2.1.

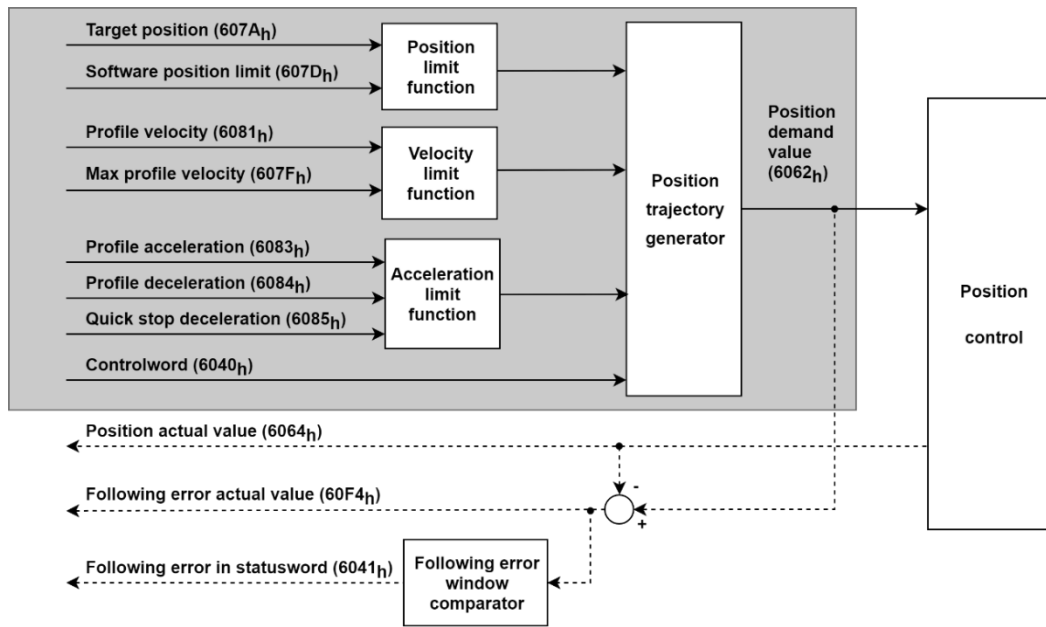


Figure 3.2.2.1

Note: When the motor is operating, do not modify Profile acceleration (6083h) and Profile deceleration (6084h).

Related objects for pp mode are listed in Table 3.2.2.1.

Table 3.2.2.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6040h	00h	Controlword	U16	rw	Y	0x0 ~ 0xFFFF	-
6041h	00h	Statusword	U16	ro	Y	0x0 ~ 0xFFFF	-
605Dh	00h	Halt option code	I16	ro	-	1, 2	-
6062h	00h	Position demand value	I32	ro	Y	-2147483648 ~ 2147483647	inc
6063h	00h	Position actual internal value	I32	ro	Y	-2147483648 ~ 2147483647	count
6064h	00h	Position actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
6065h	00h	Following error window	U32	rw	Y	0 ~ 4294967295	inc
6066h	00h	Following error time out	U16	rw	Y	0 ~ 65535	ms
6067h	00h	Position window	U32	rw	Y	0 ~ 4294967295	inc
6068h	00h	Position window time	U16	rw	Y	0 ~ 65535	ms
606Ch	00h	Velocity actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
6072h	00h	Max torque	U16	rw	Y	0 ~ 65535	0.1%
6074h	00h	Torque demand	I16	ro	Y	-32768 ~ 32767	0.1%
6076h	00h	Motor rated torque	U32	ro	-	0 ~ 4294967295	mNm

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6077h	00h	Torque actual value	I16	ro	Y	-32768 ~ 32767	0.1%
607Ah	00h	Target position	I32	rw	Y	-2147483648 ~ 2147483647	inc
607Fh	00h	Max profile velocity	U32	rw	Y	0 ~ 4294967295	inc/s
6081h	00h	Profile velocity	U32	rw	Y	0 ~ 4294967295	inc/s
6083h	00h	Profile acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
6084h	00h	Profile deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
6085h	00h	Quick stop deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60C5h	00h	Max acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60C6h	00h	Max deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60F4h	00h	Following error actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
60FCh	00h	Position demand internal value	I32	ro	Y	-2147483648 ~ 2147483647	count

■ Controlword (6040h) for pp mode

Table 3.2.2.2

Bit 9	Bit 5	Bit 4	Definition
change on set-point	change set immediately	new set-point	
0	0	0→1	Positioning is completed (target reached) before the next one gets started.
X	1	0→1	Immediately start next positioning.
1	0	0→1	Execute positioning with current profile velocity to the current set-point and then apply next positioning.

Table 3.2.2.3

Bit	Value	Definition
6 (absolute / relative)	0	Target position is an absolute value.
	1	Target position is a relative value.
8 (halt)	0	Execute or continue positioning.
	1	Axis is stopped according to 605Dh (halt option code).

■ Statusword (6041h) for pp mode

Table 3.2.2.4

Bit	Value	Definition
10 (target reached)	0	Halt (Bit 8 in controlword) = 0: target position not reached Halt = 1: axis decelerates
	1	Halt = 0: target position reached Halt = 1: velocity of axis is 0
12 (set-point acknowledge)	0	The last set-point is already processed. Wait for new set-point (the buffer is empty).
	1	Previous set-point is still in process.
13 (following error)	0	No following error
	1	Following error

■ Halt option code (605Dh) for pp mode

Table 3.2.2.5

Value	Definition
0	Reserved
1	Axis is stopped according to 6084h (profile deceleration) and remains in Operation enabled state.
2	Axis is stopped according to 6085h (quick stop deceleration) and remains in Operation enabled state.

■ Example of setting basic set-point

- [1] The master sets 607Ah (target position), and then sets bit 4 of 6040h (controlword) from 0 to 1 (edge trigger).
- [2] The drive acknowledges the new set-point by setting bit 12 of 6041h (statusword) to 1. Then, the drive starts to move toward target position from 607Ah (target position).
- [3] The master sets bit 4 of 6040h (controlword) to 0 after bit 12 of 6041h (statusword) is set to 1.
- [4] The drive sets bit 12 of 6041h (statusword) to 0 after bit 4 of 6040h (controlword) is set to 0.
- [5] When the motor reaches the target position, the drive sets bit 10 of 6041h (statusword) to 1.

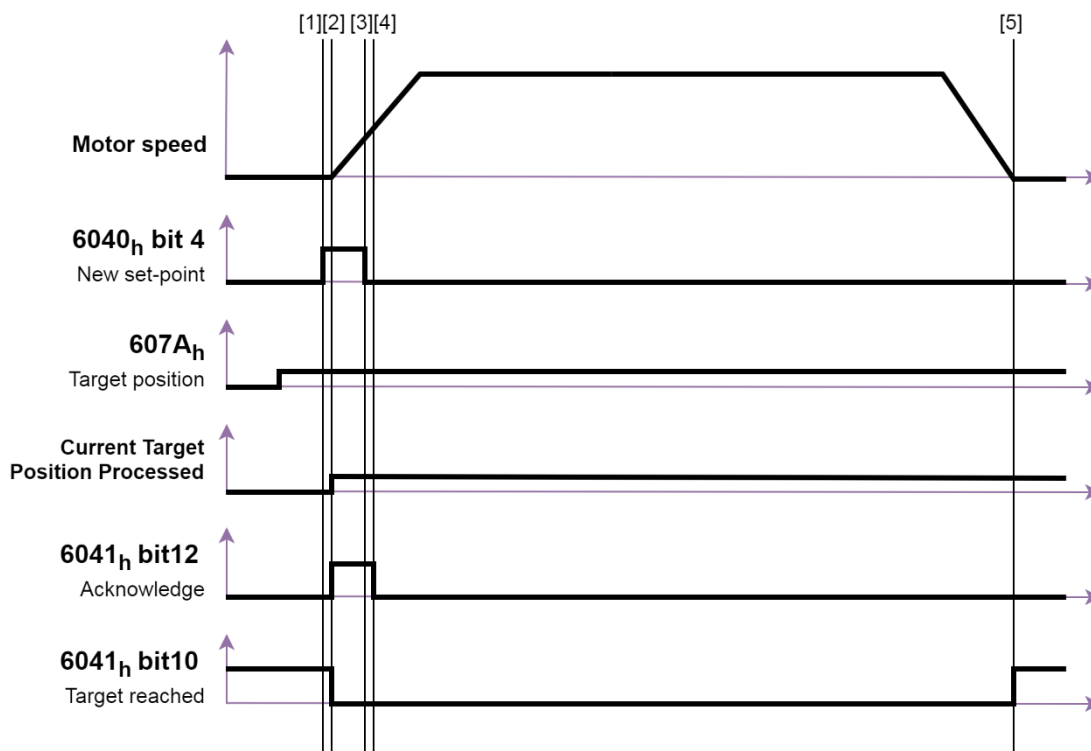


Figure 3.2.2.2

Note: The velocity of the motion is from 6081h (profile velocity), which is limited by 607Fh (max profile velocity).

■ Example of setting single set-point

When bit 5 of 6040h (controlword) is 1, the new set-point is immediately validated by bit 4 of 6040h (controlword). Thus, the set-point in progress will be interrupted.

- [1] After bit 12 of 6041h (statusword) is set to 0, the master changes the value of 607Ah (target position) and set bit 4 of 6040h from 0 to 1 (edge trigger).
- [2] The drive acknowledges the new set-point by setting bit 12 of 6041h (statusword) to 1. Then, the drive starts to move toward the new target position from 607Ah (target position).
- [3] The master sets bit 4 of 6040h (controlword) to 0 after bit 12 of 6041h (statusword) is set to 1.
- [4] The drive sets bit 12 of 6041h (statusword) to 0 after bit 4 of 6040h (controlword) is set to 0.

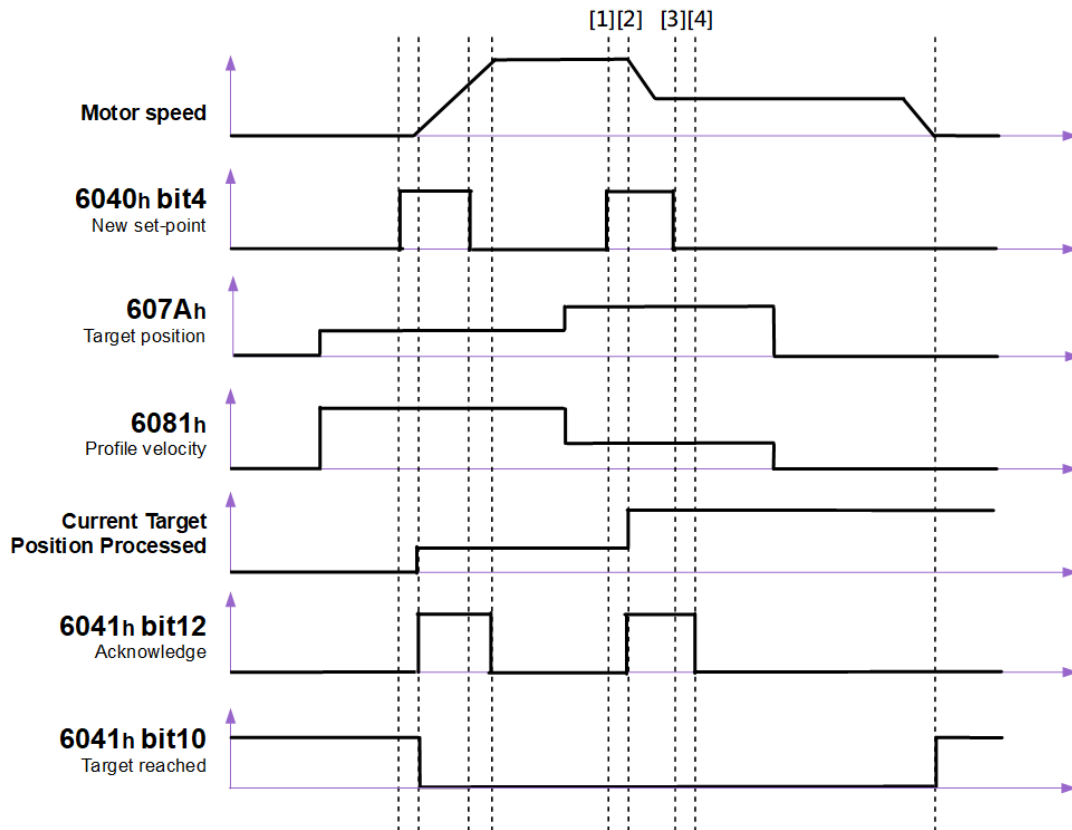


Figure 3.2.2.3

■ Example of setting set of set-points (change target during motion)

- [1] After bit 12 of 6041h (statusword) is set to 0, the master changes the value of 607Ah (target position) and set bit 4 of 6040h (controlword) from 0 to 1 (edge trigger).
- [2] The drive acknowledges the new set-point by setting bit 12 of 6041h (statusword) to 1. The drive buffers 607Ah (target position) as a new target position and continues the ongoing target position.
- [3] The master sets bit 4 of 6040h (controlword) to 0 after bit 12 of 6041h (statusword) is set to 1.
- [4] The drive starts to move to the new target position after the ongoing set-point is completed. Then, the buffer becomes empty, and bit 12 of 6041h (statusword) is set to 0.

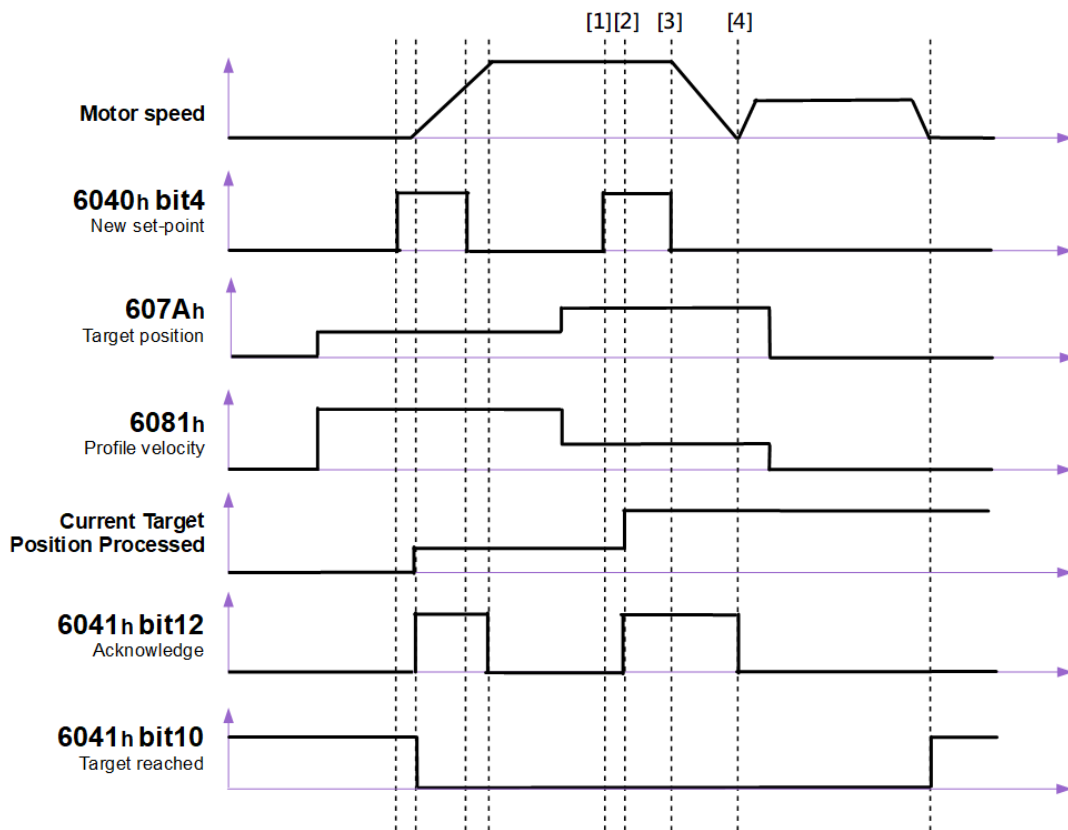


Figure 3.2.2.4

Note: If the new target position is in the opposite direction, the motor will stop at the previous target position, and a reverse operation will be performed.

■ Example of buffering set-points

E series servo drive only supports 2 set-points maximum. The handling of the set-points is shown as follows.

- [1] When there is no set-point in progress, a new set-point A is immediately effective.
- [2] When there is a set-point in progress, the new set-point B and C are stored in the buffers.
- [3] When all set-point buffers are all in use (bit 12 of 6041h is 1), the new set-point D is discarded.
- [4] When all set-point buffers are all in use (bit 12 of 6041h is 1) and bit 5 of 6040h (controlword) is set to 1, the new set-point E is immediately processed as a single set-point. All previous setpoints are discarded.
- [5] Bit 10 of 6041h (statusword) remains 0 until all set-points are processed.

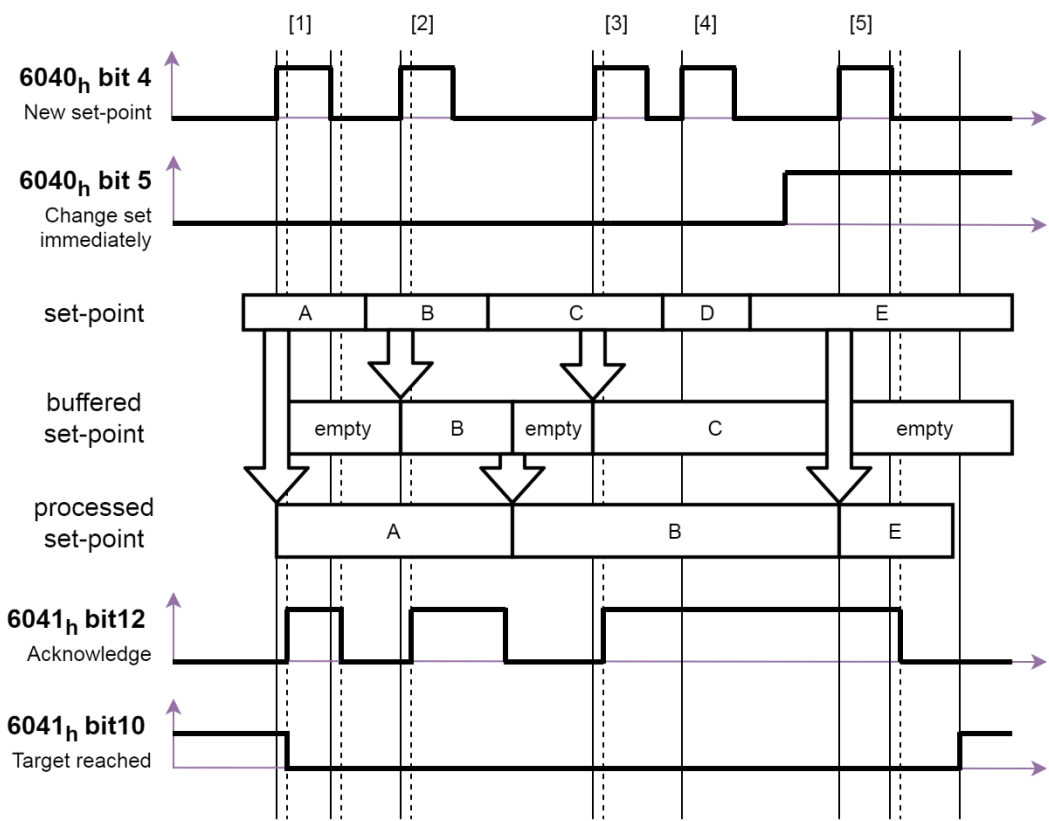


Figure 3.2.2.5

■ Example of halt bit

When bit 8 of 6040h (controlword) is set to 1 in pp mode, the motion will be temporarily stopped. After bit 8 of 6040h (controlword) returns to 0, unfinished set-points will be resumed.

- [1] When there is no set-point in process, the new set-point A is taken immediately.
- [2] When set-point A is still in process, the new set-point B is stored if the buffer is empty.
- [3] When set-point A is still in process but bit 8 of 6040h (controlword) is set to 1, the motion is halted. After the motor speed decelerates to 0, bit 10 of 6041h (statusword) changes to 1.
- [4] When bit 8 of 6040h (controlword) returns to 0, the motion towards set-point A is resumed. Bit 10 of 6041h (statusword) changes to 0.
- [5] After set-point A is reached, set-point B is processed.
- [6] Bit 10 of 6041h (statusword) remains 0 until all set-points are processed.

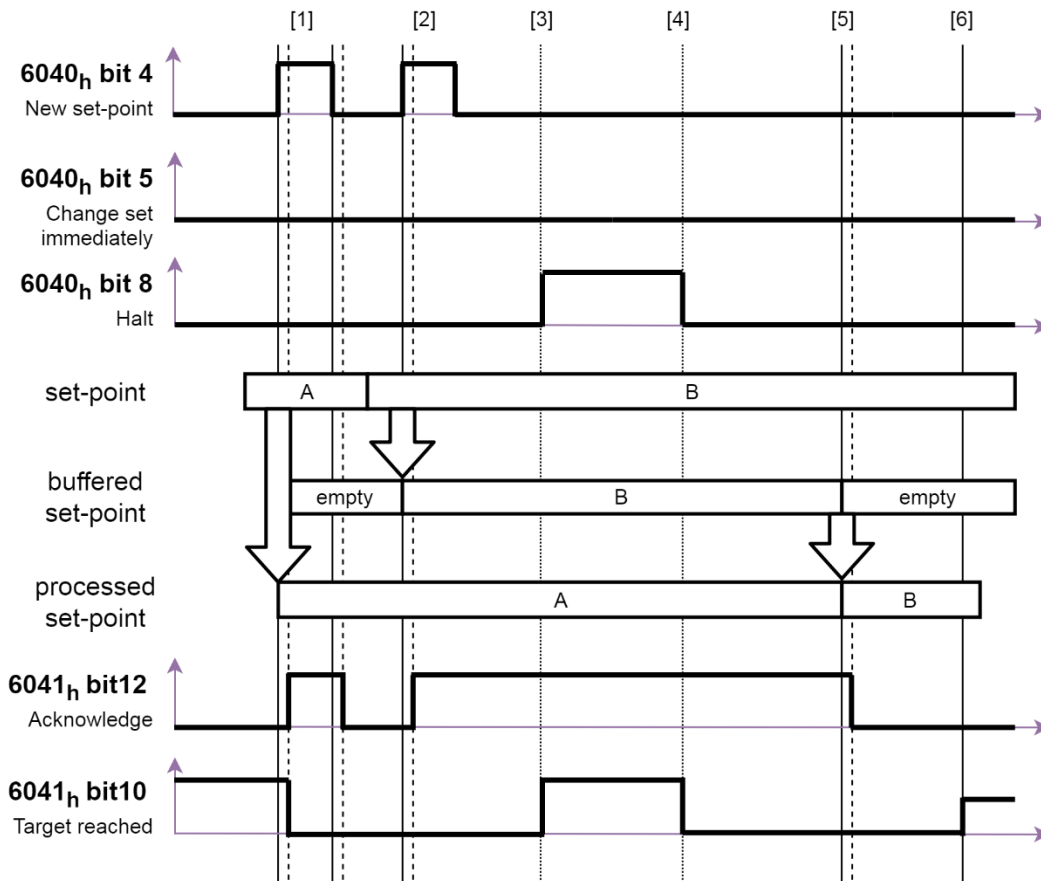


Figure 3.2.2.6

3.2.3 Cyclic synchronous position mode (csp)

The motion profile (trajectory) is generated by the master. Therefore, the position command is updated by the master every communication cycle. Cyclic synchronous position mode is used in DC mode. Before enabling the motor in csp mode or switching to csp mode, be sure to align 607Ah (target position) with 6064h (position actual value) first. Otherwise, it may cause dangerous behavior. If the change amount of 607Ah (target position) exceeds the following speed range, the target position will be ignored.

$$\frac{(\text{Target position (607A}_h) - \text{Position demand value (6062}_h))}{\text{Interpolation time period (60C2}_h)} < \text{Velocity limit (2316}_h) \text{ [unit: rpm]}$$

The structure of the trajectory generation is shown in Figure 3.2.3.1.

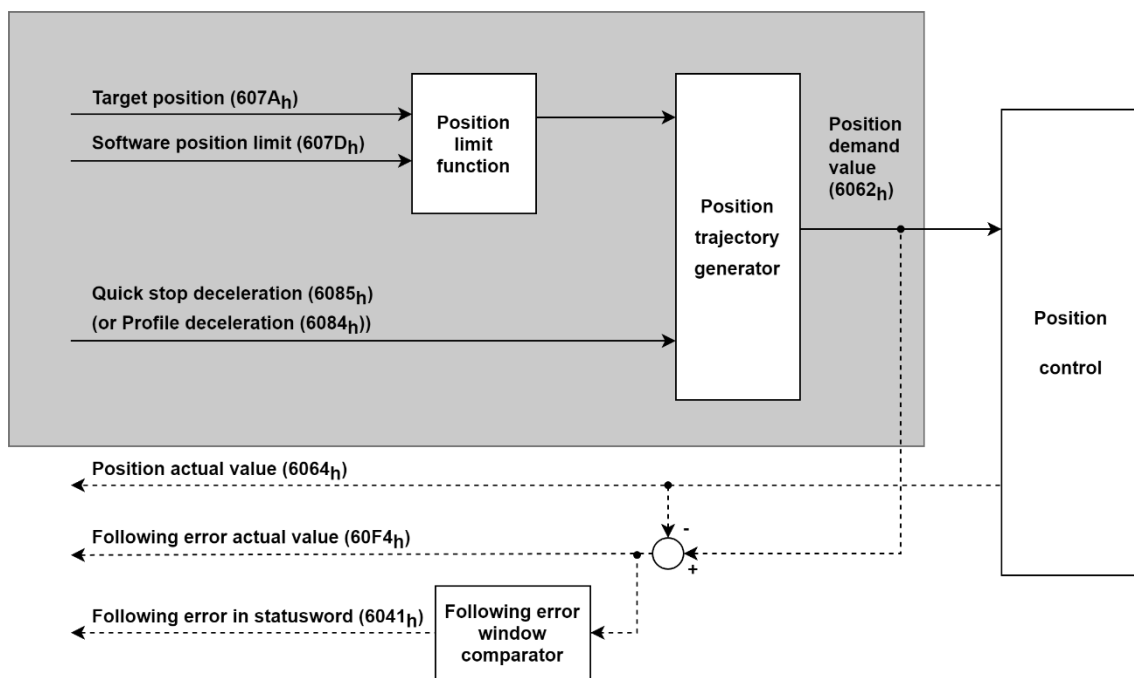


Figure 3.2.3.1

Related objects for csp mode are listed in Table 3.2.3.1.

Table 3.2.3.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6040h	00h	Controlword	U16	rw	Y	0x0 ~ 0xFFFF	-
6041h	00h	Statusword	U16	ro	Y	0x0 ~ 0xFFFF	-
6062h	00h	Position demand value	I32	ro	Y	-2147483648 ~ 2147483647	inc
6063h	00h	Position actual internal value	I32	ro	Y	-2147483648 ~ 2147483647	count
6064h	00h	Position actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
6065h	00h	Following error window	U32	rw	Y	0 ~ 4294967295	inc
6066h	00h	Following error time out	U16	rw	Y	0 ~ 65535	ms
606Ch	00h	Velocity actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
6072h	00h	Max torque	U16	rw	Y	0 ~ 65535	0.1%
6074h	00h	Torque demand	I16	ro	Y	-32768 ~ 32767	0.1%
6076h	00h	Motor rated torque	U32	ro	-	0 ~ 4294967295	mNm
6077h	00h	Torque actual value	I16	ro	Y	-32768 ~ 32767	0.1%
607Ah	00h	Target position	I32	rw	Y	-2147483648 ~ 2147483647	inc
6084h	00h	Profile deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
6085h	00h	Quick stop deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60B1h	00h	Velocity offset	I32	rw	Y	-2147483648 ~ 2147483647	inc/s
60B2h	00h	Torque offset	I16	rw	Y	-32768 ~ 32767	0.1%
60C2h	-	Interpolation time period	-	-	-	-	-
	00h	Number of entries	U8	ro	-	2	-
	01h	Interpolation time period value	U8	rw	-	0 ~ 255	-
	02h	Interpolation time index	I8	rw	-	-128 ~ 63	-
60F4h	00h	Following error actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
60FCh	00h	Position demand internal value	I32	ro	Y	-2147483648 ~ 2147483647	count

■ Statusword (6041h) for csp mode

Table 3.2.3.2

Bit	Value	Definition
12 (drive follows command value)	0	Drive does not follow the command value. (Ignore target position.)
	1	Drive follows the command value. (Target position is viewed as an input to position control loop.)
13 (following error)	0	No following error
	1	Following error

3.2.4 Homing mode (hm)

This mode is for incremental encoder. After homing procedure is done, the home position of the machine will be found. To make position zero offset from the home position, add home offset to the home position. After homing is completed, the values of the following objects are set accordingly.

6062h (position demand value) = 6064h (position actual value) = 607Ch (home offset)

6063h (position actual internal value) = 60FCh (position demand internal value) = 0

The input and output objects of hm mode are shown in Figure 3.2.4.1.

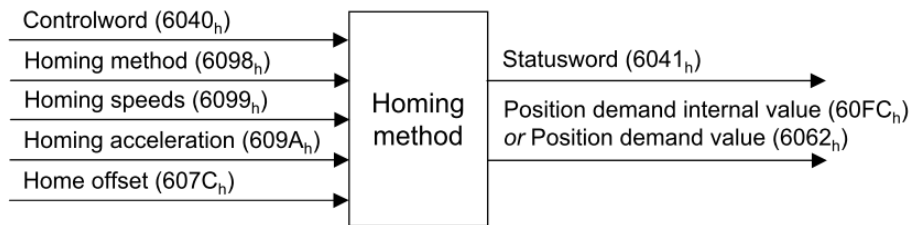


Figure 3.2.4.1

Related objects for hm mode are listed in Table 3.2.4.1.

Table 3.2.4.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6040h	00h	Controlword	U16	rw	Y	0x0 ~ 0xFFFF	-
6041h	00h	Statusword	U16	ro	Y	0x0 ~ 0xFFFF	-
6062h	00h	Position demand value	I32	ro	Y	-2147483648 ~ 2147483647	inc
6063h	00h	Position actual internal value	I32	ro	Y	-2147483648 ~ 2147483647	count
6064h	00h	Position actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
606Ch	00h	Velocity actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
6072h	00h	Max torque	U16	rw	Y	0 ~ 65535	0.1%
6074h	00h	Torque demand	I16	ro	Y	-32768 ~ 32767	0.1%
6076h	00h	Motor rated torque	U32	ro	-	0 ~ 4294967295	mNm
6077h	00h	Torque actual value	I16	ro	Y	-32768 ~ 32767	0.1%
607Ch	00h	Home offset	I32	rw	Y	-2147483648 ~ 2147483647	inc
607Fh	00h	Max profile velocity	U32	rw	Y	0 ~ 4294967295	inc/s
6085h	00h	Quick stop deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
6098h	00h	Homing method	I8	rw	Y	-128 ~ 127	-
6099h	-	Homing speeds	-	-	-	-	-
	00h	Number of entries	U8	ro	-	2	-
	01h	Speed during search for switch	U32	rw	Y	0 ~ 4294967295	inc/s
	02h	Speed during search for zero	U32	rw	Y	0 ~ 4294967295	inc/s

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
609Ah	00h	Homing acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60C5h	00h	Max acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60C6h	00h	Max deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²

■ Controlword (6040h) for hm mode

Table 3.2.4.2

Bit	Value	Definition
4 (homing operation start)	0	Do not start homing procedure.
	1	Start or continue homing procedure.
8 (halt)	0	Enable bit 4.
	1	Stop axis.

■ Statusword (6041h) for hm mode

Table 3.2.4.3

Bit 13	Bit 12	Bit 10	Definition
homing error	homing attained	target reached	
0	0	0	Homing procedure is in progress.
0	0	1	Homing procedure is interrupted or not started.
0	1	0	Homing is attained, but target is not reached.
0	1	1	Homing procedure is successfully completed.
1	0	0	Homing error occurs, and velocity is not 0.
1	0	1	Homing error occurs, and velocity is 0.
1	1	X	Reserved

Note:

- Bit 12 will be cleared to zero in the following cases.
 - The drive is power cycled
 - The operation mode is changed to other modes.
- If multi-turn absolute encoder is used, bit 12 will always be 1.

■ Example of successful homing procedure

- [1] Set 6098h (homing method) to the required homing method. Homing methods supported by E series EtherCAT drive are given in Table 3.2.4.4.
- [2] Accordingly set homing parameters, 609Ah (homing acceleration), 6099:01h (speed during search for switch), 6099:02h (speed during search for zero) and 607Ch (home offset).
- [3] Set bit 4 of 6040h (controlword) from 0 to 1. Then, the homing procedure starts.
- [4] When the homing procedure is successfully completed, the drive sets bit 10 and bit 12 of 6041h (statusword) to 1.

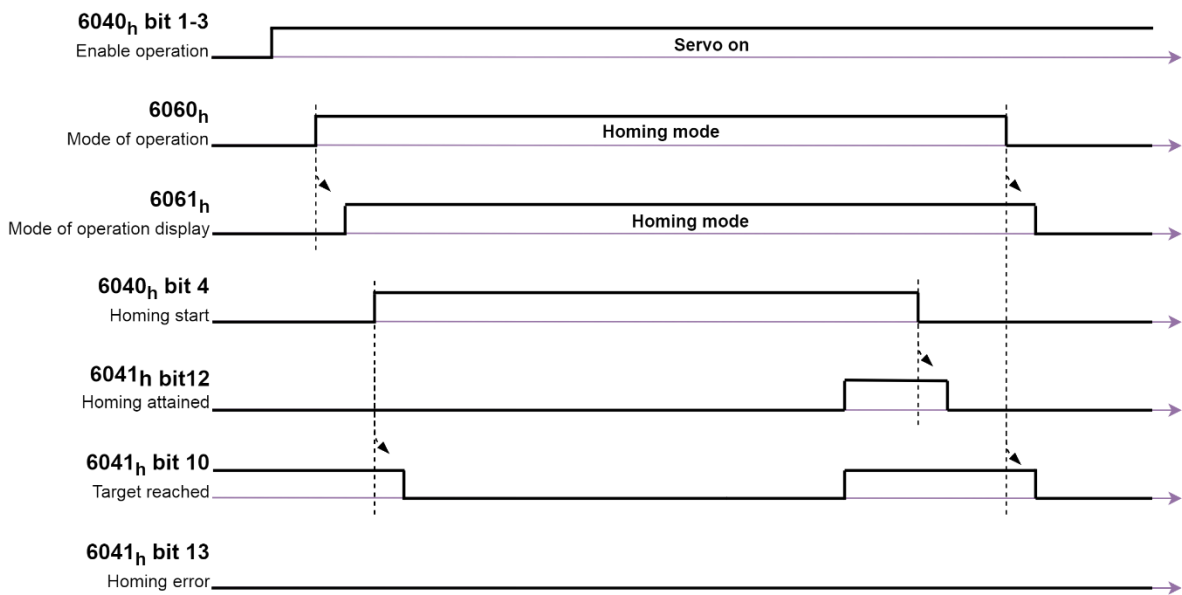
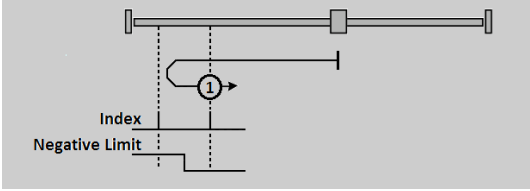
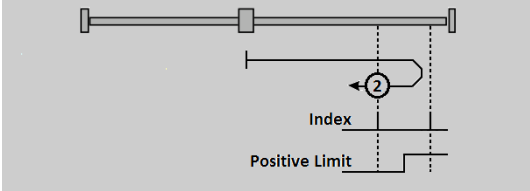
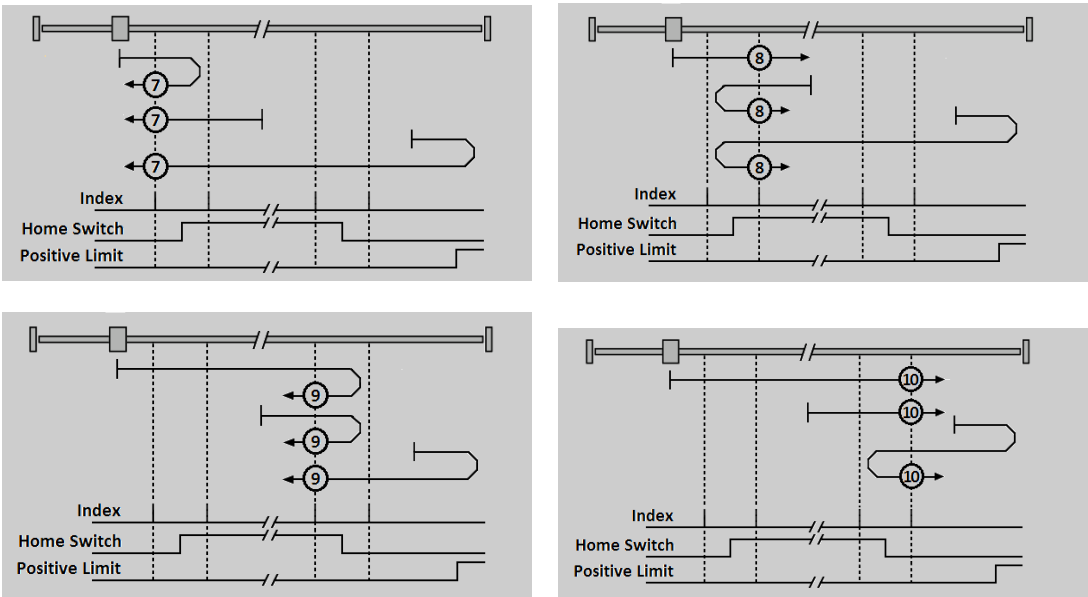


Figure 3.2.4.2

Table 3.2.4.4

Method	Description
1	<p>Homing on negative limit switch and index pulse If the negative limit switch is inactive, the initial direction of the movement is leftward. The home position is at the first index pulse to the right of the position where the negative limit switch becomes inactive. If the negative limit is not assigned, homing will fail.</p> 
2	<p>Homing on positive limit switch and index pulse If the positive limit switch is inactive, the initial direction of the movement is rightward. The home position is at the first index pulse to the left of the position where the positive limit switch becomes inactive. If the positive limit is not assigned, homing will fail.</p> 
7~10	<p>Homing on home switch and index pulse – positive initial direction The initial direction of the movement depends on the home switch edge being sought. If the home switch is active at the beginning, the initial direction of method 7 and 8 is negative. The initial direction of all other cases is positive. If the home switch and the positive limit are not assigned, homing will fail.</p> 
11~14	<p>Homing on home switch and index pulse – negative initial direction The initial direction of the movement depends on the home switch edge being sought. If the home switch is active at the beginning, the initial direction of method 11 and 12 is positive. The initial direction of all other cases is negative. If the home switch and the negative limit are not assigned, homing will fail.</p>

Method	Description
<p>33~34</p>	<p>Homing on index pulse The direction of homing is negative (33) or positive (34) respectively. The home position is at the index pulse found in the selected direction.</p>
<p>37</p>	<p>Homing on current position Current position of the motor is defined as the home position. In this method, the drive does not need to be in Operation enabled state. Objects are initialized as follows.</p> <p>6062h (position demand value) = 6064h (position actual value) = 607Ch (home offset) 6063h (position actual internal value) = 60FCh (position demand internal value) = 0</p>

3.2.5 Profile velocity mode (pv)

The motor speed is output according to the profile acceleration and the profile deceleration until it reaches the target velocity. The structure of the trajectory generation is shown in Figure 3.2.5.1.

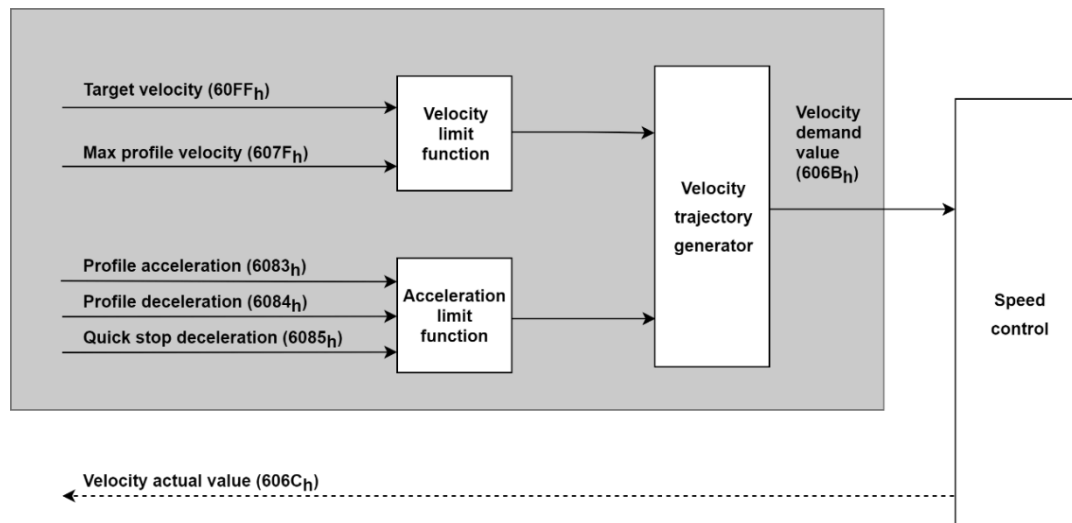


Figure 3.2.5.1

Note: When the motor is operating, do not modify Profile acceleration (6083h) and Profile deceleration (6084h).

Related objects for pv mode are listed in Table 3.2.5.1.

Table 3.2.5.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6040h	00h	Controlword	U16	rw	Y	0x0 ~ 0xFFFF	-
6041h	00h	Statusword	U16	ro	Y	0x0 ~ 0xFFFF	-
6062h	00h	Position demand value	I32	ro	Y	-2147483648 ~ 2147483647	inc
6063h	00h	Position actual internal value	I32	ro	Y	-2147483648 ~ 2147483647	count
6064h	00h	Position actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
606Bh	00h	Velocity demand value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
606Ch	00h	Velocity actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
606Dh	00h	Velocity window	U16	rw	Y	0 ~ 65535	inc/s
606Eh	00h	Velocity window time	U16	rw	Y	0 ~ 65535	ms
6072h	00h	Max torque	U16	rw	Y	0 ~ 65535	0.1%
6076h	00h	Motor rated torque	U32	ro	-	0 ~ 4294967295	mNm
6077h	00h	Torque actual value	I16	ro	Y	-32768 ~ 32767	0.1%
607Fh	00h	Max profile velocity	U32	rw	Y	0 ~ 4294967295	inc/s
6083h	00h	Profile acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
6084h	00h	Profile deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
6085h	00h	Quick stop deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60C5h	00h	Max acceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
60C6h	00h	Max deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60FFh	00h	Target velocity	I32	rw	Y	-2147483648 ~ 2147483647	inc/s

■ Controlword (6040h) for pv mode

Table 3.2.5.2

Bit	Value	Definition
8 (halt)	0	Execute or continue the motion.
	1	Axis is stopped according to 605Dh (halt option code).

■ Statusword (6041h) for pv mode

Table 3.2.5.3

Bit	Value	Definition
10 (target reached)	0	Halt (Bit 8 in controlword) = 0: target velocity not reached Halt = 1: axis decelerates
	1	Halt = 0: target velocity reached Halt = 1: velocity of axis is 0
12 (speed)	0	Speed is not equal to 0.
	1	Speed is equal to 0.

3.2.6 Cyclic synchronous velocity mode (csv)

The motion profile (trajectory) is generated by the master. 60C2h (interpolation time period) indicates the cycle of updating 60FFh (target velocity). The structure of the trajectory generation is shown in Figure 3.2.6.1.

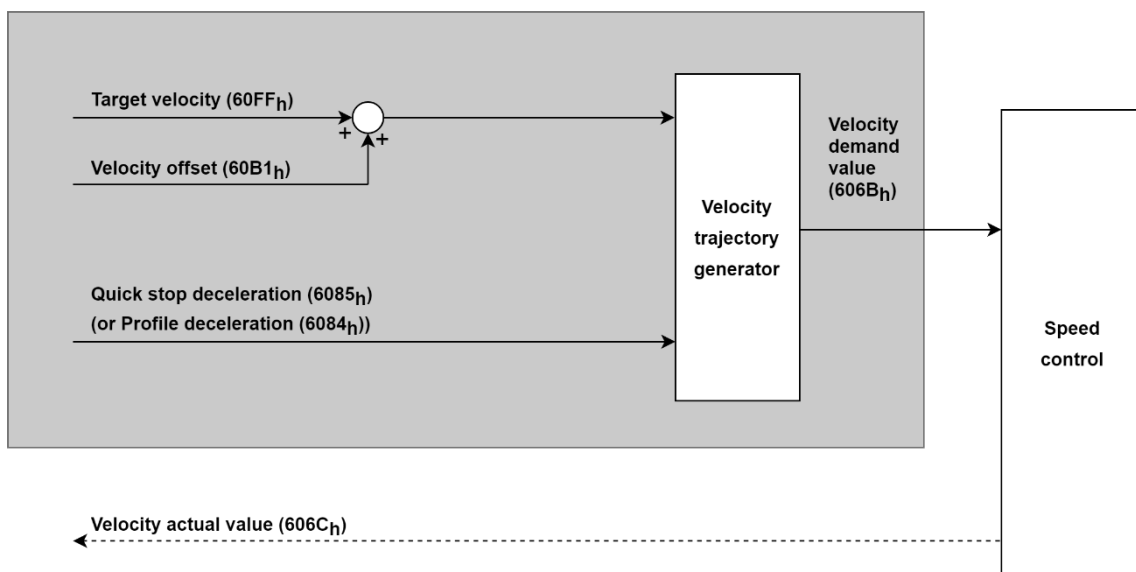


Figure 3.2.6.1

Related objects for csv mode are listed in Table 3.2.6.1.

Table 3.2.6.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6040h	00h	Controlword	U16	rw	Y	0x0 ~ 0xFFFF	-
6041h	00h	Statusword	U16	ro	Y	0x0 ~ 0xFFFF	-
6063h	00h	Position actual internal value	I32	ro	Y	-2147483648 ~ 2147483647	count
6064h	00h	Position actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
606Bh	00h	Velocity demand value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
606Ch	00h	Velocity actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
606Dh	00h	Velocity window	U16	rw	Y	0 ~ 65535	inc/s
606Eh	00h	Velocity window time	U16	rw	Y	0 ~ 65535	ms
6072h	00h	Max torque	U16	rw	Y	0 ~ 65535	0.1%
6074h	00h	Torque demand	I16	ro	Y	-32768 ~ 32767	0.1%
6076h	00h	Motor rated torque	U32	ro	-	0 ~ 4294967295	mNm
6077h	00h	Torque actual value	I16	ro	Y	-32768 ~ 32767	0.1%
6085h	00h	Quick stop deceleration	U32	rw	Y	0 ~ 4294967295	inc/s ²
60B1h	00h	Velocity offset	I32	rw	Y	-2147483648 ~ 2147483647	inc/s
60B2h	00h	Torque offset	I16	rw	Y	-32768 ~ 32767	0.1%
60C2h	-	Interpolation time period	-	-	-	-	-
	00h	Number of entries	U8	ro	-	2	-
	01h	Interpolation time period value	U8	rw	-	0 ~ 255	-
	02h	Interpolation time index	I8	rw	-	-128 ~ 63	-
60FFh	00h	Target velocity	I32	rw	Y	-2147483648 ~ 2147483647	inc/s

■ Statusword (6041h) for csv mode

Table 3.2.6.2

Bit	Value	Definition
12 (drive follows command value)	0	Drive does not follow the command value. (Ignore target velocity.)
	1	Drive follows the command value. (Target velocity is viewed as an input to velocity control loop.)

3.2.7 Profile torque mode (tq)

The torque is output up to the target torque according to the torque slope setting. Torque command is generated from 6071h (target torque) and 6087h (torque slope), as Figure 3.2.7.1 shows.

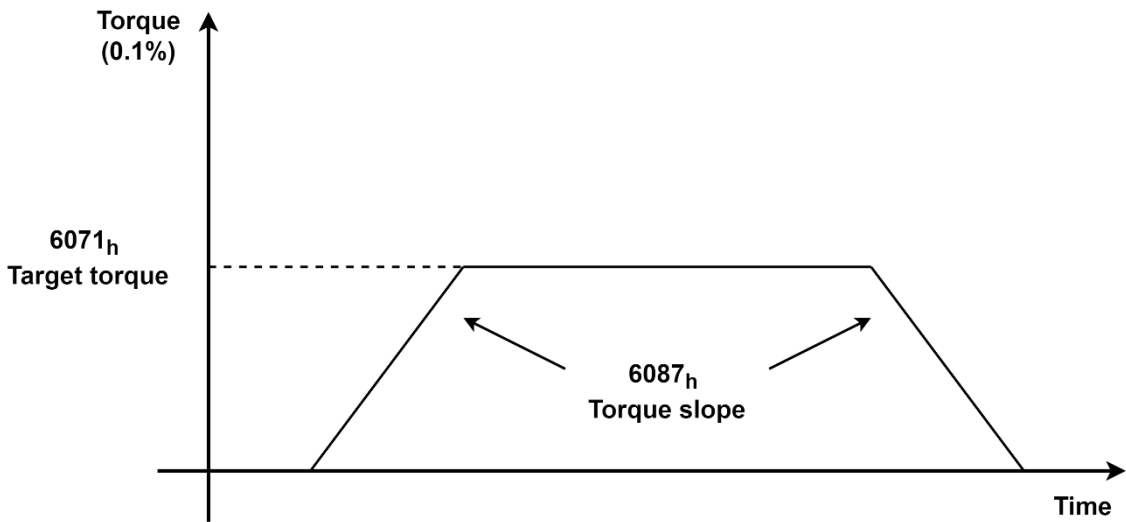


Figure 3.2.7.1

The structure of the trajectory generation is shown in Figure 3.2.7.2.

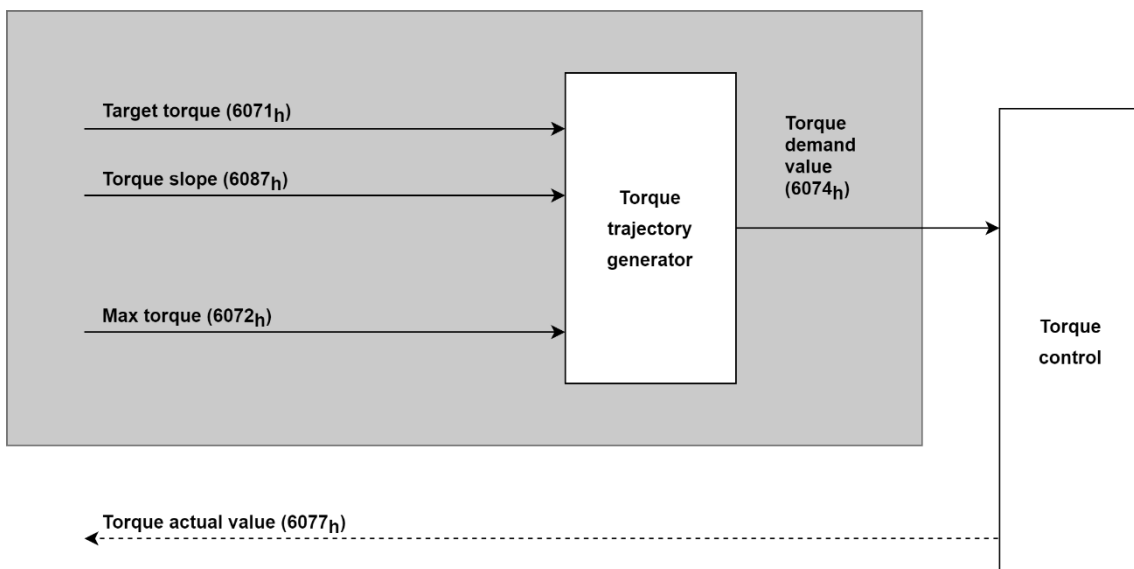


Figure 3.2.7.2

Related objects for tq mode are listed in Table 3.2.7.1.

Table 3.2.7.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6040h	00h	Controlword	U16	rw	Y	0x0 ~ 0xFFFF	-
6041h	00h	Statusword	U16	ro	Y	0x0 ~ 0xFFFF	-
6063h	00h	Position actual internal value	I32	ro	Y	-2147483648 ~ 2147483647	count
6064h	00h	Position actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
606Ch	00h	Velocity actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
6071h	00h	Target torque	I16	rw	Y	-32768 ~ 32767	0.1%
6072h	00h	Max torque	U16	rw	Y	0 ~ 65535	0.1%
6074h	00h	Torque demand	I16	ro	Y	-32768 ~ 32767	0.1%
6075h	00h	Motor rated current	U32	ro	-	0 ~ 4294967295	mA
6076h	00h	Motor rated torque	U32	ro	-	0 ~ 4294967295	mNm
6077h	00h	Torque actual value	I16	ro	Y	-32768 ~ 32767	0.1%
6087h	00h	Torque slope	U32	rw	Y	0 ~ 4294967295	0.1%/s
60B2h	00h	Torque offset	I16	rw	Y	-32768 ~ 32767	0.1%
60E0h	00h	Positive torque limit value	U16	rw	Y	0 ~ 65535	0.1%
60E1h	00h	Negative torque limit value	U16	rw	Y	0 ~ 65535	0.1%

■ Controlword (6040h) for tq mode

Table 3.2.7.2

Bit	Value	Definition
8 (halt)	0	Execute or continue the motion.
	1	Axis is stopped according to 605Dh (halt option code).

■ Statusword (6041h) for tq mode

Table 3.2.7.3

Bit	Value	Definition
10 (target reached)	0	Halt (Bit 8 in controlword) = 0: target torque not reached Halt = 1: axis decelerates
	1	Halt = 0: target torque reached Halt = 1: velocity of axis is 0

3.2.8 Cyclic synchronous torque mode (cst)

The motion profile (trajectory) is generated by the master. 60C2h (interpolation time period) indicates the cycle of update 6071h (target torque). The structure of the trajectory generation is shown in Figure 3.2.8.1.

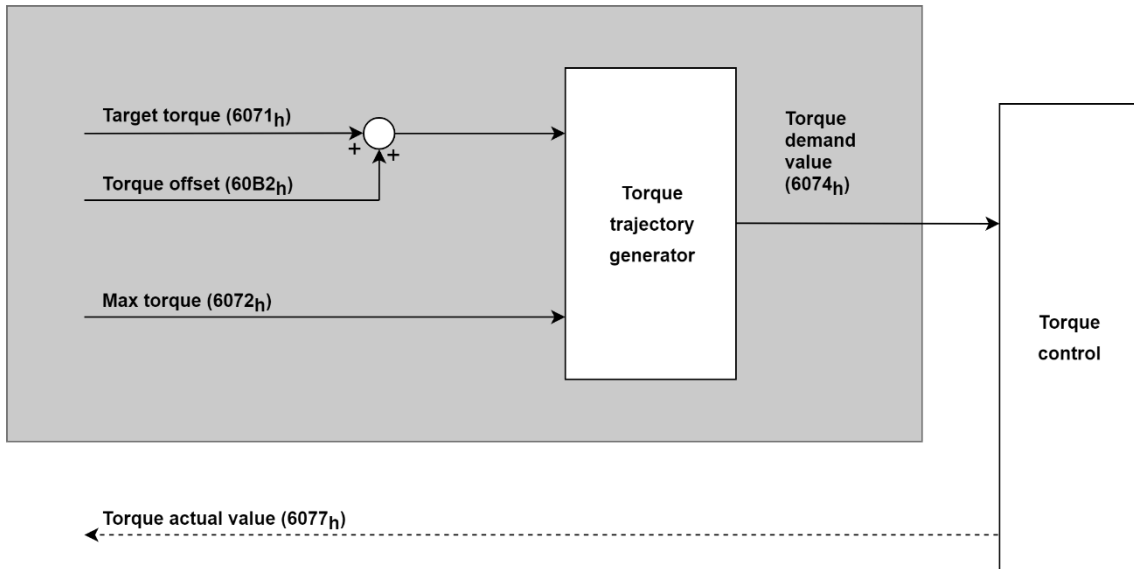


Figure 3.2.8.1

Related objects for cst mode are listed in Table 3.2.8.1.

Table 3.2.8.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
6040h	00h	Controlword	U16	rw	Y	0x0 ~ 0xFFFF	-
6041h	00h	Statusword	U16	ro	Y	0x0 ~ 0xFFFF	-
6063h	00h	Position actual internal value	I32	ro	Y	-2147483648 ~ 2147483647	count
6064h	00h	Position actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc
606Ch	00h	Velocity actual value	I32	ro	Y	-2147483648 ~ 2147483647	inc/s
6071h	00h	Target torque	I16	rw	Y	-32768 ~ 32767	0.1%
6072h	00h	Max torque	U16	rw	Y	0 ~ 65535	0.1%
6074h	00h	Torque demand	I16	ro	Y	-32768 ~ 32767	0.1%
6075h	00h	Motor rated current	U32	ro	-	0 ~ 4294967295	mA
6076h	00h	Motor rated torque	U32	ro	-	0 ~ 4294967295	mNm
6077h	00h	Torque actual value	I16	ro	Y	-32768 ~ 32767	0.1%
60B2h	00h	Torque offset	I16	rw	Y	-32768 ~ 32767	0.1%
60C2h	-	Interpolation time period	-	-	-	-	-
	00h	Number of entries	U8	ro	-	2	-
	01h	Interpolation time period value	U8	rw	-	0 ~ 255	-
	02h	Interpolation time index	I8	rw	-	-128 ~ 63	-
60E0h	00h	Positive torque limit value	U16	rw	Y	0 ~ 65535	0.1%
60E1h	00h	Negative torque limit value	U16	rw	Y	0 ~ 65535	0.1%

■ Statusword (6041h) for cst mode

Table 3.2.8.2

Bit	Value	Definition
12 (drive follows command value)	0	Drive does not follow the command value. (Ignore target torque.)
	1	Drive follows the command value. (Target torque is viewed as an input to torque control loop.)

3.2.9 Touch probe function

The function latches feedback position triggered by the index signal (Z-phase) or EXT-PROBE1. If the function is enabled during the usage of absolute encoder, error occurs. When the operation mode is homing mode, the touch probe function is disabled. Do not set rising edge and falling edge at the same time.

Related objects for touch probe function are listed in Table 3.2.9.1.

Table 3.2.9.1

Index	Sub-Index	Name	Data type	Access	PDO	Valid value	Unit
60B8h	00h	Touch probe function	U16	rw	Y	0 ~ 65535	-
60B9h	00h	Touch probe status	U16	ro	Y	0 ~ 65535	-
60BAh	00h	Touch probe 1 positive edge	I32	ro	Y	-2147483648 ~ 2147483647	inc
60BBh	00h	Touch probe 1 negative edge	I32	ro	Y	-2147483648 ~ 2147483647	inc
60BCh	00h	Touch probe 2 positive edge	I32	ro	Y	-2147483648 ~ 2147483647	inc

■ Example of touch probe 1 triggering first event

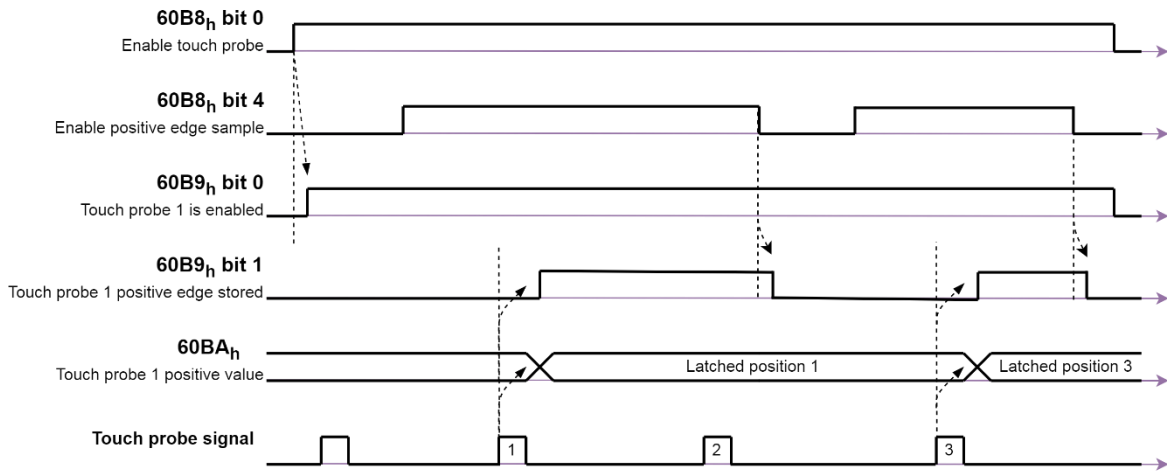


Figure 3.2.9.1

Table 3.2.9.2

#	Value	Description
(1)	60B8h bit 0 = 1 60B8h bit 1 = 0 60B8h bit 4 = 1	Enable touch probe 1. Trigger first event. Configure and enable touch probe 1 positive edge.
(2)	→ 60B9h bit 0 = 1	Status "Touch probe 1 enables" is set.
(3)		There is a positive edge in external touch probe signal.
(4)	→ 60B9h bit 1 = 1 → 60BAh	Status "Touch probe 1 positive edge stored" is set. Touch probe position 1 positive value is stored.
(5)	60B8h bit 4 = 0	Positive edge sample is disabled.
(6)	→ 60B9h bit 1 = 0 → 60BAh	Status "Touch probe 1 positive edge stored" is reset. Touch probe position 1 positive value is not changed.
(7)	60B8h bit 4 = 1	Positive edge sample is enabled.
(8)		There is a positive edge in external touch probe signal.
(9)	→ 60B9h bit 1 = 1 → 60BAh	Status "Touch probe 1 positive edge stored" is set. Touch probe position 1 positive value is stored.
(10)	→ 60B8h bit 0 = 0	Touch probe 1 is disabled.
(11)	→ 60B9h bit 0 and bit 1 = 0	Status bits are reset.

■ Example of touch probe 1 continuous mode

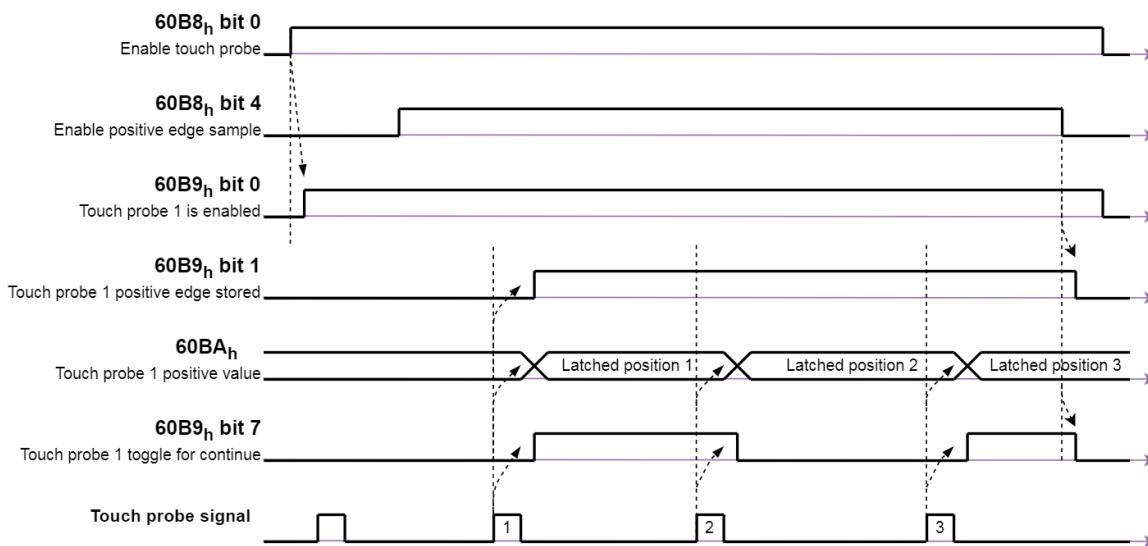


Figure 3.2.9.2

Table 3.2.9.3

#	Value	Description
(1)	60B8h bit 0 = 1 60B8h bit 1 = 1 60B8h bit 4 = 1	Enable touch probe 1. Continuous state. Configure and enable touch probe 1 positive edge.
(2)	→ 60B9h bit 0 = 1	Status "Touch probe 1 enables" is set.
(3)		There is a positive edge in external touch probe signal.
(4)	→ 60B9h bit 1 = 1 → 60B9h bit 7 = 1 → 60BAh	Status "Touch probe 1 positive edge stored" is set. Touch probe 1 positive edge is updated. Touch probe position 1 positive value is stored.
(5)		There is a positive edge in external touch probe signal.
(6)	→ 60B9h bit 7 = 0 → 60BAh	Touch probe 1 positive edge is updated. Touch probe position 1 positive value is stored.
(7)		There is a positive edge in external touch probe signal.
(8)	→ 60B9h bit 7 = 0 → 60BAh	Touch probe 1 positive edge is updated. Touch probe position 1 positive value is stored.
(9)	60B8h bit 4 = 0	Positive edge sample is disabled.
(10)	→ 60B9h bit 1 = 0 → 60B9h bit 7 = 0 → 60BAh	Status "Touch probe 1 positive edge stored" is reset. Continuous latch status is reset. Touch probe position 1 positive value is not changed.
(11)	→ 60B8h bit 0 = 0	Touch probe 1 is disabled.
(12)	→ 60B9h bit 0 = 0	Status bit is reset.

3.3 Manufacturer specific profile area

Table 3.3.1

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit																																																			
2000h 2FFFh	00h	The 2000h series objects are from servo Pt parameters. Please refer to "E1 Series Servo Drive User Manual" and "E2 Series Servo Drive User Manual" for more information. The mapping relationship between servo Pt parameter numbers and object indexes is as follows: Object index = 2000h + servo Pt parameter number Example: For servo drive's parameter Pt20E, its corresponding object is 220Eh.																																																									
3000h	00h	Motor type	U16	ro	-	All	0 ~ 2	-																																																			
		Motor type used with the drive 0: Linear motor (LM) 1: Direct drive motor / Torque motor (DM / TM) 2: AC servo motor (AC)																																																									
3001h	00h	Inner encoder resolution	I32	ro	-	All	-2147483648 ~ 2147483647	-																																																			
		Encoder resolution for internal loop																																																									
3002h 3055h	N/A	The objects in this section are not supported. Do not operate them.																																																									
3056h	00h	Software state[12]	U16	ro	-	All	0 ~ 0xFFFF	-																																																			
		Software state table. The state corresponding to each bit is described as follows.																																																									
		<table border="1"> <thead> <tr> <th>Bit</th> <th>State Name</th> <th>State Definition</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Reserved</td> <td>N/A</td> </tr> <tr> <td>1</td> <td>Reserved</td> <td>N/A</td> </tr> <tr> <td>2</td> <td>Reserved</td> <td>N/A</td> </tr> <tr> <td>3</td> <td>Homing state</td> <td>0: Homing not executed 1: Homing in process</td> </tr> <tr> <td>4</td> <td>Position trigger function state</td> <td>0: Position trigger function not enabled 1: Position trigger function enabled</td> </tr> <tr> <td>5</td> <td>Communication state of gantry control system</td> <td>0: No communication for gantry control system 1: Normal communication for gantry control system</td> </tr> <tr> <td>6</td> <td>Motor power state of gantry yaw axis</td> <td>0: Motor without power supply for gantry yaw axis 1: Motor with power supply for gantry yaw axis</td> </tr> <tr> <td>7</td> <td>Alarm state of gantry yaw axis</td> <td>0: No alarm in gantry yaw axis 1: An alarm occurs in in gantry yaw axis</td> </tr> <tr> <td>8</td> <td>Activated state of gantry control system</td> <td>0: Gantry control system not activated 1: Gantry control system activated</td> </tr> <tr> <td>9</td> <td>Homing state of gantry yaw axis</td> <td>0: Gantry yaw axis homing not completed 1: Gantry yaw axis homing completed</td> </tr> <tr> <td>10</td> <td>Near home sensor state of gantry yaw axis</td> <td>0: Gantry yaw axis not in the range of near home sensor 1: Gantry yaw axis in the range of near home sensor</td> </tr> <tr> <td>11</td> <td>Regulation state of gantry yaw axis</td> <td>0: Gantry yaw axis regulation not completed 1: Gantry yaw axis regulation completed</td> </tr> <tr> <td>12</td> <td>In-position state of gantry yaw axis</td> <td>0: Gantry yaw axis not in-position 1: Gantry yaw axis in-position</td> </tr> <tr> <td>13</td> <td>Ready state of gantry yaw axis</td> <td>0: Drive not ready for gantry yaw axis 1: Drive ready and STO not triggered for gantry yaw axis</td> </tr> <tr> <td>14</td> <td>Reserved</td> <td>N/A</td> </tr> <tr> <td>15</td> <td>Reserved</td> <td>N/A</td> </tr> </tbody> </table>	Bit	State Name	State Definition	0	Reserved	N/A	1	Reserved	N/A	2	Reserved	N/A	3	Homing state	0: Homing not executed 1: Homing in process	4	Position trigger function state	0: Position trigger function not enabled 1: Position trigger function enabled	5	Communication state of gantry control system	0: No communication for gantry control system 1: Normal communication for gantry control system	6	Motor power state of gantry yaw axis	0: Motor without power supply for gantry yaw axis 1: Motor with power supply for gantry yaw axis	7	Alarm state of gantry yaw axis	0: No alarm in gantry yaw axis 1: An alarm occurs in in gantry yaw axis	8	Activated state of gantry control system	0: Gantry control system not activated 1: Gantry control system activated	9	Homing state of gantry yaw axis	0: Gantry yaw axis homing not completed 1: Gantry yaw axis homing completed	10	Near home sensor state of gantry yaw axis	0: Gantry yaw axis not in the range of near home sensor 1: Gantry yaw axis in the range of near home sensor	11	Regulation state of gantry yaw axis	0: Gantry yaw axis regulation not completed 1: Gantry yaw axis regulation completed	12	In-position state of gantry yaw axis	0: Gantry yaw axis not in-position 1: Gantry yaw axis in-position	13	Ready state of gantry yaw axis	0: Drive not ready for gantry yaw axis 1: Drive ready and STO not triggered for gantry yaw axis	14	Reserved	N/A	15	Reserved	N/A						
		Bit	State Name	State Definition																																																							
		0	Reserved	N/A																																																							
		1	Reserved	N/A																																																							
		2	Reserved	N/A																																																							
		3	Homing state	0: Homing not executed 1: Homing in process																																																							
		4	Position trigger function state	0: Position trigger function not enabled 1: Position trigger function enabled																																																							
		5	Communication state of gantry control system	0: No communication for gantry control system 1: Normal communication for gantry control system																																																							
		6	Motor power state of gantry yaw axis	0: Motor without power supply for gantry yaw axis 1: Motor with power supply for gantry yaw axis																																																							
		7	Alarm state of gantry yaw axis	0: No alarm in gantry yaw axis 1: An alarm occurs in in gantry yaw axis																																																							
		8	Activated state of gantry control system	0: Gantry control system not activated 1: Gantry control system activated																																																							
		9	Homing state of gantry yaw axis	0: Gantry yaw axis homing not completed 1: Gantry yaw axis homing completed																																																							
		10	Near home sensor state of gantry yaw axis	0: Gantry yaw axis not in the range of near home sensor 1: Gantry yaw axis in the range of near home sensor																																																							
		11	Regulation state of gantry yaw axis	0: Gantry yaw axis regulation not completed 1: Gantry yaw axis regulation completed																																																							
		12	In-position state of gantry yaw axis	0: Gantry yaw axis not in-position 1: Gantry yaw axis in-position																																																							
13	Ready state of gantry yaw axis	0: Drive not ready for gantry yaw axis 1: Drive ready and STO not triggered for gantry yaw axis																																																									
14	Reserved	N/A																																																									
15	Reserved	N/A																																																									
3057h	00h	Application mode of gantry system	U16	rw	-	All	1, 2, 11	-																																																			
		Application mode setting of gantry control system. The applicable modes are as follows. Please refer to "E Series Servo Drive Gantry Control System User Manual" for detailed settings. 1: Ativate gantry control system 2: Deactivate gantry control system 11: Execute yaw axis regulation																																																									
3058h	00h	Yaw target position	I32	rw	Y	All	-2147483648 ~ 2147483647	inc																																																			
		Target position for gantry yaw axis																																																									
3059h	00h	Yaw feedback position	I32	ro	Y	All	-2147483648 ~ 2147483647	inc																																																			
		Feedback position for gantry yaw axis																																																									

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit																																																	
3060h	00h	Use touch probe enable error map	U16	rw	-	pp pv tq csp csv cst	0 ~ 1	-																																																	
		Enable error map table with Touch probe function. Please refer to section 8.12 in "E1 Series Servo Drive User Manual" and section 8.12 in "E2 Series Servo Drive User Manual" for error map function. 0: Error map table will not be affected after Touch probe function is executed. 1: Error map table will be updated after Touch probe function is executed.																																																							
3061h	00h	Enable position trigger function	U16	rw	-	All	0 ~ 1	-																																																	
		Enable position trigger function. Please refer to section 8.13 in "E1 Series Servo Drive User Manual" and section 8.13 in "E2 Series Servo Drive User Manual" for position trigger function. 0: Disable position trigger function 1: Enable position trigger function																																																							
3062h	00h	Overtravel stop mode selection	U16	rw	-	All	0 ~ 1	-																																																	
		Parameter setup of overtravel stop 0: When overtravel happens, the motor stops according to the current setting of object 6085h (quick stop deceleration), and the original quick stop deceleration of the motion will not be affected. 1: When overtravel happens, the motor stops according to the current setting of object 6085h (quick stop deceleration), and the original quick stop deceleration of the motion will be modified.																																																							
3100h 3104h	N/A	This section is about alarm state table, and it is not supported yet. Use object 4095h / 603Fh (error code) to check the contents.																																																							
3110h	00h	Drive warning events 1	U16	ro	-	All	0 ~ 0xFFFF	-																																																	
		Warning state table 1. The warning corresponding to each bit is described as follows. It is recommended to replace this object with the object 4096h (warning code). <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Bit</th> <th>Warning No.</th> <th>Warning Name</th> </tr> </thead> <tbody> <tr><td>0</td><td>AL.900</td><td>Position deviation overflow</td></tr> <tr><td>1</td><td>AL.901</td><td><Not supported></td></tr> <tr><td>2</td><td>AL.910</td><td>Overload</td></tr> <tr><td>3</td><td>AL.911</td><td><Not supported></td></tr> <tr><td>4</td><td>AL.912</td><td><Not supported></td></tr> <tr><td>5</td><td>AL.920</td><td><Not supported></td></tr> <tr><td>6</td><td>AL.921</td><td><Not supported></td></tr> <tr><td>7</td><td>AL.923</td><td>Internal fan stop</td></tr> <tr><td>8</td><td>AL.930</td><td>Encoder battery malfunction</td></tr> <tr><td>9</td><td>AL.941</td><td>Change of parameters and functions with save and restart requirement</td></tr> <tr><td>10</td><td>AL.971</td><td>Undervoltage</td></tr> <tr><td>11</td><td>AL.9A0</td><td>Overtravel detected when servo ON (P-OT or N-OT signal is received.)</td></tr> <tr><td>12</td><td>AL.9A1</td><td>P-OT signal is received.</td></tr> <tr><td>13</td><td>AL.9A2</td><td>N-OT signal is received.</td></tr> <tr><td>14</td><td>AL.9AA</td><td><Not supported></td></tr> <tr><td>15</td><td>AL.9Ab</td><td><Not supported></td></tr> </tbody> </table> When the value of the bit is 1, the warning occurs.							Bit	Warning No.	Warning Name	0	AL.900	Position deviation overflow	1	AL.901	<Not supported>	2	AL.910	Overload	3	AL.911	<Not supported>	4	AL.912	<Not supported>	5	AL.920	<Not supported>	6	AL.921	<Not supported>	7	AL.923	Internal fan stop	8	AL.930	Encoder battery malfunction	9	AL.941	Change of parameters and functions with save and restart requirement	10	AL.971	Undervoltage	11	AL.9A0	Overtravel detected when servo ON (P-OT or N-OT signal is received.)	12	AL.9A1	P-OT signal is received.	13	AL.9A2	N-OT signal is received.	14	AL.9AA	<Not supported>	15
Bit	Warning No.	Warning Name																																																							
0	AL.900	Position deviation overflow																																																							
1	AL.901	<Not supported>																																																							
2	AL.910	Overload																																																							
3	AL.911	<Not supported>																																																							
4	AL.912	<Not supported>																																																							
5	AL.920	<Not supported>																																																							
6	AL.921	<Not supported>																																																							
7	AL.923	Internal fan stop																																																							
8	AL.930	Encoder battery malfunction																																																							
9	AL.941	Change of parameters and functions with save and restart requirement																																																							
10	AL.971	Undervoltage																																																							
11	AL.9A0	Overtravel detected when servo ON (P-OT or N-OT signal is received.)																																																							
12	AL.9A1	P-OT signal is received.																																																							
13	AL.9A2	N-OT signal is received.																																																							
14	AL.9AA	<Not supported>																																																							
15	AL.9Ab	<Not supported>																																																							
3111h	00h	Drive warning events 2	U16	ro	-	All	0 ~ 0xFFFF	-																																																	
		Warning state table 2. The warning corresponding to each bit is described as follows. It is recommended to replace this object with the object 4096h (warning code). <table border="1" style="width: 100%; border-collapse: collapse;"> <thead> <tr> <th>Bit</th> <th>Warning No.</th> <th>Warning Name</th> </tr> </thead> <tbody> <tr><td>0</td><td>AL.9F0</td><td>Servo voltage too big</td></tr> <tr><td>1</td><td>AL.943</td><td>Fieldbus synchronous cycle time warning</td></tr> <tr><td>2</td><td>AL.944</td><td>System warning</td></tr> <tr><td>3</td><td>AL.945</td><td>Torque limit warning</td></tr> <tr><td>4</td><td>AL.946</td><td>Encoder communication warning</td></tr> <tr><td>5</td><td>AL.947</td><td>Multi-motion malfunction warning</td></tr> <tr><td>6</td><td>AL.924</td><td>I²T</td></tr> </tbody> </table> When the value of the bit is 1, the warning occurs.							Bit	Warning No.	Warning Name	0	AL.9F0	Servo voltage too big	1	AL.943	Fieldbus synchronous cycle time warning	2	AL.944	System warning	3	AL.945	Torque limit warning	4	AL.946	Encoder communication warning	5	AL.947	Multi-motion malfunction warning	6	AL.924	I ² T																									
Bit	Warning No.	Warning Name																																																							
0	AL.9F0	Servo voltage too big																																																							
1	AL.943	Fieldbus synchronous cycle time warning																																																							
2	AL.944	System warning																																																							
3	AL.945	Torque limit warning																																																							
4	AL.946	Encoder communication warning																																																							
5	AL.947	Multi-motion malfunction warning																																																							
6	AL.924	I ² T																																																							

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit														
3200h	00h	Absolute encoder initialization	I32	rw	Y	All	0 ~ 1	-														
		Initialize absolute encoder. When it is set to 1, the multi-turn data of motor will be cleared. Keep servo off during the execution. The object will set the value according to the execution state:																				
		<table border="1"> <thead> <tr> <th>Value</th> <th>Definition</th> </tr> </thead> <tbody> <tr> <td>0</td> <td>Not in operation</td> </tr> <tr> <td>1</td> <td>Send the command of clearing multi-turn data</td> </tr> <tr> <td>2</td> <td>The command of clearing multi-turn data is being executed</td> </tr> <tr> <td>4</td> <td>The command of clearing multi-turn data is successfully executed</td> </tr> <tr> <td>16</td> <td>Do not send the command of clearing multi-turn data because the motor is enabled</td> </tr> <tr> <td>32</td> <td>Fail to execute the command of clearing multi-turn data</td> </tr> </tbody> </table>							Value	Definition	0	Not in operation	1	Send the command of clearing multi-turn data	2	The command of clearing multi-turn data is being executed	4	The command of clearing multi-turn data is successfully executed	16	Do not send the command of clearing multi-turn data because the motor is enabled	32	Fail to execute the command of clearing multi-turn data
		Value	Definition																			
		0	Not in operation																			
		1	Send the command of clearing multi-turn data																			
		2	The command of clearing multi-turn data is being executed																			
4	The command of clearing multi-turn data is successfully executed																					
16	Do not send the command of clearing multi-turn data because the motor is enabled																					
32	Fail to execute the command of clearing multi-turn data																					
3201h	00h	General object i1	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (1)																				
3202h	00h	General object i2	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (2)																				
3203h	00h	General object i3	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (3)																				
3204h	00h	General object i4	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (4)																				
3205h	00h	General object i5	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (5)																				
3206h	00h	General object i6	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (6)																				
3207h	00h	General object i7	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (7)																				
3208h	00h	General object i8	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (8)																				
3209h	00h	General object i9	I32	rw	Y	All	-2147483648 ~ 2147483647	-														
		Self-defined object with data type of DINT (9)																				
3210h	00h	General object f0	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-														
		Self-defined object with data type of REAL (0)																				
3211h	00h	General object f1	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-														
		Self-defined object with data type of REAL (1)																				
3212h	00h	General object f2	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-														
		Self-defined object with data type of REAL (2)																				
3213h	00h	General object f3	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-														
		Self-defined object with data type of REAL (3)																				
3214h	00h	General object f4	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-														
		Self-defined object with data type of REAL (4)																				
3215h	00h	Reset drive	I16	rw	Y	All	0 ~ 1	-														
		Reset the drive. When it is set to 1, the drive will be reset. After it is done, the object will be automatically set to 0.																				
3216h	00h	Send parameter to flash	-	rw	-	All	0 ~ 1	-														
		Save parameters to drive. When it is set to 1, the current drive parameters will be saved. After it is done, the object will be automatically set to 0.																				
4000h 4FFFh	00h	The 4000h series objects are from servo Ut parameters. Please refer to "E1 Series Servo Drive User Manual" and "E2 Series Servo Drive User Manual" for more information. The mapping relationship between servo Ut parameter numbers and object indexes is as follows: Object index = 4000h + servo Ut parameter number Example: For servo drive's parameter Ut095, its corresponding object is 4095h.																				

3.3.1 Absolute encoder initialization

When using a rotary absolute encoder, it is necessary to clear multi-turn data at the first start up after installing the battery. There are two types of data in a rotary absolute encoder, single-turn data and multi-turn data. The single-turn data shows the position of the motor’s rotation within a single turn. The multi-turn data counts the number of the turns, and the backup is stored by the battery.

The position information of the drive is based on the following formulas, where M is multi-turn data and S is single-turn data.

$$6063h \text{ (position actual internal value)} = M \times \text{encoder resolution} + S$$

$$6064h \text{ (position actual value)} = 6063h \times \text{electronic gear} + 607Ch \text{ (home offset)}$$

Keep servo off until the procedure of clearing data is finished. After that, power cycle the drive.

■ **The procedure of clearing multi-turn data via EtherCAT**

- Step 1. Disable the motor.
- Step 2. Set 3200h to 1.
- Step 3. Wait until 3200h changes to 4 (the command is successfully executed).
- Step 4. Reset the drive (set 3215h to 1).

■ **Definition of object 3200h**

Table 3.3.1.1

Value	Definition
0	Not in operation
1	Send the command of clearing multi-turn data
2	The command of clearing multi-turn data is being executed
4	The command of clearing multi-turn data is successfully executed
16	Do not send the command of clearing multi-turn data because the motor is enabled
32	Fail to execute the command of clearing multi-turn data

3.4 Object dictionary list

Table 3.4.1

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit
1000h	00h	Device type	U32	ro	-	All	0x00020192	-
1001h	00h	Error register	U8	ro	-	All	0x0 ~ 0xFF	-
1010h	-	Store parameters	-	-	-	-	-	-
	00h	Number of entries	U8	ro	-	All	1	-
	01h	Save all parameters	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
1018h	-	Identity object	-	-	-	-	-	-
	00h	Number of entries	U8	ro	-	All	4	-
	01h	Vendor ID	U32	ro	-	All	0xAAAA	-
	02h	Product code	U32	ro	-	All	0x05	-
	03h	Revision number	U32	ro	-	All	0 ~ 4294967295	-
10F1h	04h	Serial number	U32	ro	-	All	0 ~ 4294967295	-
	-	Error settings	-	-	-	-	-	-
	00h	Number of entries	U8	ro	-	All	1	-
1600h	02h	Sync error counter limit	U16	rw	-	All	0 ~ 15	-
	-	1 st RxPDO mapping	-	-	-	-	-	-
	00h	Number of entries	U8	rw	-	All	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	02h	Mapping entry 2	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	03h	Mapping entry 3	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	06h	Mapping entry 6	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
1601h	07h	Mapping entry 7	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	08h	Mapping entry 8	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	-	2 nd RxPDO mapping	-	-	-	-	-	-
	00h	Number of entries	U8	rw	-	All	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	02h	Mapping entry 2	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	03h	Mapping entry 3	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
1602h	06h	Mapping entry 6	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	07h	Mapping entry 7	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	08h	Mapping entry 8	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	-	3 rd RxPDO mapping	-	-	-	-	-	-
	00h	Number of entries	U8	rw	-	All	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	02h	Mapping entry 2	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
1602h	03h	Mapping entry 3	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit
	06h	Mapping entry 6	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	07h	Mapping entry 7	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	08h	Mapping entry 8	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
1603h	-	4 th RxPDO mapping	-	-	-	-	-	-
	00h	Number of entries	U8	rw	-	All	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	02h	Mapping entry 2	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	03h	Mapping entry 3	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	06h	Mapping entry 6	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	07h	Mapping entry 7	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	08h	Mapping entry 8	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
1A00h	-	1 st TxPDO mapping	-	-	-	-	-	-
	00h	Number of entries	U8	rw	-	All	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	02h	Mapping entry 2	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	03h	Mapping entry 3	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	06h	Mapping entry 6	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	07h	Mapping entry 7	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
08h	Mapping entry 8	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-	
1A01h	-	2 nd TxPDO mapping	-	-	-	-	-	-
	00h	Number of entries	U8	rw	-	All	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	02h	Mapping entry 2	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	03h	Mapping entry 3	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	06h	Mapping entry 6	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	07h	Mapping entry 7	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
08h	Mapping entry 8	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-	
1A02h	-	3 rd TxPDO mapping	-	-	-	-	-	-
	00h	Number of entries	U8	rw	-	All	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	02h	Mapping entry 2	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	03h	Mapping entry 3	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	06h	Mapping entry 6	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	07h	Mapping entry 7	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
08h	Mapping entry 8	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-	
1A03h	-	4 th TxPDO mapping	-	-	-	-	-	-
	00h	Number of entries	U8	rw	-	All	0 ~ 8	-
	01h	Mapping entry 1	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit
	02h	Mapping entry 2	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	03h	Mapping entry 3	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	04h	Mapping entry 4	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	05h	Mapping entry 5	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	06h	Mapping entry 6	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	07h	Mapping entry 7	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
	08h	Mapping entry 8	U32	rw	-	All	0x0 ~ 0xFFFFFFFF	-
1C00h	-	Sync manager communication type	-	-	-	-	-	-
	00h	Number of entries	U8	ro	-	All	4	-
	01h	Communication type sync manager 0	U8	ro	-	All	1	-
	02h	Communication type sync manager 1	U8	ro	-	All	2	-
	03h	Communication type sync manager 2	U8	ro	-	All	3	-
	04h	Communication type sync manager 3	U8	ro	-	All	4	-
1C12h	-	Sync manager 2 PDO assignment	-	-	-	-	-	-
	00h	Number of assigned PDOs	U8	rw	-	All	0 ~ 1	-
	01h	Index of assigned RxPDO 1	U16	rw	-	All	0x1600 ~ 0x1603	-
1C13h	-	Sync manager 3 PDO assignment	-	-	-	-	-	-
	00h	Number of assigned PDOs	U8	rw	-	All	0 ~ 1	-
	01h	Index of assigned TxPDO 1	U16	rw	-	All	0x1A00 ~ 0x1A03	-
1C32h	-	Sync manager 2 synchronization	-	-	-	-	-	-
	00h	Number of synchronization parameters	U8	ro	-	All	12	-
	01h	Synchronization type	U16	ro	-	All	0 ~ 2	-
	02h	Cycle time	U32	ro	-	All	250000 ~ 4000000	ns
	04h	Synchronization types supported	U16	ro	-	All	5	-
	05h	Minimum cycle time	U32	ro	-	All	187500	ns
	06h	Calc and copy time	U32	ro	-	All	31250	ns
	09h	Delay time	U32	ro	-	All	31250	ns
	0Ch	Cycle time too small	U16	to	-	All	0	-
1C33h	-	Sync manager 3 synchronization	-	-	-	-	-	-
	00h	Number of synchronization parameters	U8	ro	-	All	10	-
	01h	Synchronization type	U16	ro	-	All	0 ~ 2	-
	02h	Cycle time	U32	ro	-	All	250000 ~ 4000000	ns
	04h	Synchronization types supported	U16	ro	-	All	5	-
	05h	Minimum cycle time	U32	ro	-	All	187500	ns
	06h	Calc and copy time	U32	ro	-	All	31250	ns
	09h	Delay time	U32	ro	-	All	-	ns
	0Ch	Cycle time too small	U16	ro	-	All	0	-
2XXXh	00h	Pt parameters, refer to section 3.3 for details.						
3000h	00h	Motor type	U16	ro	-	All	0 ~ 2	-
3001h	00h	Inner encoder resolution	I32	ro	-	All	-2147483648 ~ 2147483647	-
3056h	00h	Software state[12]	U16	ro	-	All	0 ~ 0xFFFF	-
3057h	00h	Application mode of gantry system	U16	rw	-	All	1, 2, 11	-
3058h	00h	Yaw target position	I32	rw	Y	All	-2147483648 ~ 2147483647	inc
3059h	00h	Yaw feedback position	I32	ro	Y	All	-2147483648 ~ 2147483647	inc

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit
3060h	00h	Use touch probe enable error map	U16	rw	-	pp pv tq csp csv cst	0 ~ 1	-
3061h	00h	Enable position trigger function	U16	rw	-	All	0 ~ 1	-
3062h	00h	Overtravel stop mode selection	U16	rw	-	All	0 ~ 1	-
3110h	00h	Drive warning events 1	U16	ro	-	All	0 ~ 0xFFFF	-
3111h	00h	Drive warning events 2	U16	ro	-	All	0 ~ 0xFFFF	-
3200h	00h	Absolute encoder initialization	I32	rw	Y	All	0 ~ 1	-
3201h	00h	General object i1	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3202h	00h	General object i2	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3203h	00h	General object i3	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3204h	00h	General object i4	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3205h	00h	General object i5	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3206h	00h	General object i6	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3207h	00h	General object i7	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3208h	00h	General object i8	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3209h	00h	General object i9	I32	rw	Y	All	-2147483648 ~ 2147483647	-
3210h	00h	General object f0	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-
3211h	00h	General object f1	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-
3212h	00h	General object f2	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-
3213h	00h	General object f3	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-
3214h	00h	General object f4	F32	rw	Y	All	-3.40282e+38 ~ 3.40282e+38	-
3215h	00h	Reset drive	I16	rw	Y	All	0 ~ 1	-
3216h	00h	Send parameter to flash	-	rw	-	All	0 ~ 1	-
4XXXh	00h	Ut parameters, refer to section 3.3 for details.						
603Fh	00h	Error code	U16	ro	Y	All	0x0 ~ 0xFFFF	-
6040h	00h	Controlword	U16	rw	Y	All	0x0 ~ 0xFFFF	-
6041h	00h	Statusword	U16	ro	Y	All	0x0 ~ 0xFFFF	-
605Ah	00h	Quick stop option code	I16	rw	-	All	2	-
605Bh	00h	Shutdown option code	I16	rw	-	All	0	-
605Ch	00h	Disable operation code	I16	rw	-	All	0	-
605Dh	00h	Halt option code	I16	rw	-	pp	1, 2	-
						pv tq hm	2	
605Eh	00h	Fault reaction option code	I16	rw	-	All	0 ~ 2	-
6060h	00h	Modes of operation	I8	rw	Y	All	0 ~ 10	-
6061h	00h	Modes of operation display	I8	ro	Y	All	0 ~ 10	-
6062h	00h	Position demand value	I32	ro	Y	pp hm csp	-2147483648 ~ 2147483647	inc
6063h	00h	Position actual internal value	I32	ro	Y	All	-2147483648 ~ 2147483647	count
6064h	00h	Position actual value	I32	ro	Y	All	-2147483648 ~ 2147483647	inc
6065h	00h	Following error window	U32	rw	Y	pp csp	0 ~ 4294967295	inc
6066h	00h	Following error time out	U16	rw	Y	pp csp	0 ~ 65535	ms

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit
6067h	00h	Position window	U32	rw	Y	pp	0 ~ 4294967295	inc
6068h	00h	Position window time	U16	rw	Y	pp	0 ~ 65535	ms
606Bh	00h	Velocity demand value	I32	ro	Y	pv csv	-2147483648 ~ 2147483647	inc/s
606Ch	00h	Velocity actual value	I32	ro	Y	All	-2147483648 ~ 2147483647	inc/s
606Dh	00h	Velocity window	U16	rw	Y	pv	0 ~ 65535	inc/s
606Eh	00h	Velocity window time	U16	rw	Y	pv	0 ~ 65535	ms
6071h	00h	Target torque	I16	rw	Y	tq cst	-32768 ~ 32767	0.1%
6072h	00h	Max torque	U16	rw	Y	All	0 ~ 65535	0.1%
6074h	00h	Torque demand	I16	ro	Y	All	-32768 ~ 32767	0.1%
6075h	00h	Motor rated current	U32	ro	-	All	0 ~ 4294967295	mA
6076h	00h	Motor rated torque	U32	ro	-	All	0 ~ 4294967295	mNm
6077h	00h	Torque actual value	I16	ro	Y	All	-32768 ~ 32767	0.1%
607Ah	00h	Target position	I32	rw	Y	pp csp	-2147483648 ~ 2147483647	inc
607Ch	00h	Home offset	I32	rw	Y	All	-2147483648 ~ 2147483647	inc
607Dh	-	Software position limit (Not support)	-	-	-	-	-	-
607Fh	00h	Max profile velocity	U32	rw	Y	pp pv hm	0 ~ 4294967295	inc/s
6081h	00h	Profile velocity	U32	rw	Y	pp	0 ~ 4294967295	inc/s
6083h	00h	Profile acceleration	U32	rw	Y	pp pv	0 ~ 4294967295	inc/s ²
6084h	00h	Profile deceleration	U32	rw	Y	pp pv	0 ~ 4294967295	inc/s ²
6085h	00h	Quick stop deceleration	U32	rw	Y	pp pv hm csp csv	0 ~ 4294967295	inc/s ²
6087h	00h	Torque slope	U32	rw	Y	tq	0 ~ 4294967295	0.1%/s
6098h	00h	Homing method	I8	rw	Y	hm	-128 ~ 127	-
6099h	-	Homing speeds	-	-	-	-	-	-
	00h	Number of entries	U8	ro	-		2	-
	01h	Speed during search for switch	U32	rw	Y	hm	0 ~ 4294967295	inc/s
	02h	Speed during search for zero	U32	rw	Y		0 ~ 4294967295	inc/s
609Ah	00h	Homing acceleration	U32	rw	Y	hm	0 ~ 4294967295	inc/s ²
60B1h	00h	Velocity offset	I32	rw	Y	pp pv hm csp csv	-2147483648 ~ 2147483647	inc/s
60B2h	00h	Torque offset	I16	rw	Y	All	-32768 ~ 32767	0.1%
60B8h	00h	Touch probe function	U16	rw	Y	All	0 ~ 65535	-
60B9h	00h	Touch probe status	U16	ro	Y	All	0 ~ 65535	-
60BAh	00h	Touch probe 1 positive edge	I32	ro	Y	All	-2147483648 ~ 2147483647	inc
60BBh	00h	Touch probe 1 negative edge	I32	ro	Y	All	-2147483648 ~ 2147483647	inc
60BCh	00h	Touch probe 2 positive edge	I32	ro	Y	All	-2147483648 ~ 2147483647	inc
60C2h	-	Interpolation time period	-	-	-	-	-	-
	00h	Number of entries	U8	ro	-	csp csv cst	2	-
	01h	Interpolation time period value	U8	rw	-		0 ~ 255	-

Index	Sub-Index	Name	Data type	Access	PDO	Op Mode	Valid value	Unit
	02h	Interpolation time index	I8	rw	-		-128 ~ 63	-
60C5h	00h	Max acceleration	U32	rw	Y	pp hm pv	0 ~ 4294967295	inc/s ²
60C6h	00h	Max deceleration	U32	rw	Y	pp hm pv	0 ~ 4294967295	inc/s ²
60E0h	00h	Positive torque limit value	U16	rw	Y	All	0 ~ 65535	0.1%
60E1h	00h	Negative torque limit value	U16	rw	Y	All	0 ~ 65535	0.1%
60F4h	00h	Following error actual value	I32	ro	Y	pp hm csp	-2147483648 ~ 2147483647	inc
60FCh	00h	Position demand internal value	I32	ro	Y	pp hm csp	-2147483648 ~ 2147483647	count
60FDh	00h	Digital inputs	U32	ro	Y	All	0x0 ~ 0xFFFFFFFF	-
60FEh	-	Digital outputs	-	-	-	-	-	-
	00h	Number of entries	U8	ro	-	All	2	-
	01h	Physical outputs	U32	rw	Y		0x0 ~ 0xFFFFFFFF	-
	02h	Bit mask	U32	rw	Y		0x0 ~ 0xFFFFFFFF	-
60FFh	00h	Target velocity	I32	rw	Y	pv csv	-2147483648 ~ 2147483647	inc/s
6502h	00h	Supported drive modes	U32	ro	-	All	0x0 ~ 0xFFFFFFFF	-